


WOMO Lighting


Model number: WM2058

Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

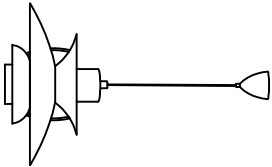


Steps of installation

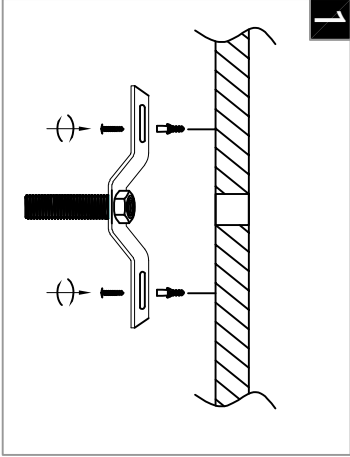


Attach the mounting plate to the ceiling with self-tapping screws.

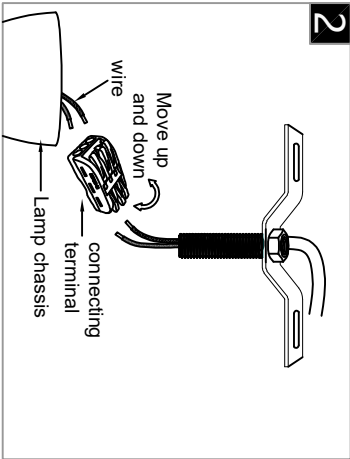

Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)

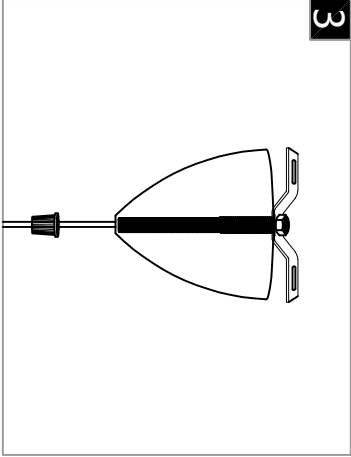

First, loosen the lockline buckle, then lift the top cover up to the ceiling, and finally tighten the lockline buckle.

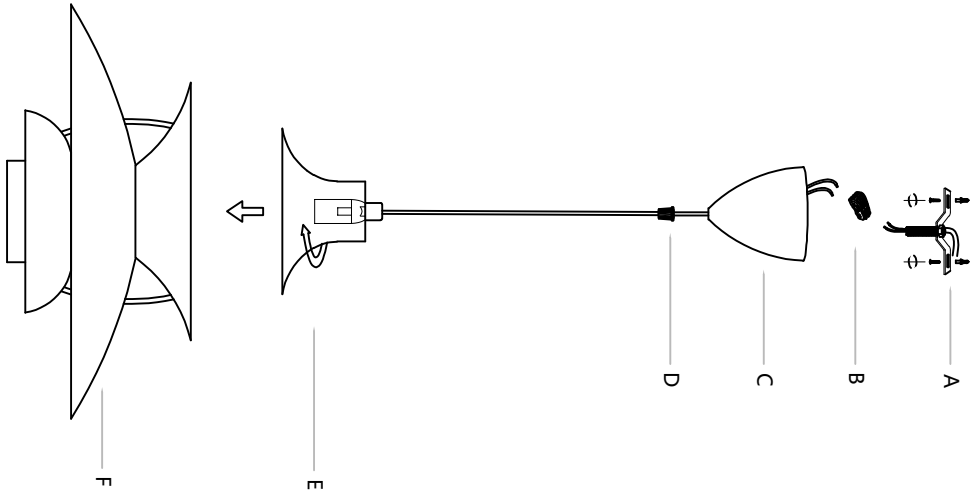

Turn the upper cover (E) clockwise onto the top surface of the lower lamp body (F). Next, fix the mounting plate (A) to the ceiling. Then, connect the wires on the ceiling and the wires of the top cover (C) to the junction box (B). Finally, align the top cover (C) with the screws on the mounting plate, and then tighten the lock wire clip (D).