


WOMO Lighting

Model number: WM2101-5


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

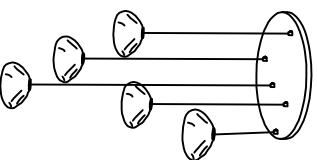


Product style diagram


Steps of installation

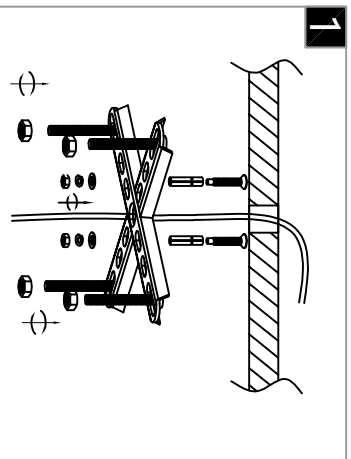


1 First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

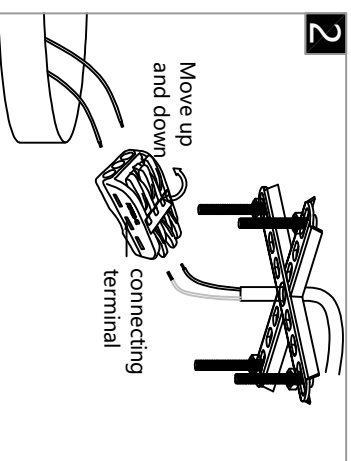

2 Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)

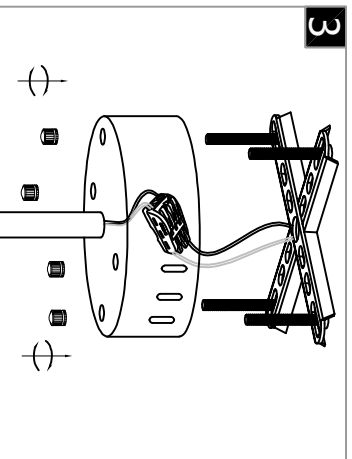

3 Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

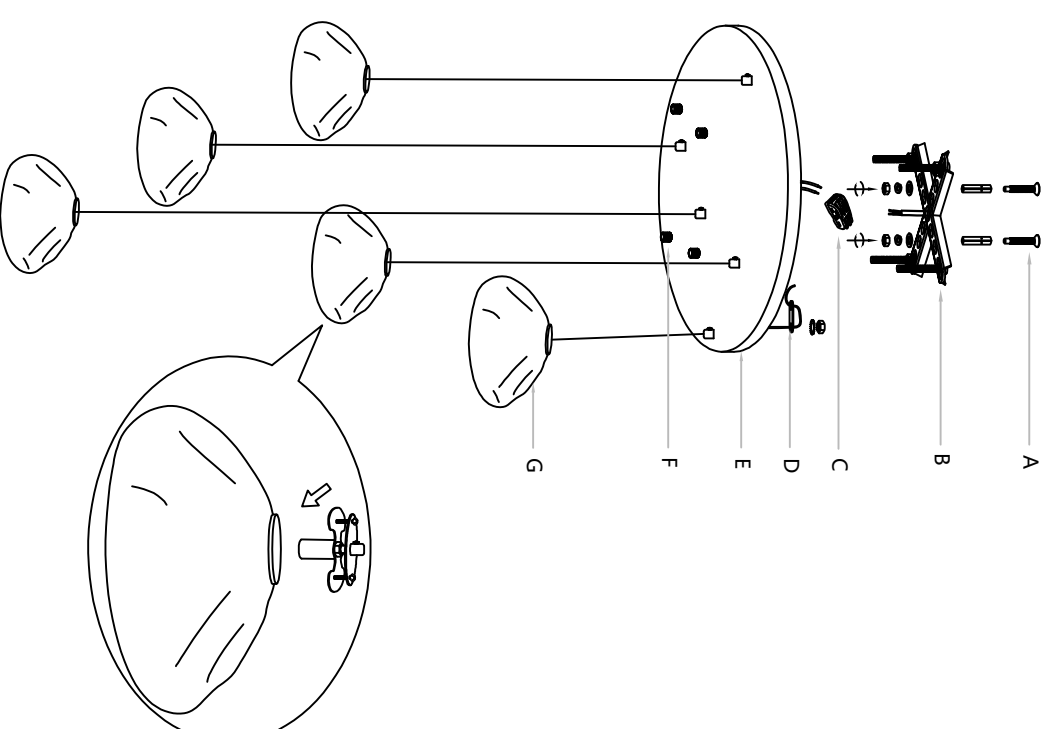

First, adjust the length of the wire with the lamp head, then install it onto the top cover (E). Next, use the eight-shaped clamp (D) to press the wire down, then use the nut to lock it in place. Insert the expansion screw (A) into the ceiling, then fix the mounting plate (B) onto the expansion screw (A). Then tighten the screws. Next, connect the reserved wires on the top cover (E) and the ceiling to the terminal block. Then align the holes on the bottom of the top cover (E) with the screws on the mounting plate (B), and lock them with the flower-shaped nut (F). Finally, put the glass lampshade (G) over the circular piece of the lamp head, and then tighten the screws above the lamp head.