
INSTALLATION GUIDE - WM1007

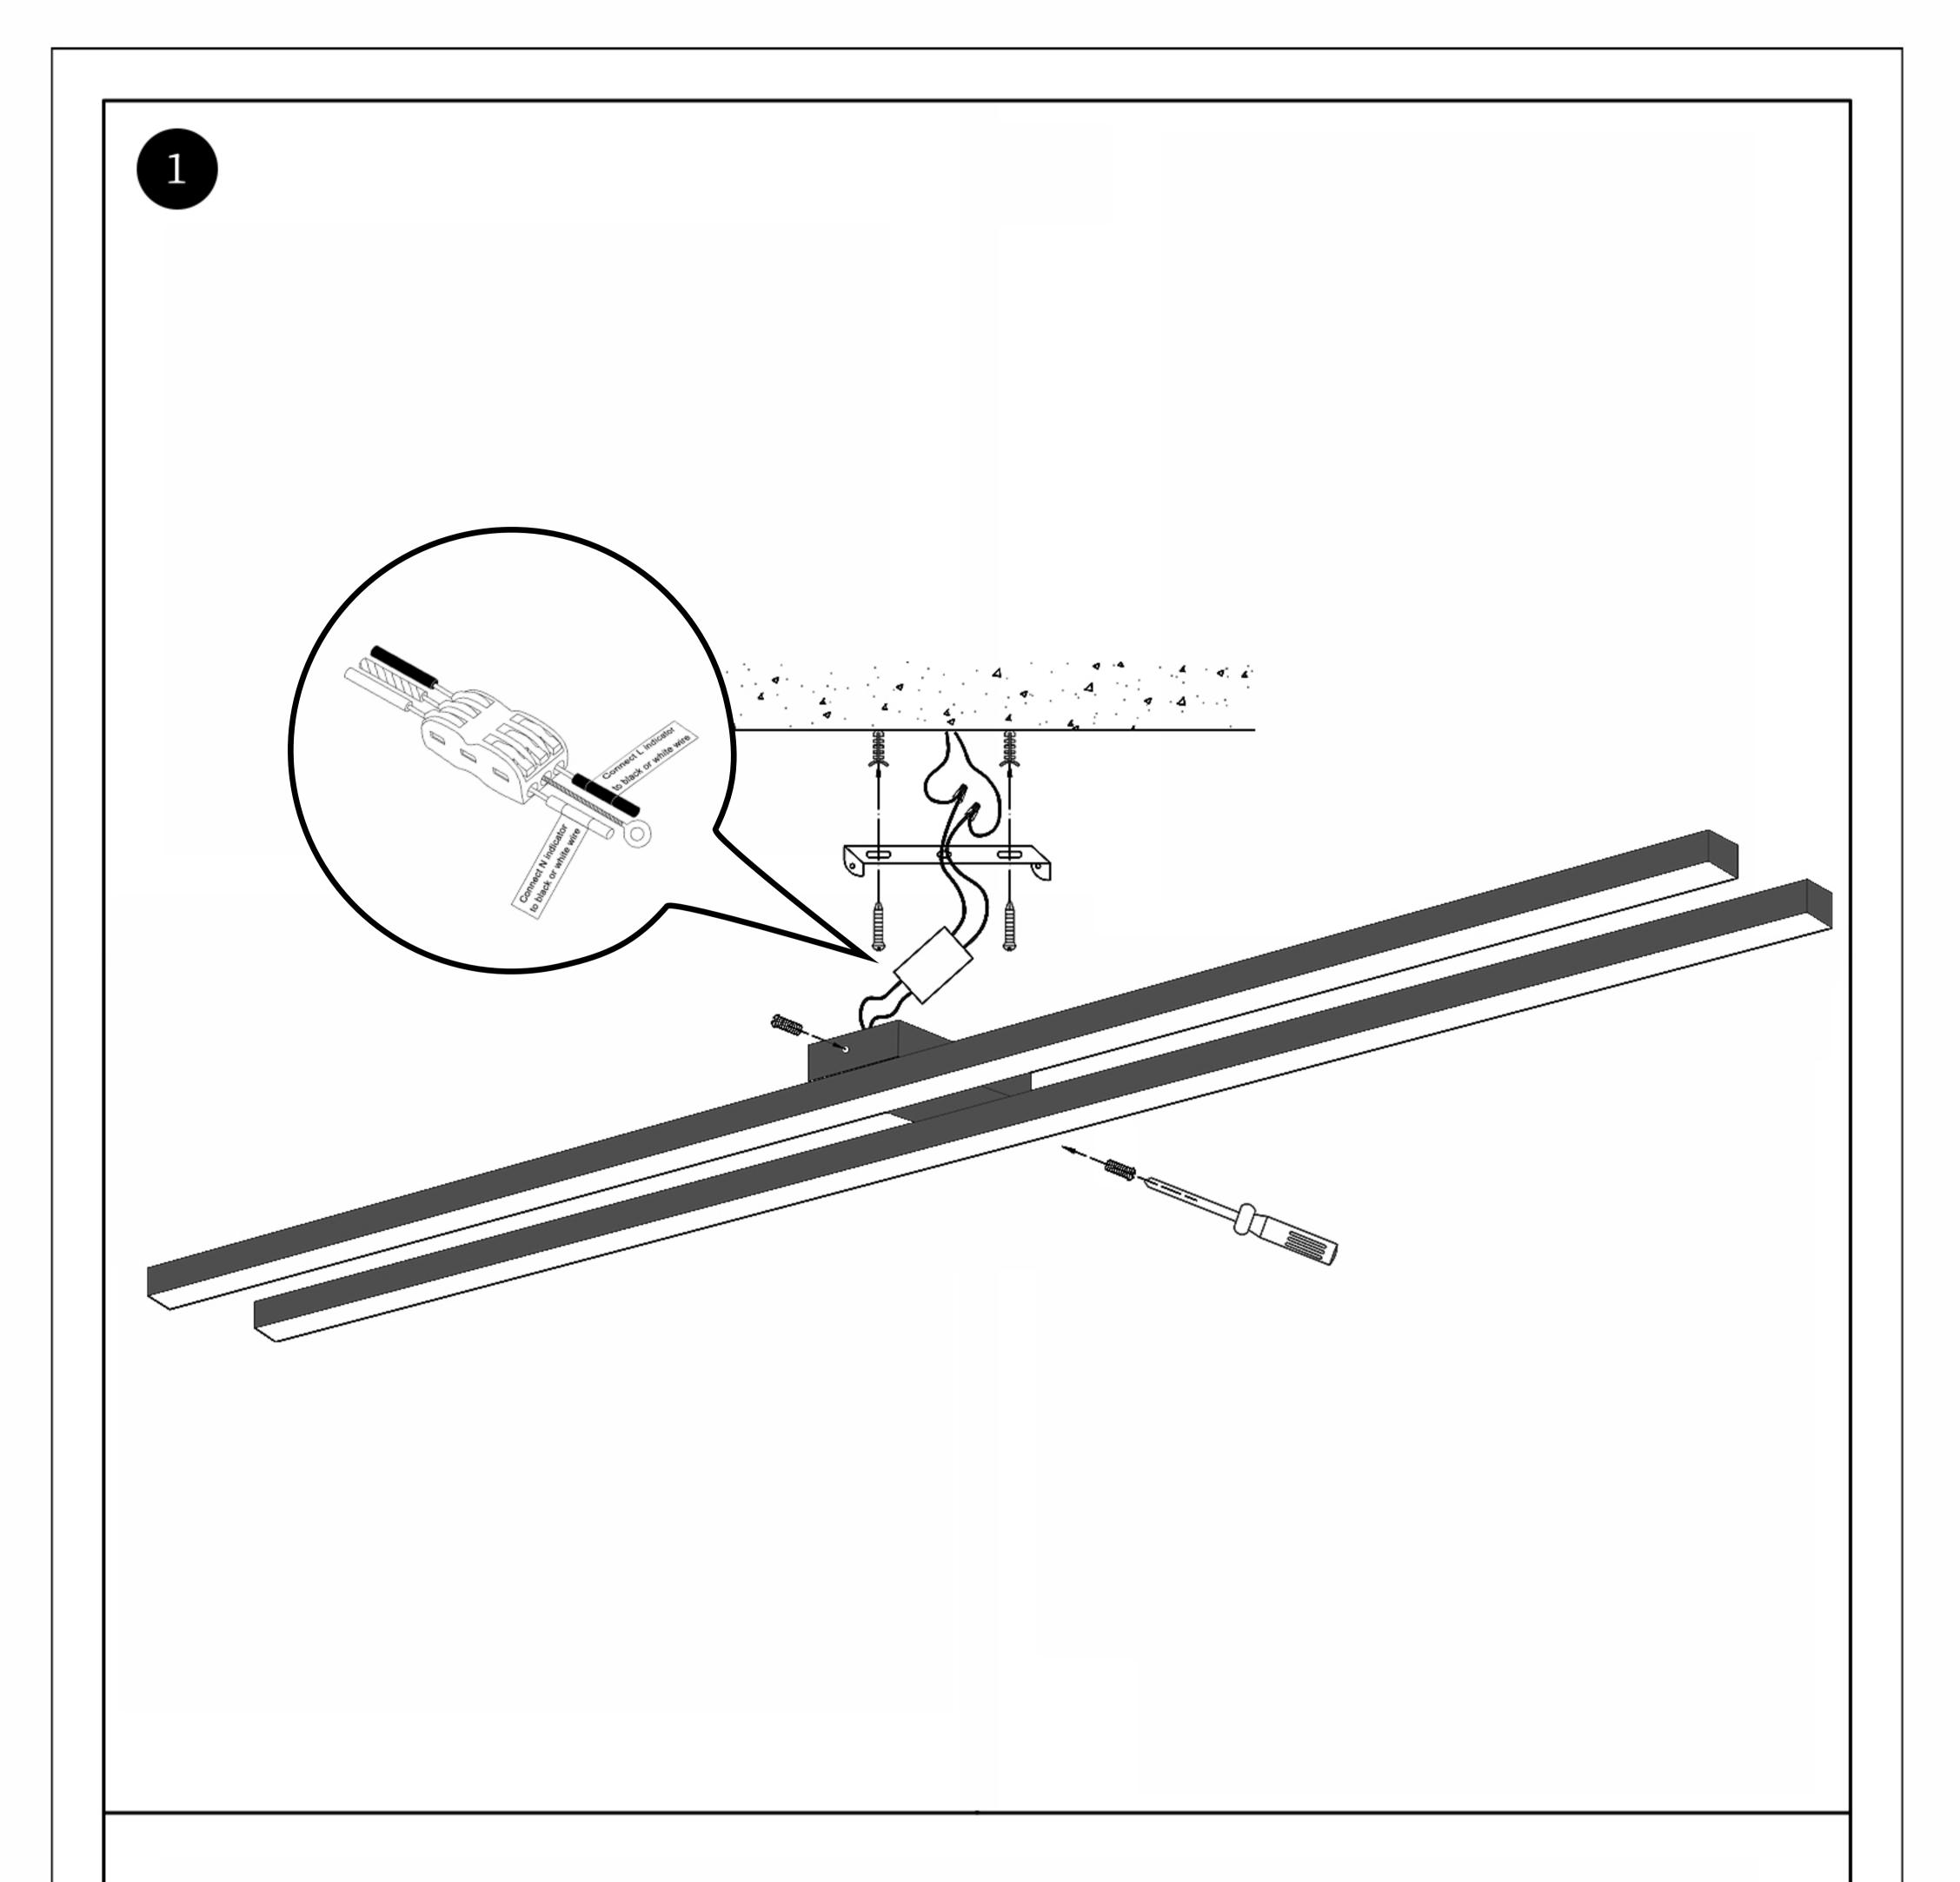

- 1. Attach the mounting bracket to the ceiling box with screws.
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align the base screw holes with the mounting bracket and secure the canopy with screws.
- 4. Turn the power back on and flip on the light switch to test your light.

womolighting.com ————— contact@womolighting.com