

## INSTALLATION GUIDE - WM1010

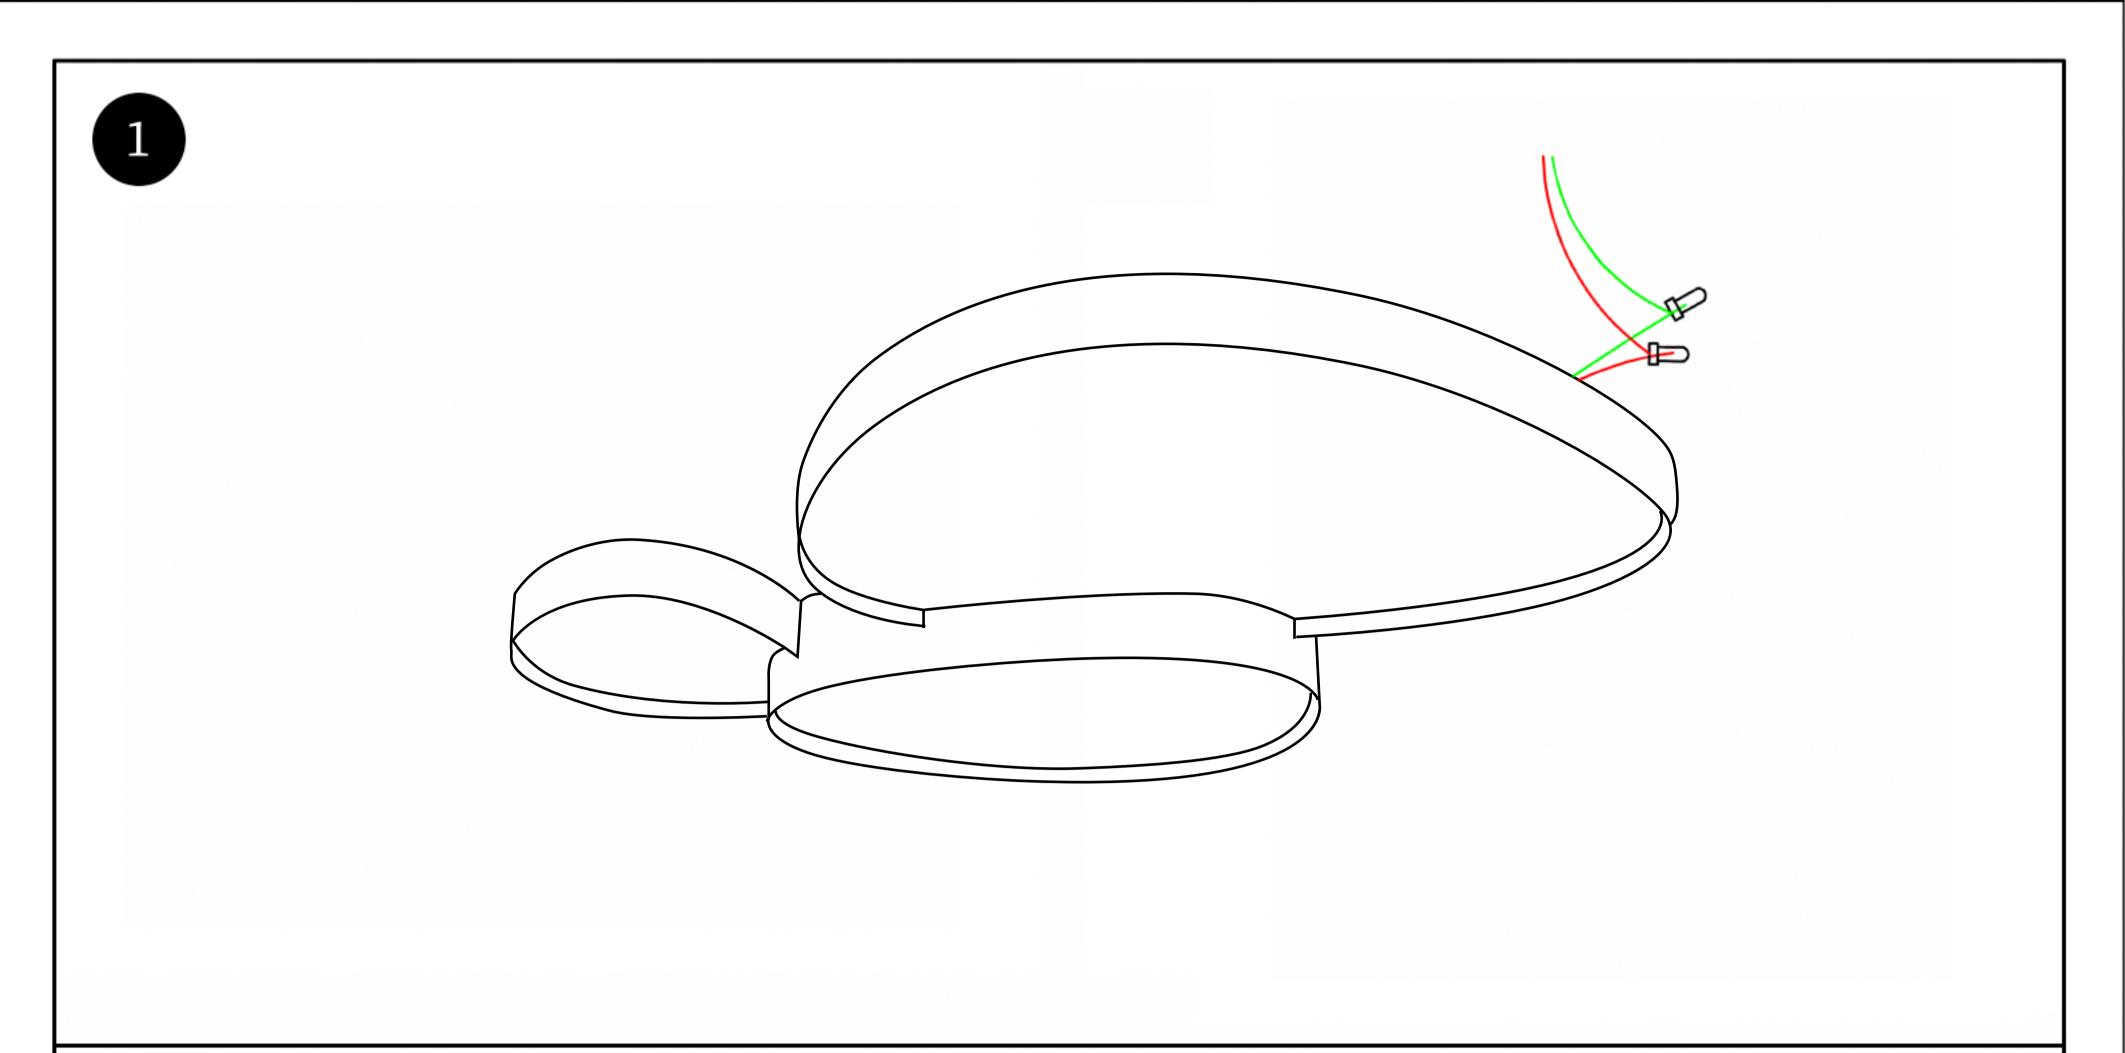

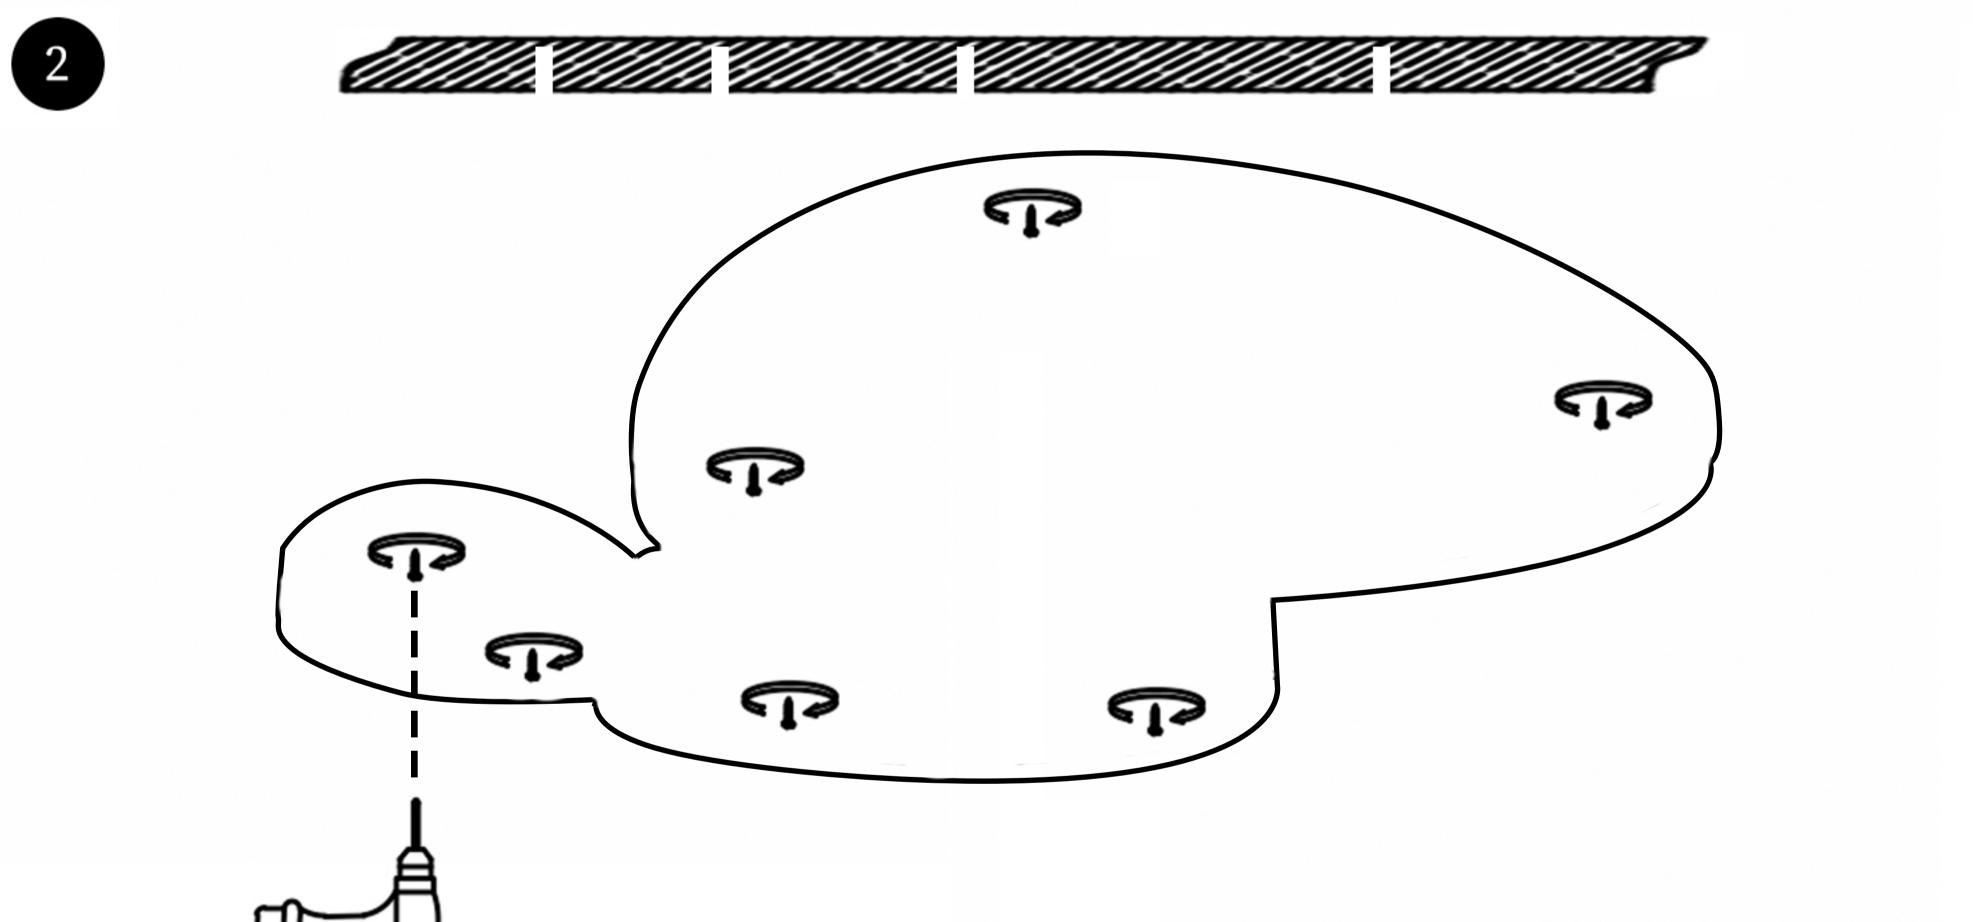

- 1. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 2. Use wedge anchors and screws (these come with the light) to drill the light into the ceiling, and Push the lampshade into the base of light.
- 3. Turn the power back on and flip on the light switch to test your light.

womolighting.com \_\_\_\_\_ contact@womolighting.com