


# INSTALLATION GUIDE - WM1014

1

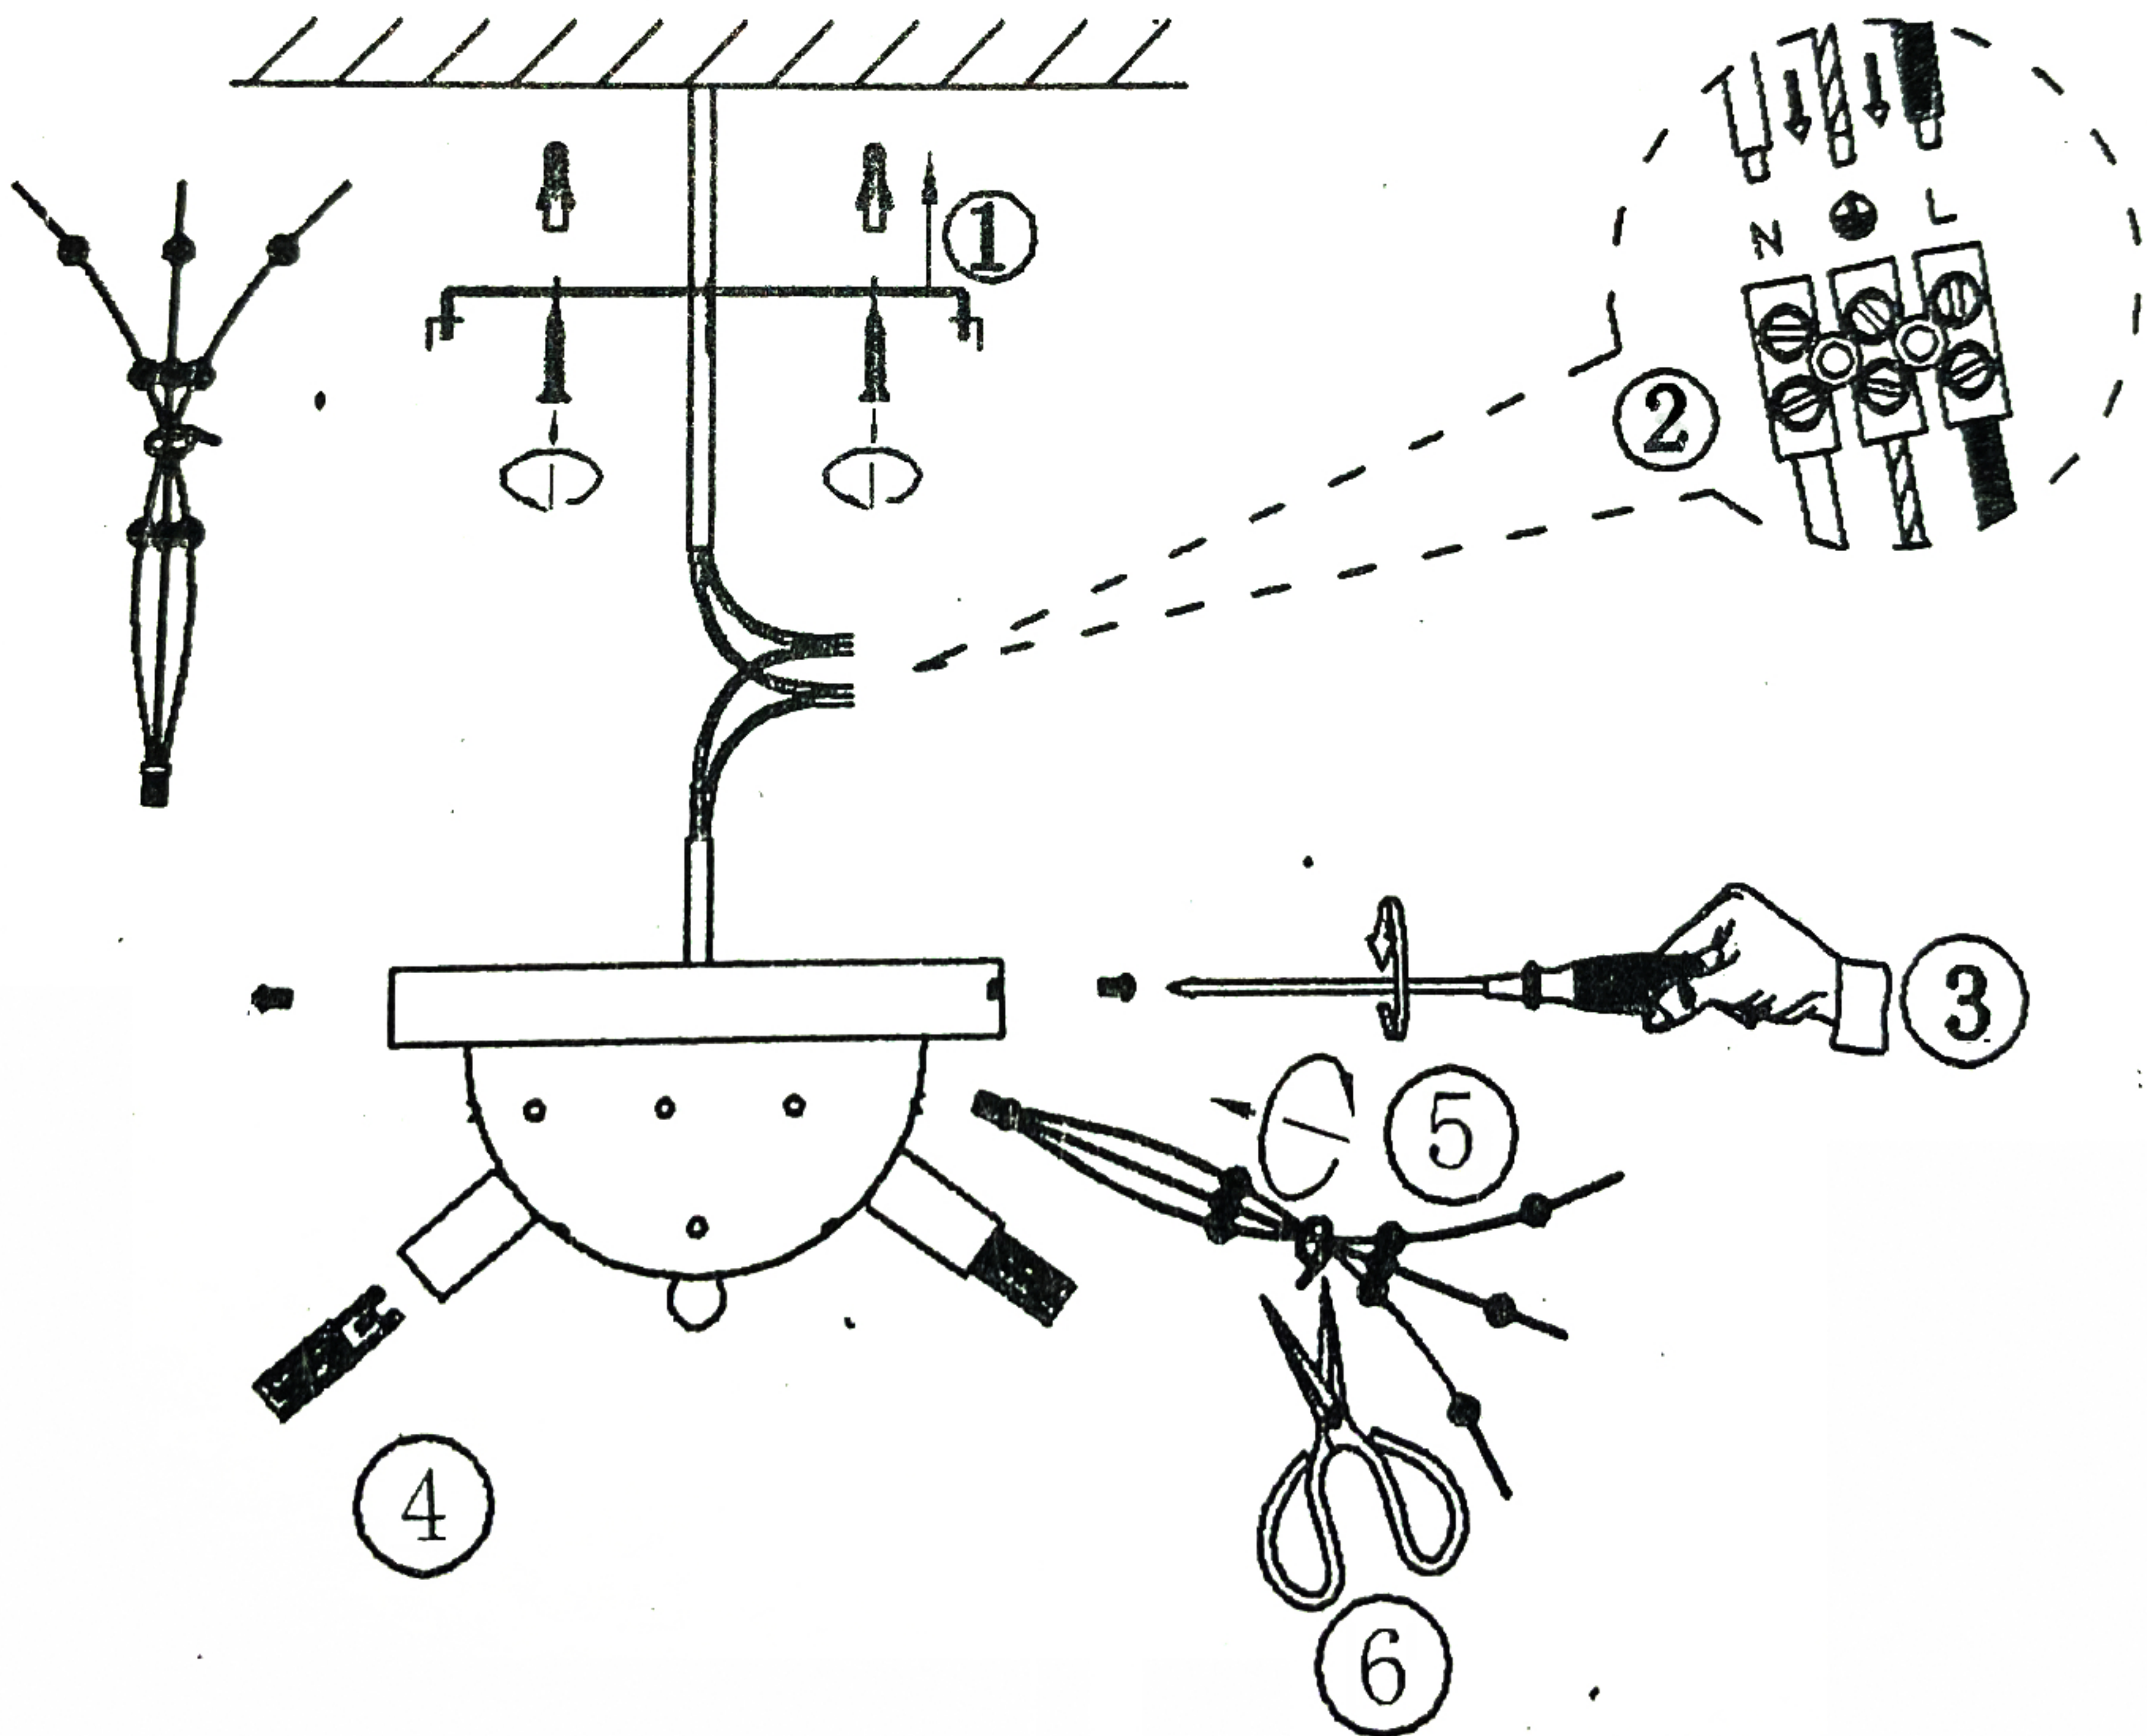

1. Attach the mounting bracket to the ceiling box with screws. If necessary you can use screws and even wedge anchors (these come with the light) to drill the mounting bracket into the ceiling.
2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
3. Align the base screw holes with the mounting bracket and secure the canopy with screws.
4. Screw the included bulbs up.
5. Screw the crystal strings into the base.
6. Cut off cable ties.
7. Turn the power back on and flip on the light switch to test your light.