
## INSTALLATION GUIDE - WM1024

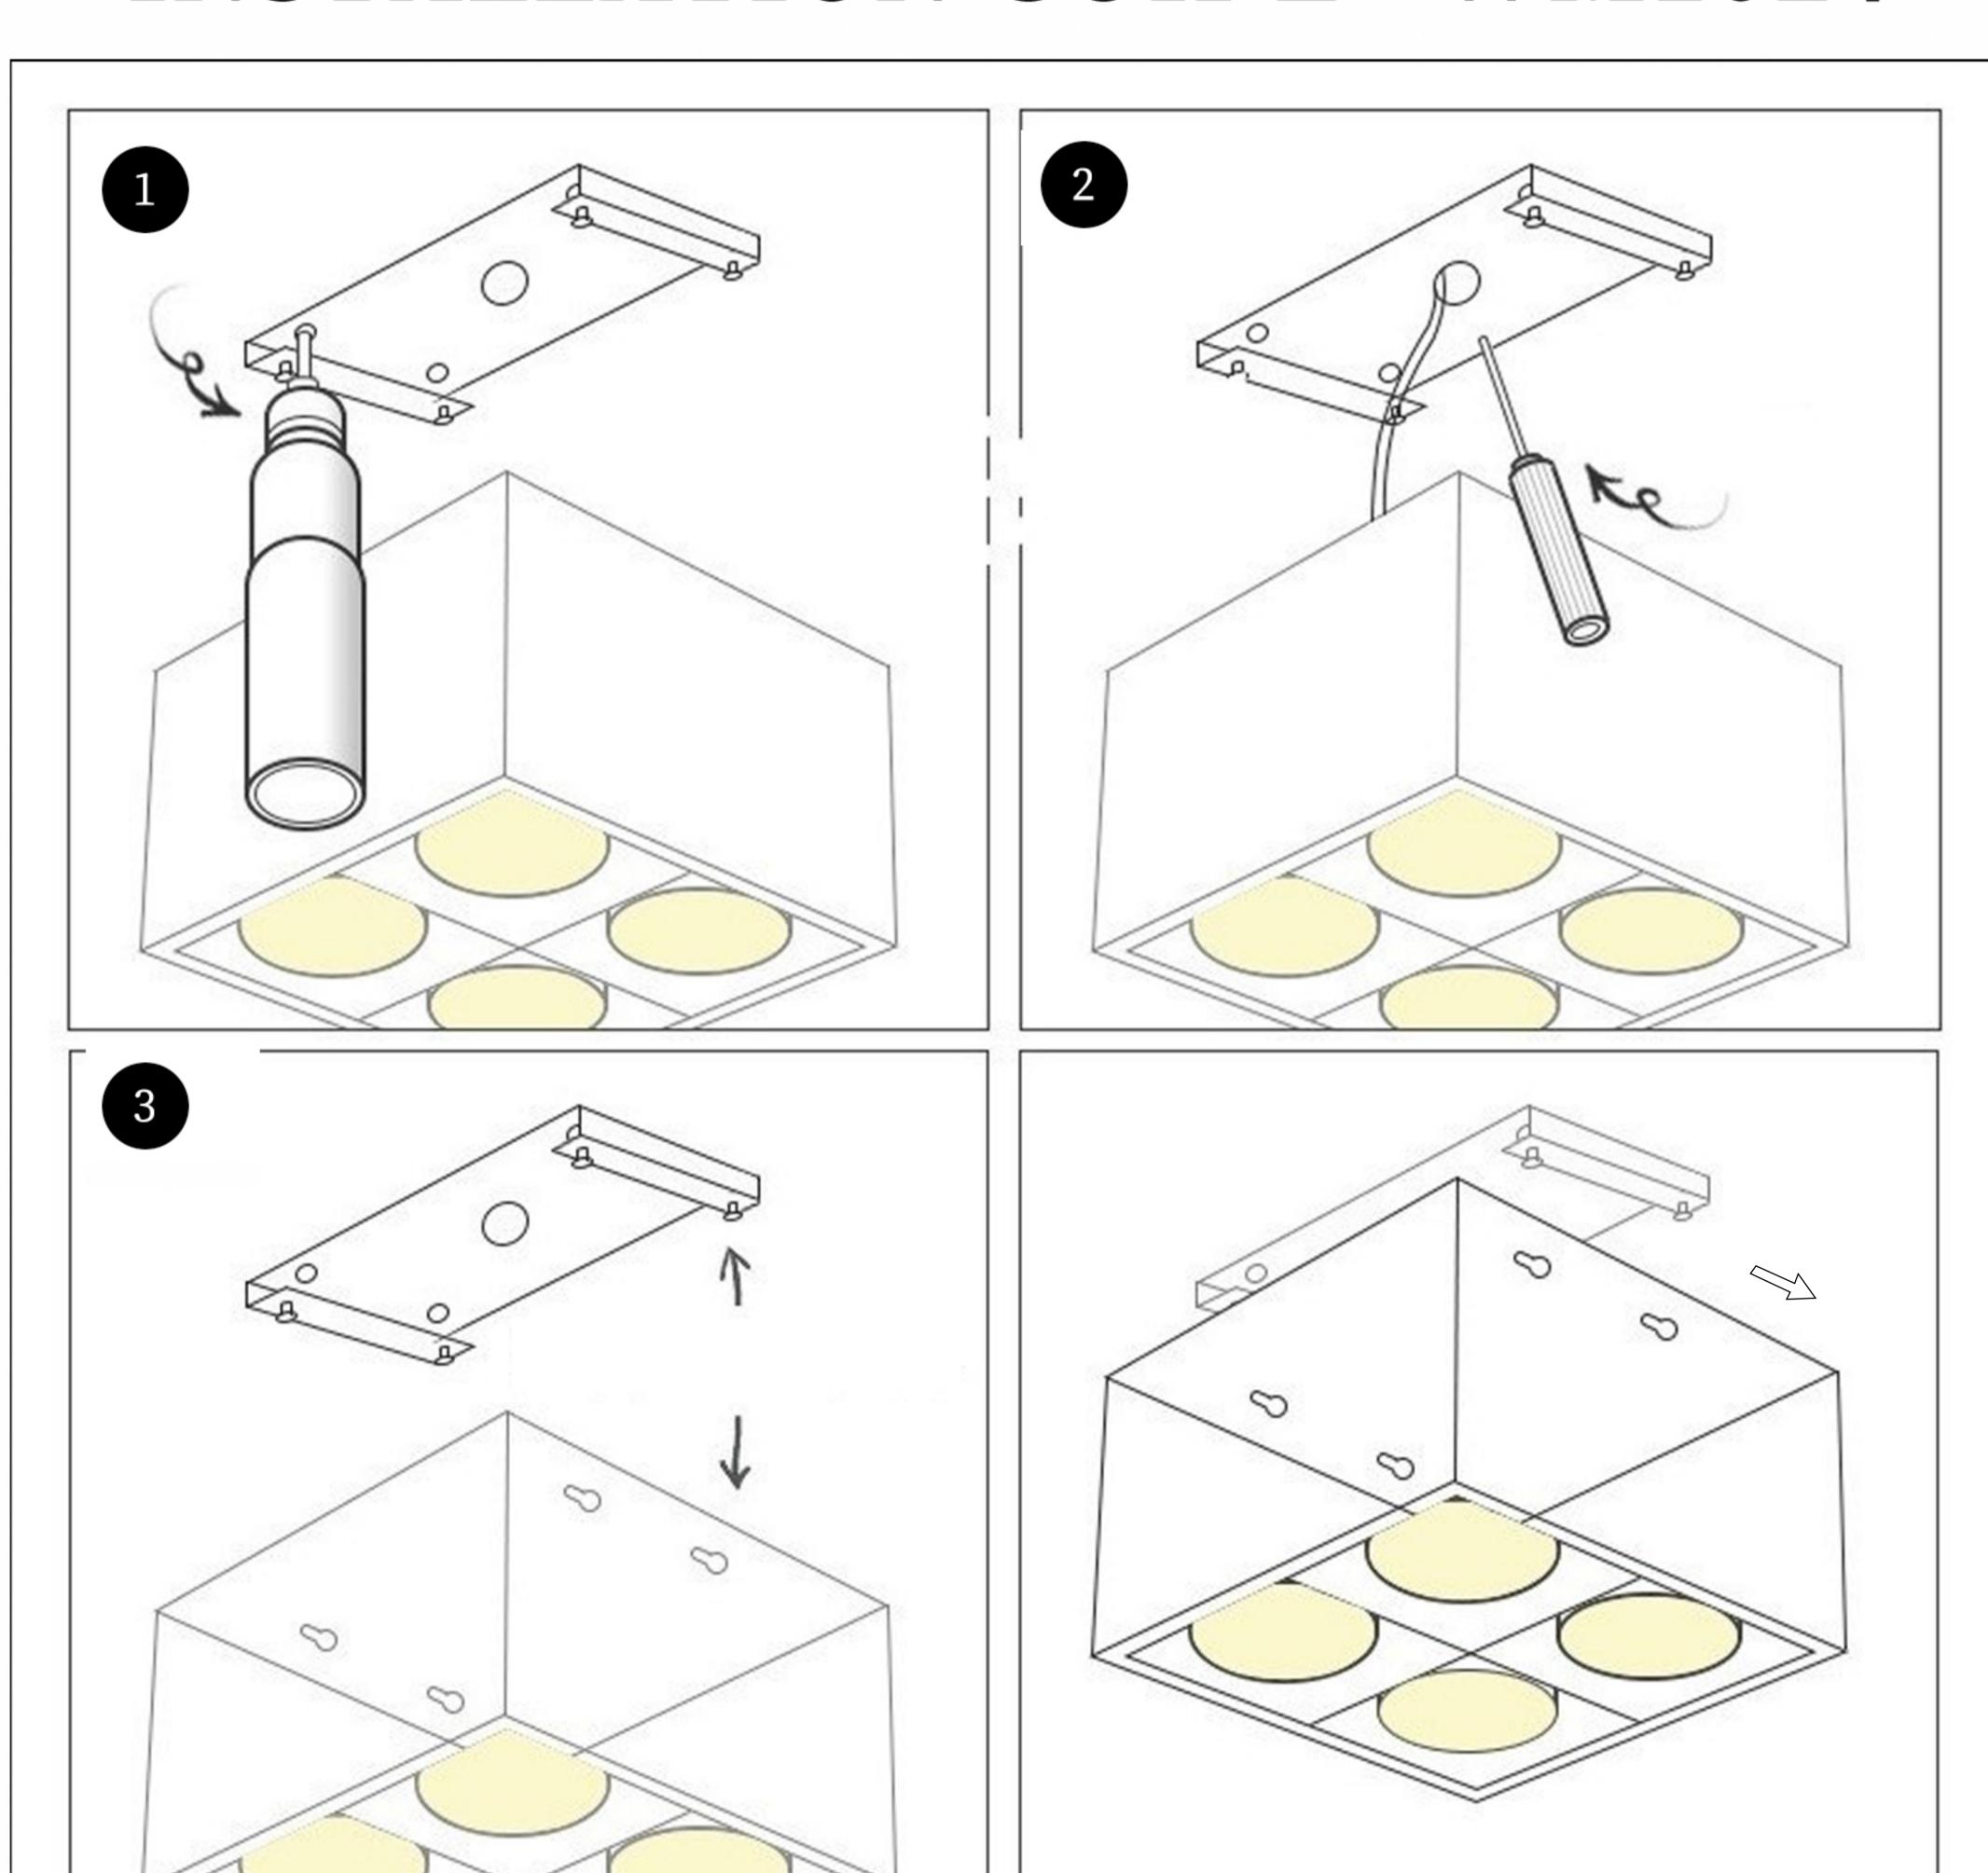

- 1. Drill the mounting bracket to the ceiling with screws.
- 2. Use the wire connector to connect the wires of the supply wires according to labels on the wires.
- 3. Drive the screws into the mounting bracket with keeping the head of the screws downward.
- 4. Align the holes at the top of lamp body with the screws on the mounting bracket, and push the lamp over to fix it.

womolighting.com ————— contact@womolighting.com –