

INSTALLATION GUIDE - WM1029

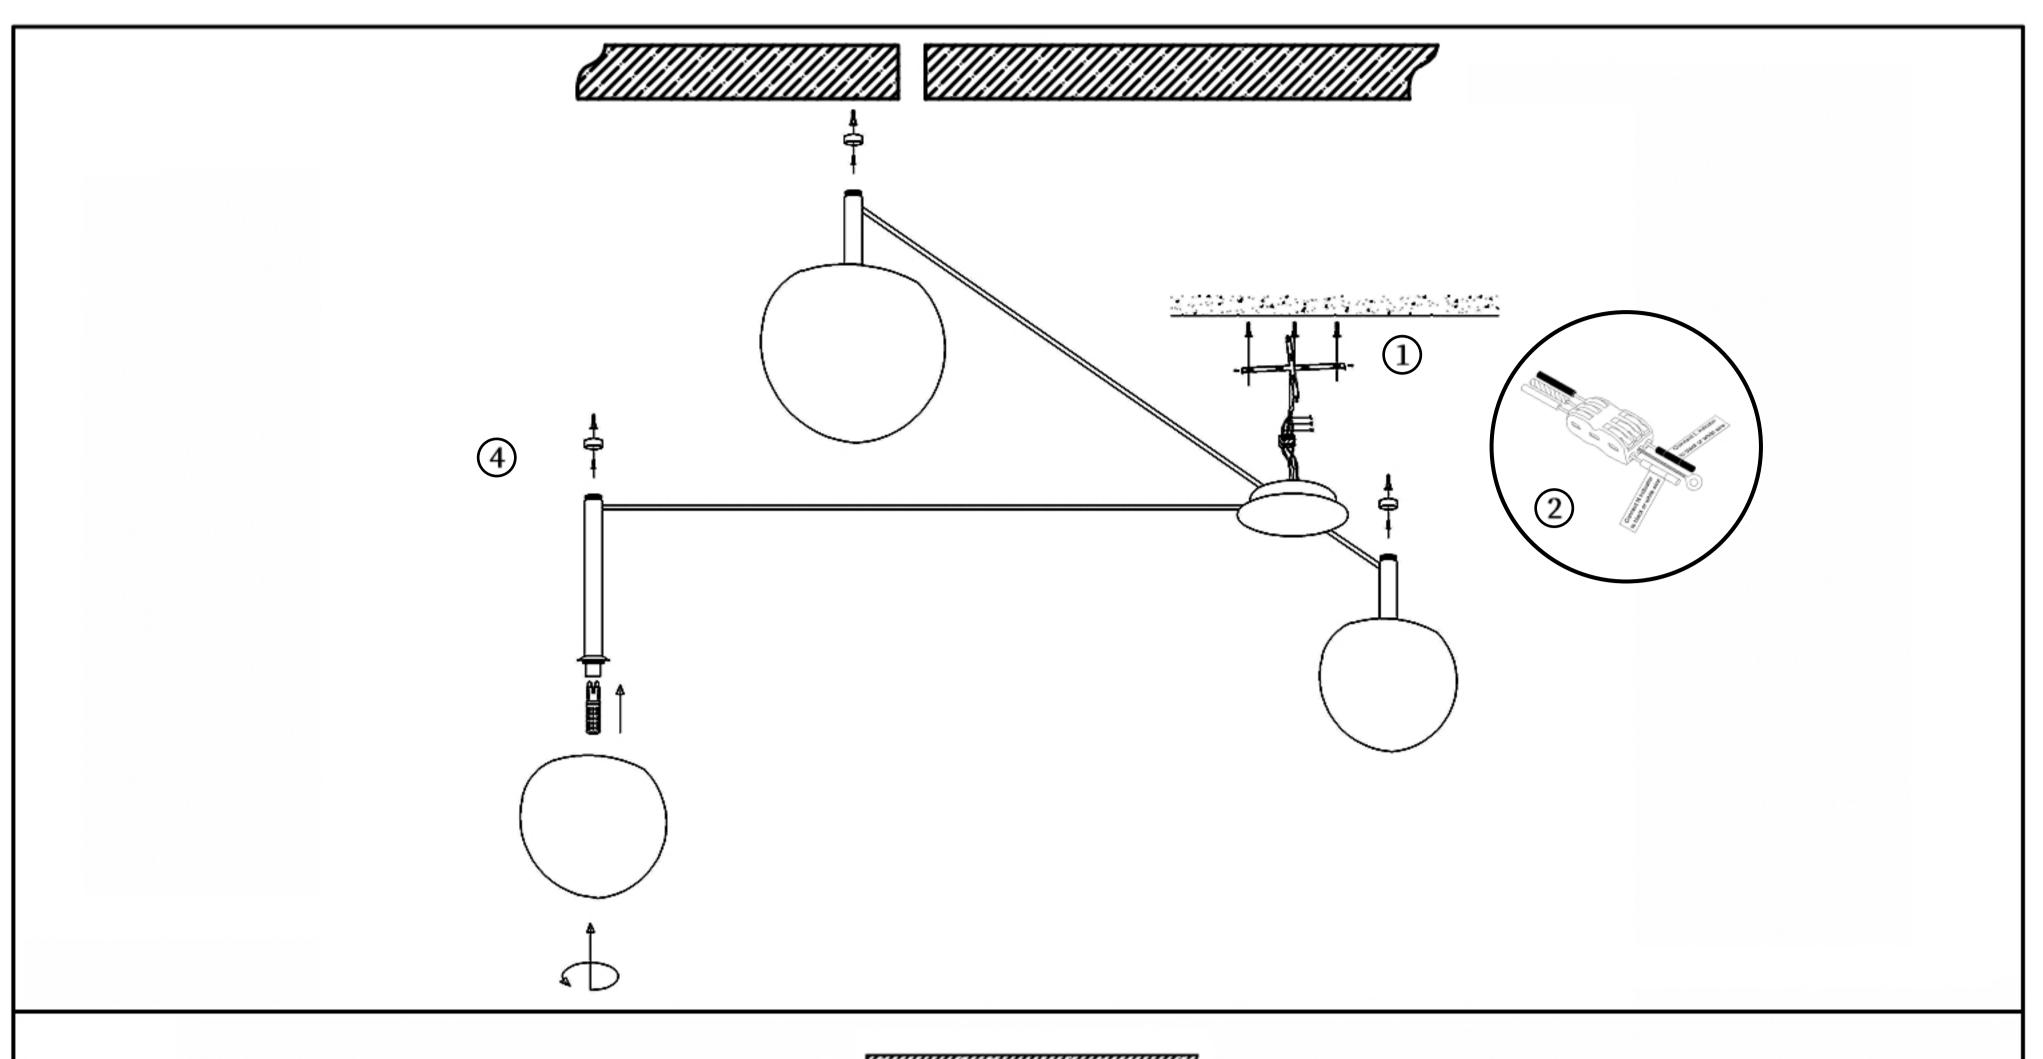

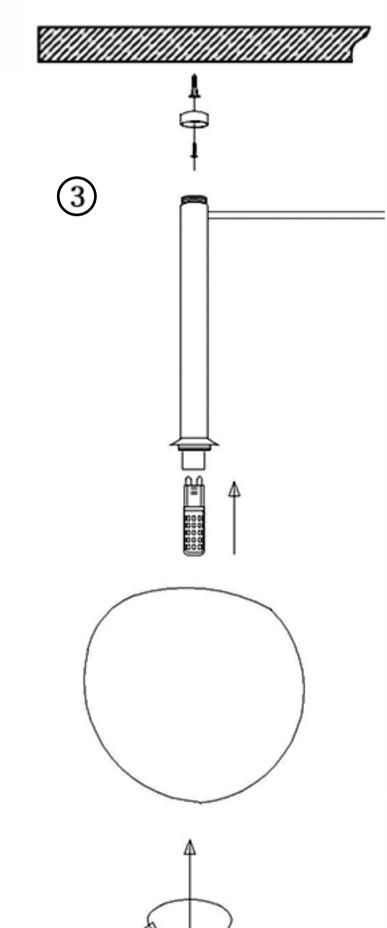

- 1. Fix the mounting bracket and cap nuts on the ceiling with screws, and screw the tubes up into cap nuts.
- 2. Use the wire connector to connect the wires of the light to the reserved wires according to labels on the wires.
- 3. Align the canopy screw holes with the mounting brackets and secure the canopy with screws.
- 4. Screw bulbs and lampshades up.
- 5. Turn the power back on and flip on the light switch to test your light.

womolighting.com ————— contact@womolighting.com