


# INSTALLATION GUIDE - WM1036

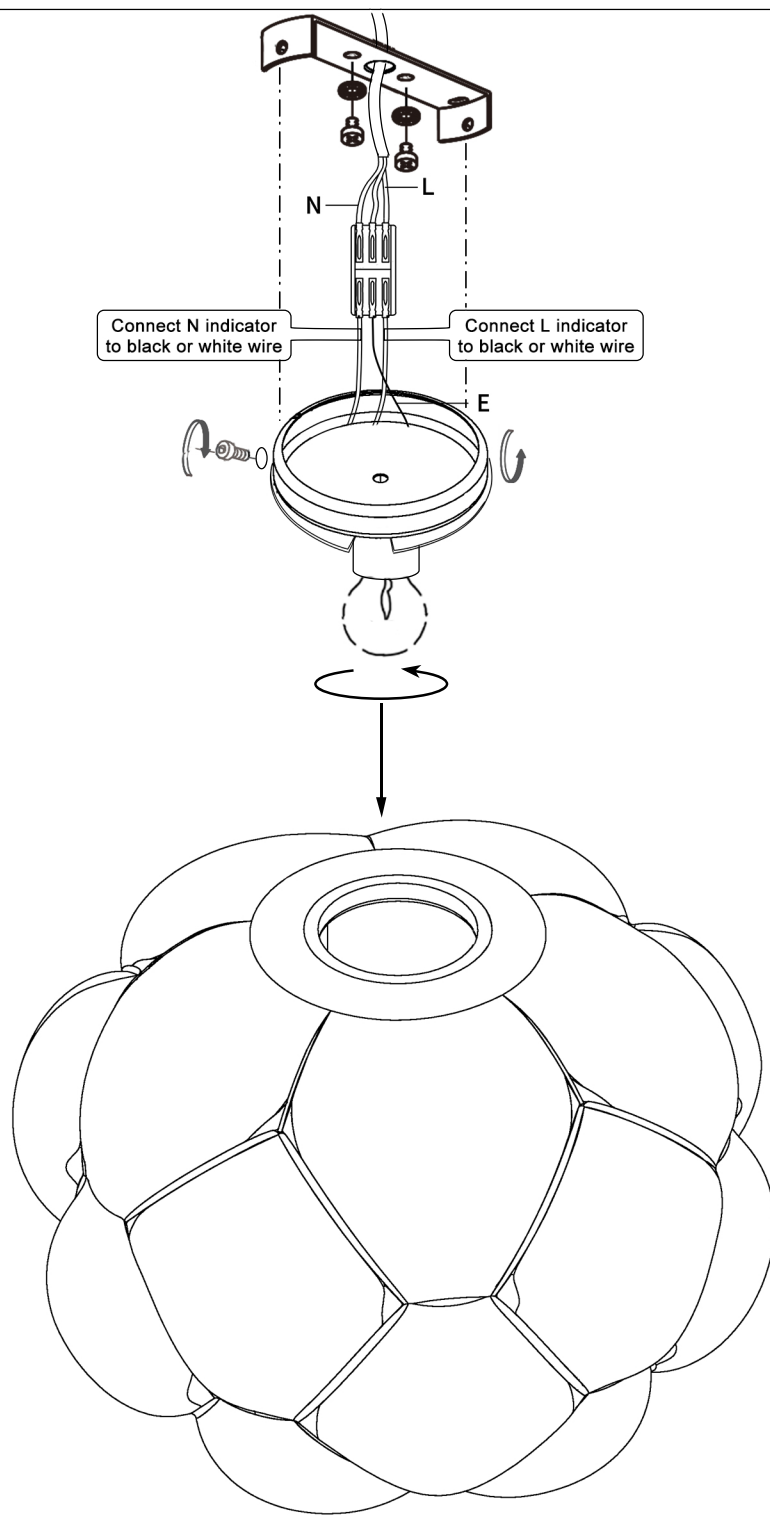

1. Screw the cutted plate at the bottom of canopy into the lampshade.
2. Drill the mounting bracket into the ceiling with screws and even anchors.
3. Use the wire connector to connect the wires of light to the supply wires as indicated on the labels.
4. Attach the canopy to mounting bracket with screws.
5. Turn the power back on and flip on the light switch to test your light.