


INSTALLATION GUIDE - WM1108

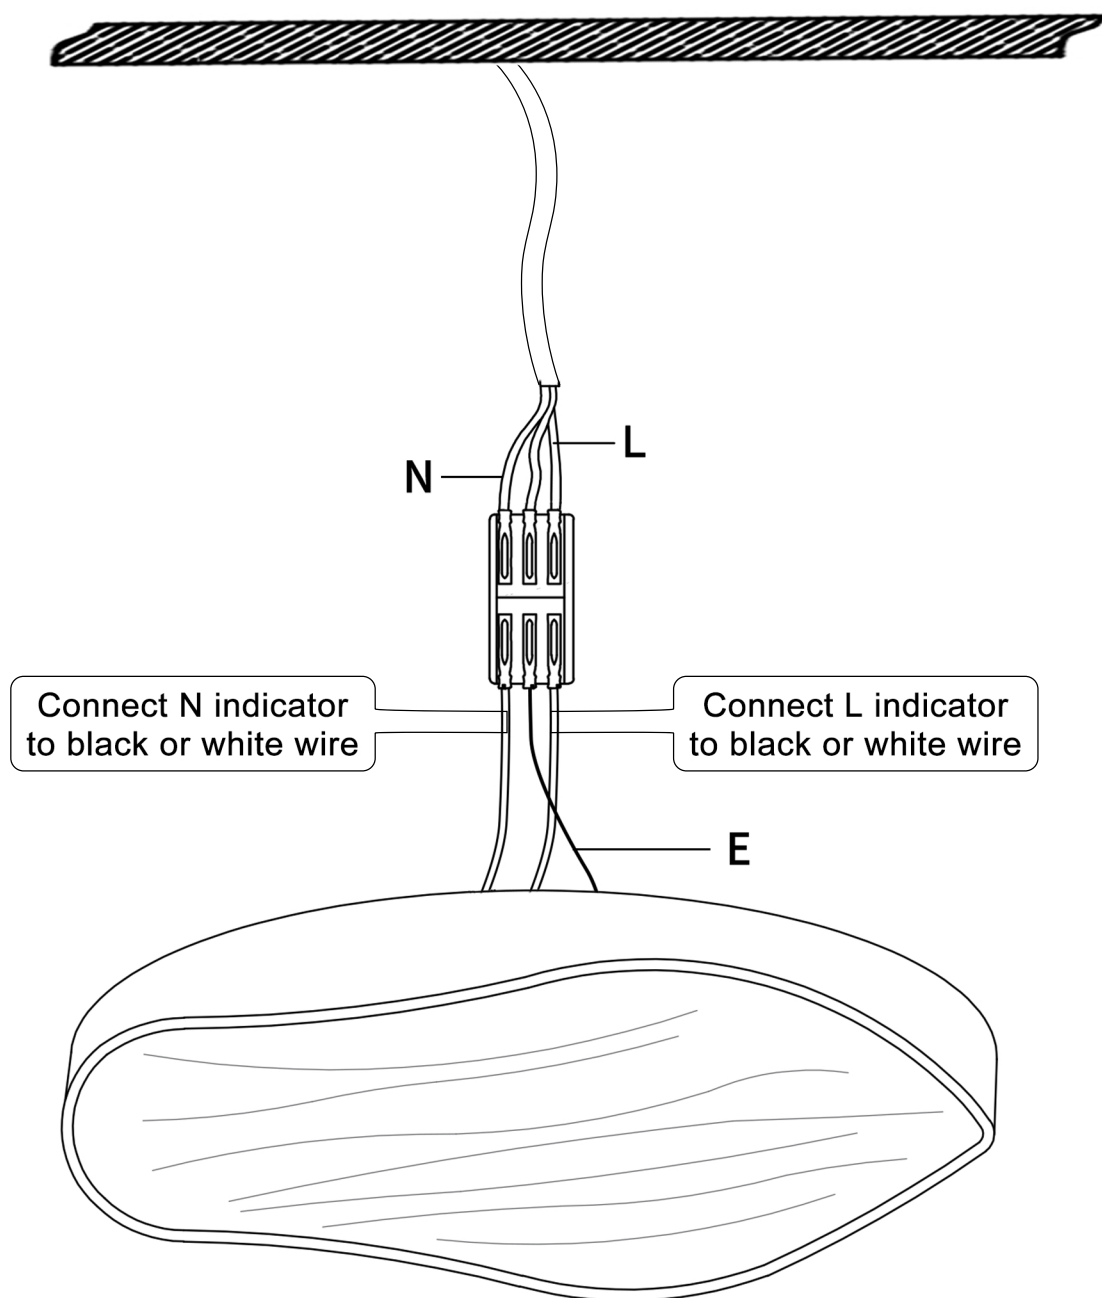

1. Use the wire connector to connect the drivers to the supply wires as indicated on the labels.
2. Drill the light into the ceiling with screws.
3. Turn the power back on and flip on the light switch to test your light.