
INSTALLATION GUIDE - WM2002

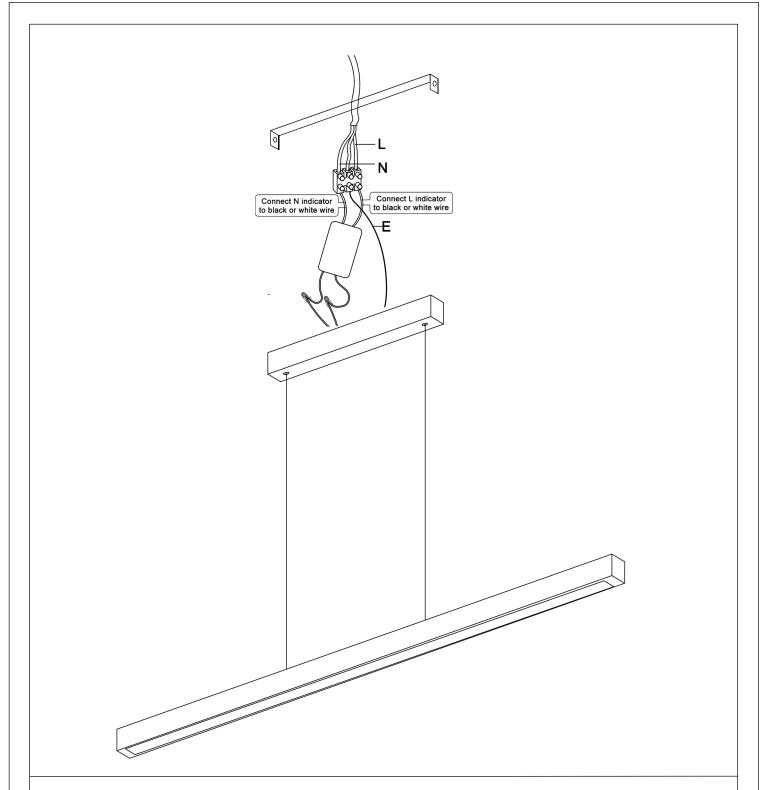

- 1. Drill the mounting bracket into the ceiling with screws and anchor bolts (these come with the light).
- 2. Use the wire connector to connect the driver to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.
- 4. Turn the power back on and flip on the light switch to test your light.

womolighting.com — contact@womolighting.com