
INSTALLATION GUIDE - WM2018

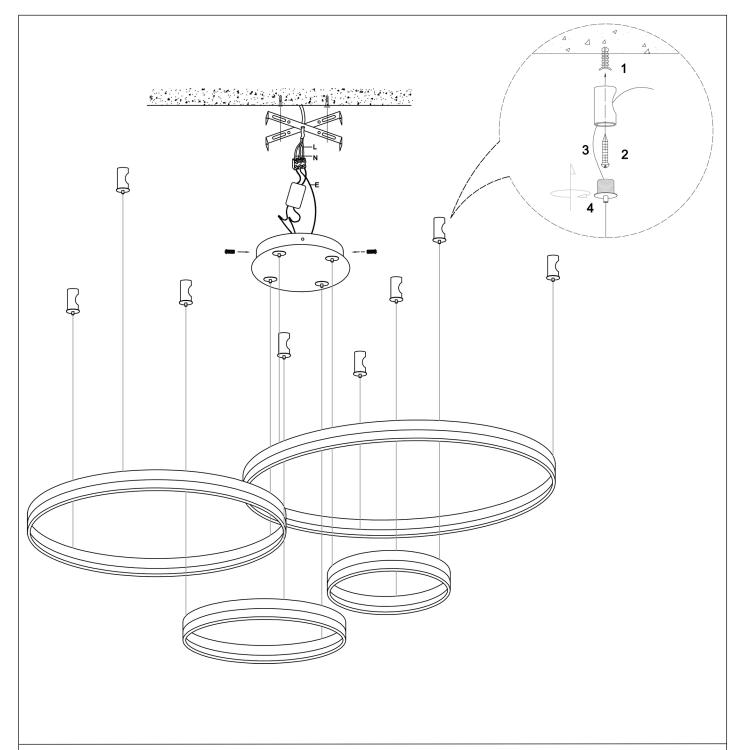

- 1. Drill the mounting bracket into the ceiling with screws and anchor bolts (these come with the light).
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.
- 4. Drill the cable grippers into the ceiling and make the cables passing through them.

womolighting.com —————— contact@womolighting.com