



Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

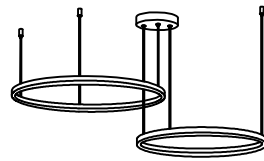


Product style diagram


Steps of installation

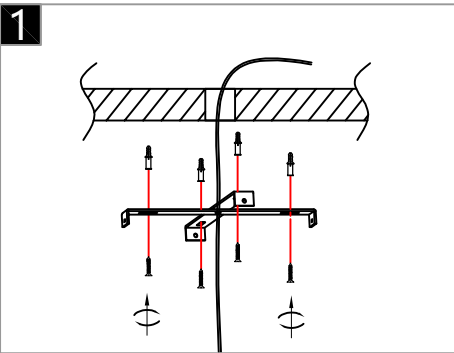


Attach the mounting plate to the ceiling with self-tapping screws.

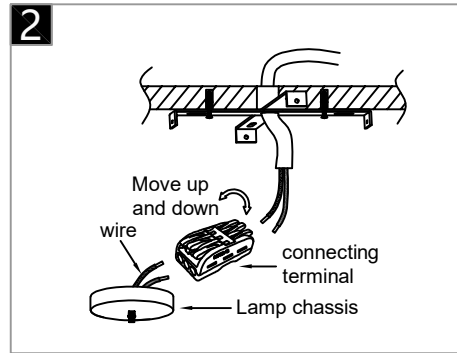


Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

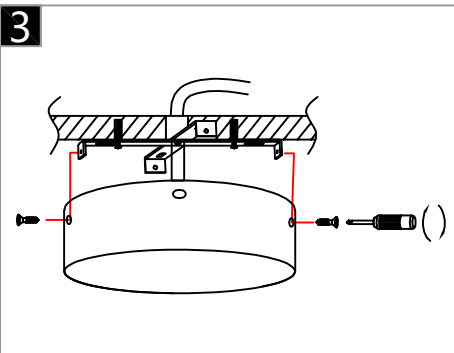

Align the hole on the side of the integral lamp canopy with the hole on the mounting plate and lock it tightly with screws.

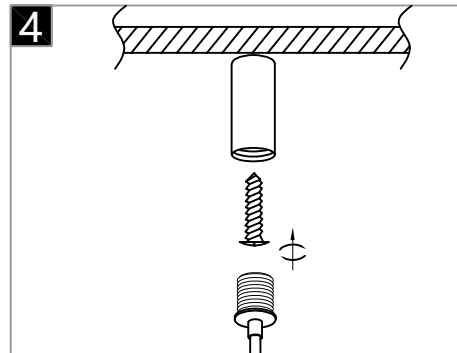

Place the iron pin at the desired Angle, then attach it to the ceiling with self-tapping screws, and then fasten it with locking wire. Screw it on the iron pin.

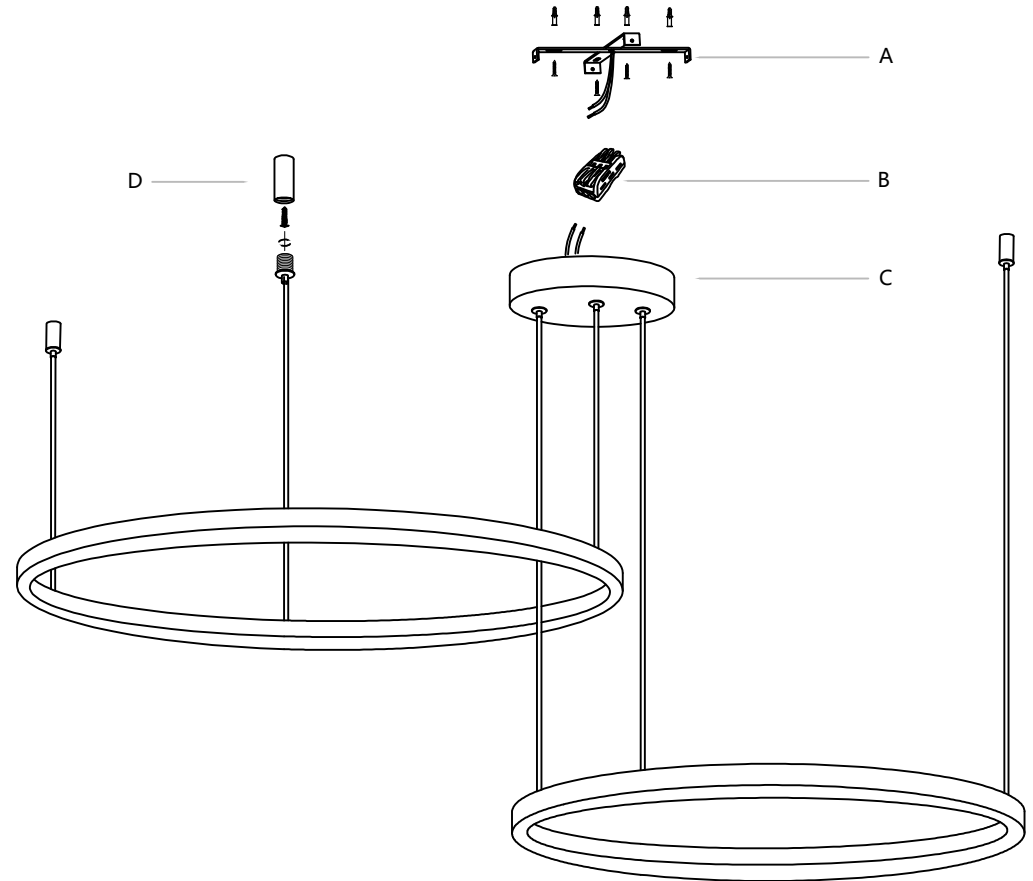

Place the iron nail (D) at the desired angle position, then fix it to the ceiling using a self-tapping screw, and then secure it with a locking line. Tighten the screw onto the iron nail (D). Fix the mounting plate (A) to the ceiling. Then, connect the wire (C) reserved for the top cover to the wire on the ceiling and the terminal (B). Next, align the holes on the top cover (C) with the holes on the mounting plate (A), and then tighten the screws.


Installation Instructions

WOMO Lighting

Model number: WM2003-3


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

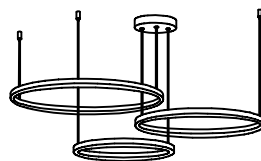


Product style diagram


Steps of installation

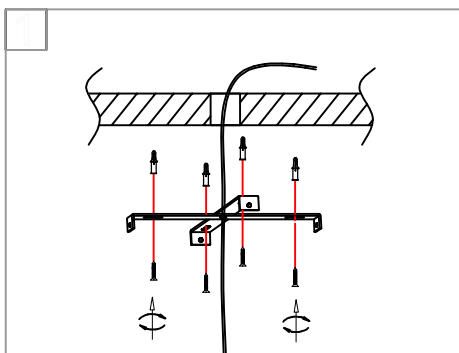


Attach the mounting plate to the ceiling with self-tapping screws.

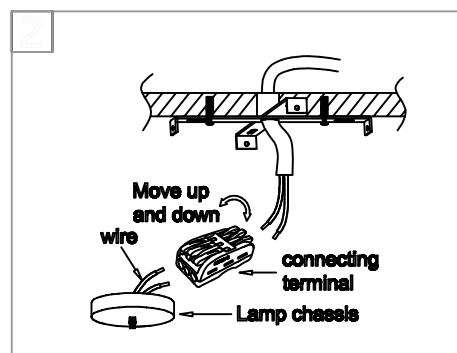


Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

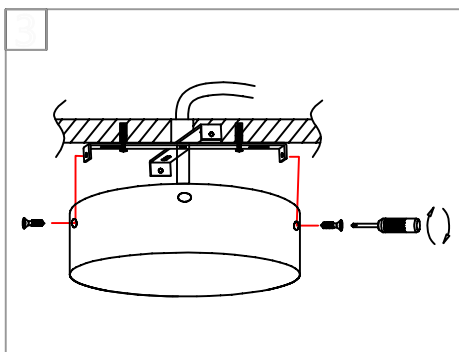

Align the hole on the side of the integral lamp canopy with the hole on the mounting plate and lock it tightly with screws.

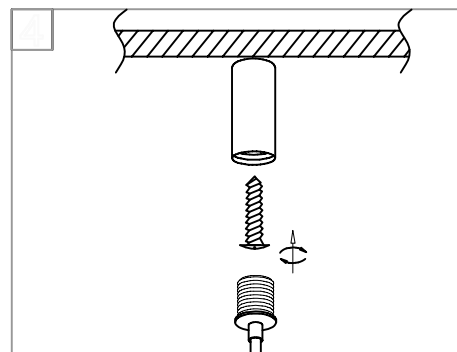


Place the iron pin at the desired Angle, then attach it to the ceiling with self-tapping screws, and then fasten it with locking wire. Screw it on the iron pin.

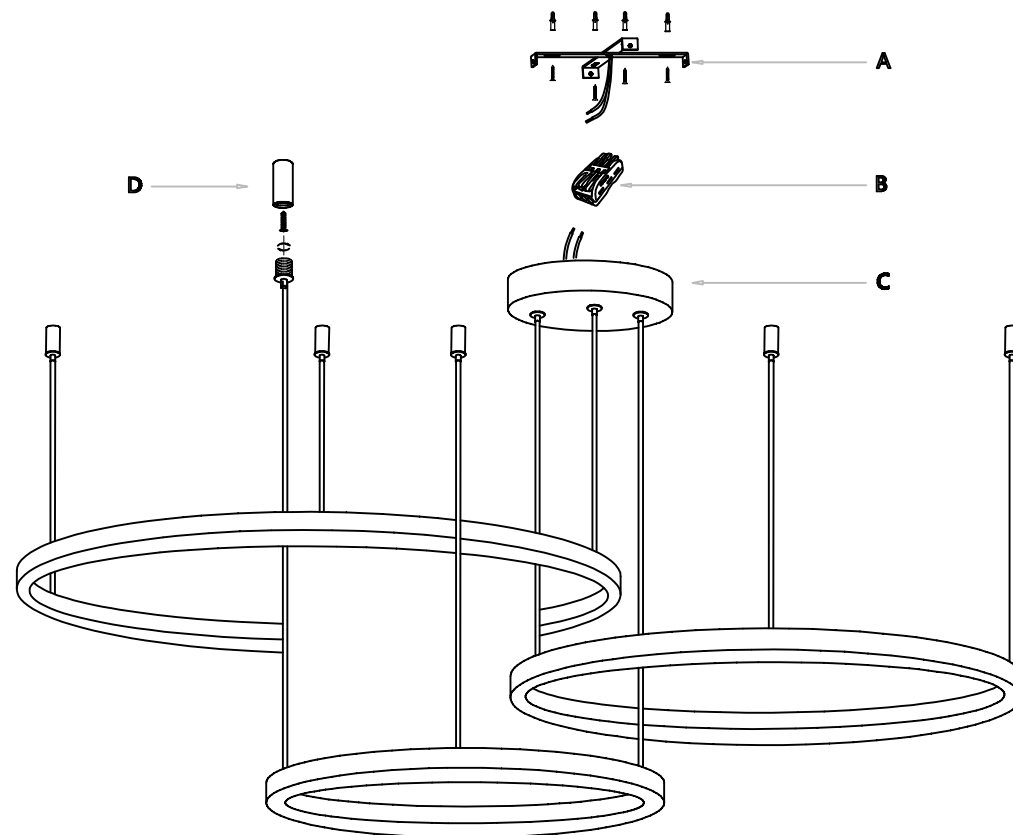

Place the iron rail (D) at the desired angle position, then fix it to the ceiling using a self-tapping screw, and then secure it with a locking line. Tighten the screw onto the iron rail (D). Fix the mounting plate (A) to the ceiling. Then, connect the wire (C) reserved for the top cover to the wire on the ceiling and the terminal (B). Next, align the holes on the top cover (C) with the holes on the mounting plate (A), and then tighten the screws.

Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

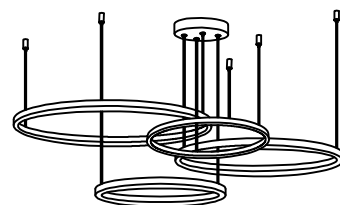

Product style diagram


Steps of installation

1

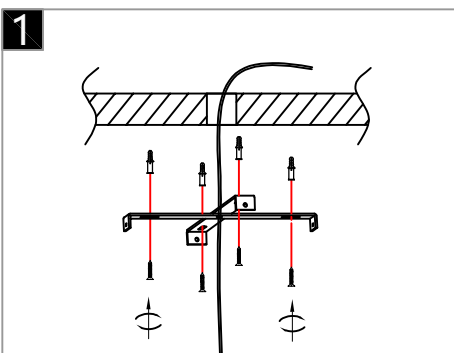


Attach the mounting plate to the ceiling with self-tapping screws.

2

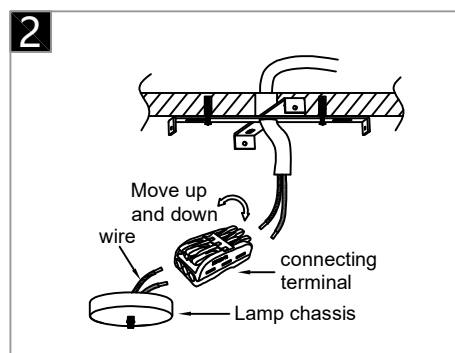


Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

3

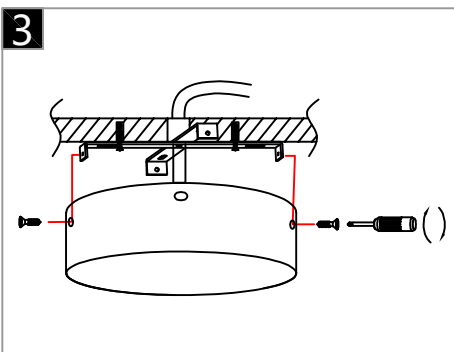


Align the hole on the side of the integral lamp canopy with the hole on the mounting plate and lock it tightly with screws.

4

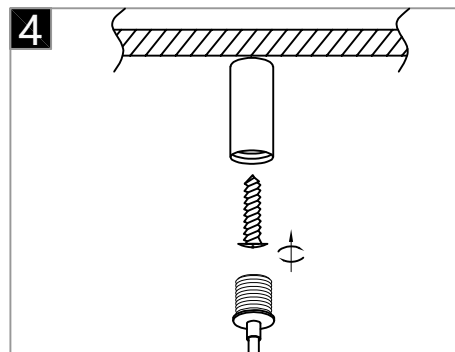


Place the iron pin at the desired Angle, then attach it to the ceiling with self-tapping screws, and then fasten it with locking wire. Screw it on the iron pin.

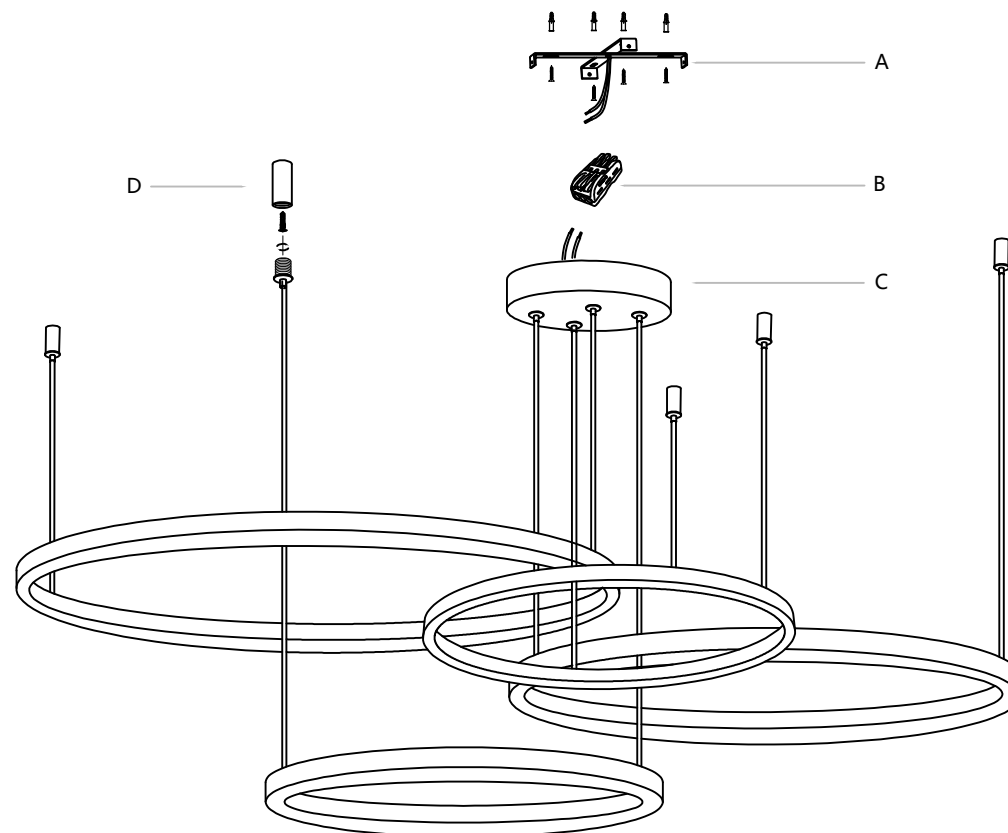

Place the iron nail (D) at the desired angle position, then fix it to the ceiling using a self-tapping screw, and then secure it with a locking line. Tighten the screw onto the iron nail (D). Fix the mounting plate (A) to the ceiling. Then, connect the wire (C) reserved for the top cover to the wire on the ceiling and the terminal (B). Next, align the holes on the top cover (C) with the holes on the mounting plate (A), and then tighten the screws.

Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

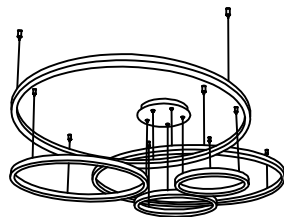

Product style diagram


Steps of installation

1

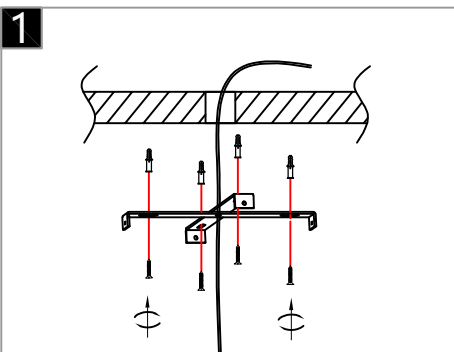


Attach the mounting plate to the ceiling with self-tapping screws.

2

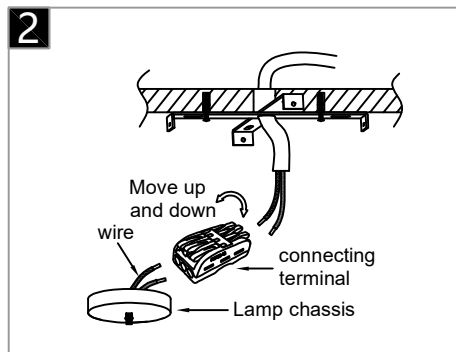


Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

3

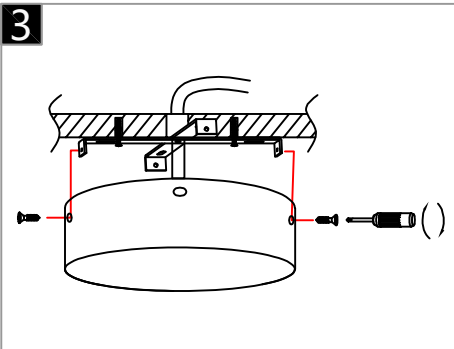


Align the hole on the side of the integral lamp canopy with the hole on the mounting plate and lock it tightly with screws.

4

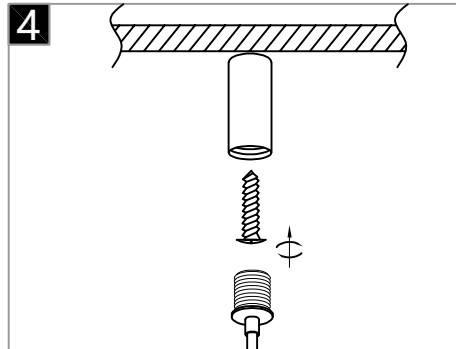

Place the iron pin at the desired Angle, then attach it to the ceiling with self-tapping screws, and then fasten it with locking wire. Screw it on the iron pin.

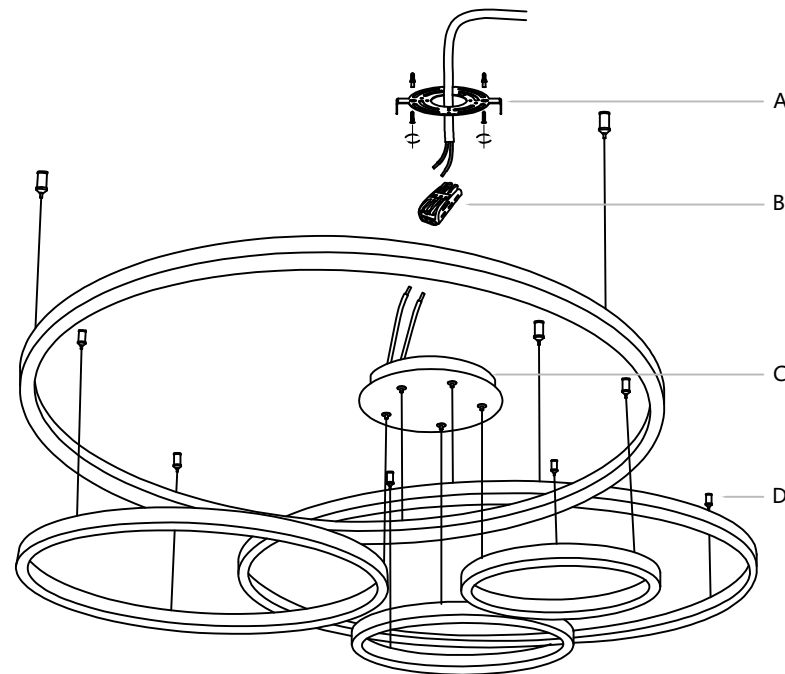

Use self-tapping screws to fix the installation plate (A) to the ceiling. Then connect the wires inside the top cover plate (C) to the wires on the ceiling and the junction box (B). Align the screw holes on the top cover plate (C) with the holes on the installation plate (A), and fix them with screws. Next, adjust the angle of the iron nails (D) and then fix them to the ceiling.