


# INSTALLATION GUIDE - WM2005

1. Attach the canopy to the downrod and arms to the sockets cluster with nuts.
2. Drill the mounting bracket into the ceiling with screws and anchor bolts.
3. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
4. Align holes of the canopy with the mounting bracket and secure the canopy with bolts and cap nuts.
5. Screw the G9 Bulbs up into the sockets and put the glass pieces on the arms.

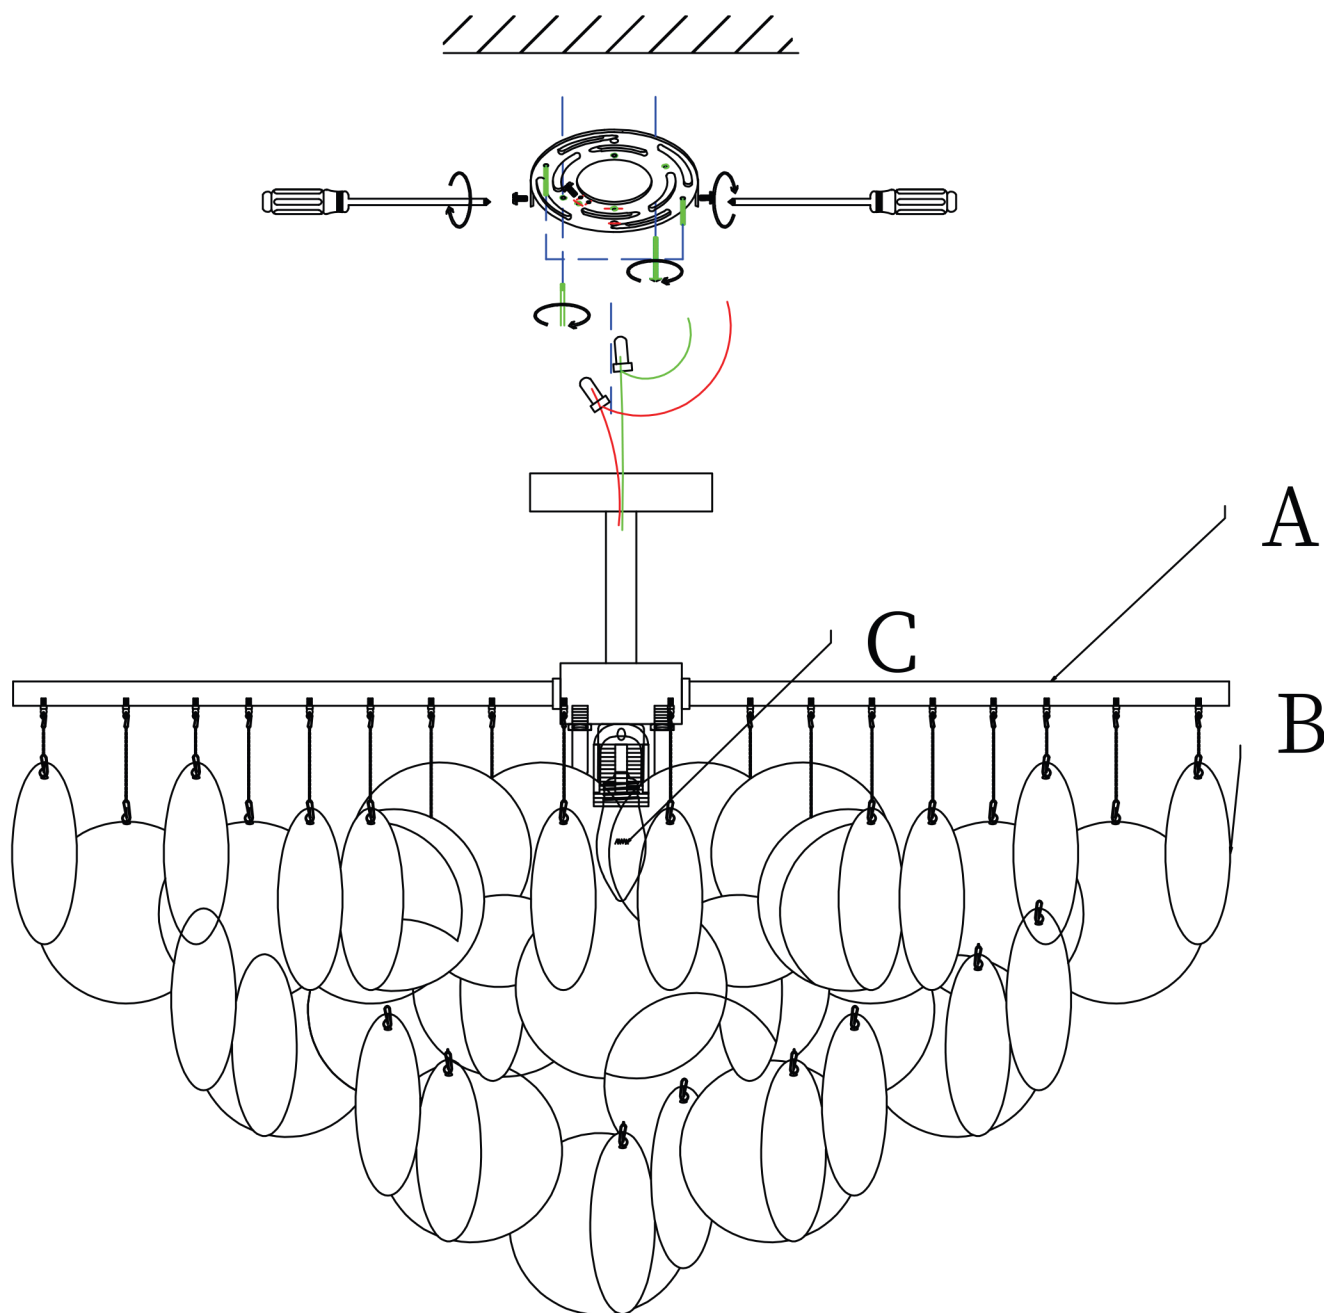

(A) Lamp Body

(B) Glass Shade

(C) Bulb

Installation Hardware Kit			
①	②	③	○
