

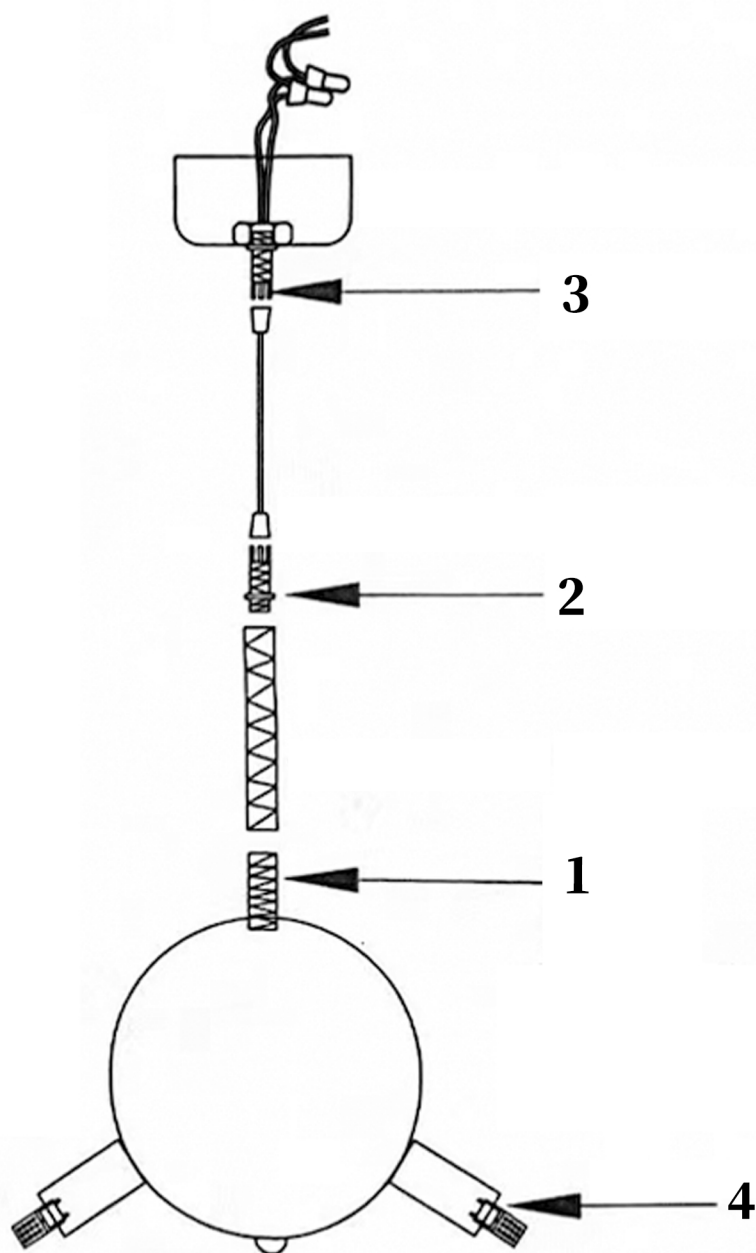



INSTALLATION GUIDE - WM2042

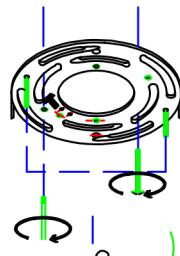


1. Screw the internal threaded tube onto the globe.
2. Clamp the wire with a screw and cap nut.
3. Connect the wire to canopy with a screw, cap nut and finger nut.
4. Screw the provided bulbs up.
5. Drill the mounting bracket into the ceiling with screws and even anchor bolts (these come with the light).
6. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
7. Align holes of the canopy with the mounting bracket and secure the canopy with screws or bolts and nuts.





5

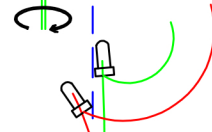

6

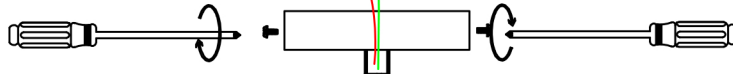


7

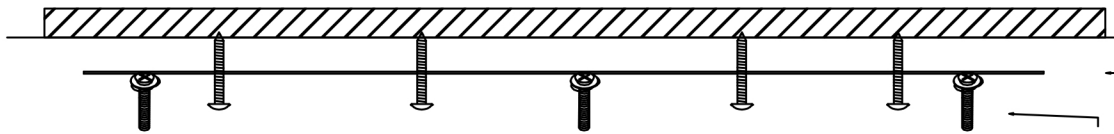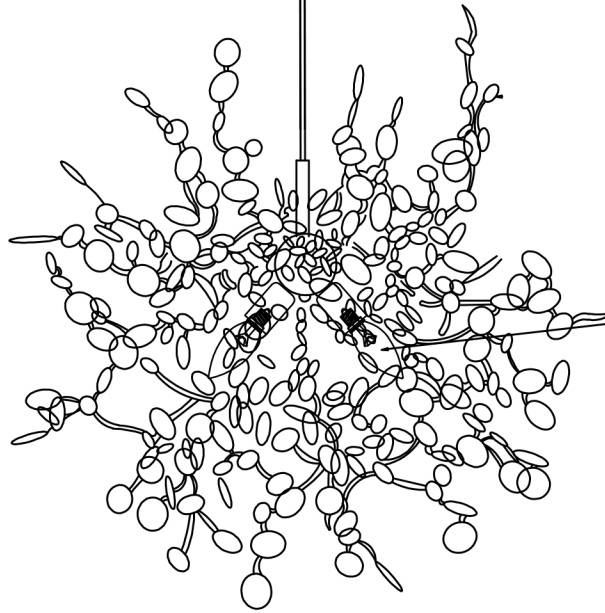

5



6



7

