

INSTALLATION GUIDE - WM2044

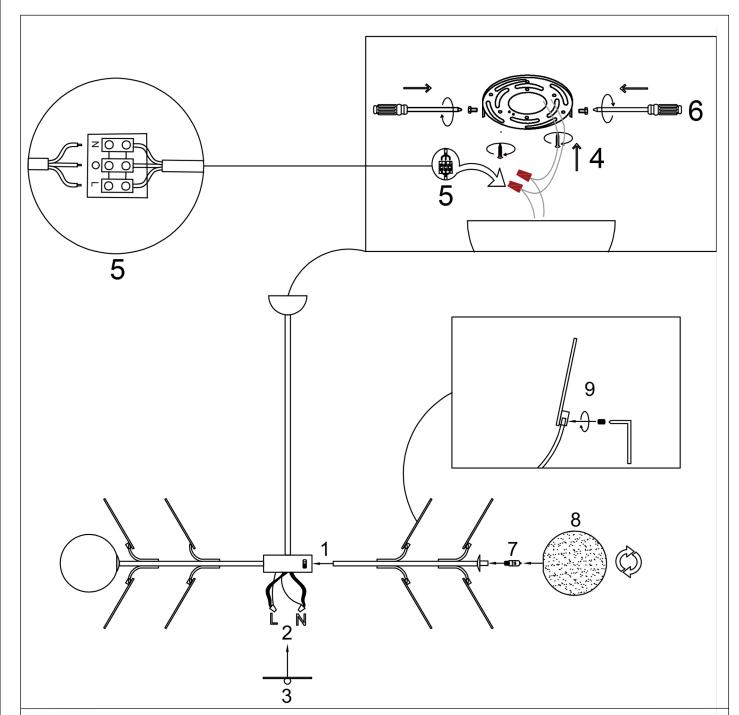

- 1. Drill the mounting bracket into the ceiling with screws and even anchor bolts (these come with the light).
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.
- 4. Attach the leaves to arms with screws.
- 5. Attach the arms to the holder with nuts.
- 6. Screw the cover up onto the holder.
- 7. Screw the included bulbs up into the arms.
- 8. Screw the lampshades up.

INSTALLATION GUIDE - WM2044

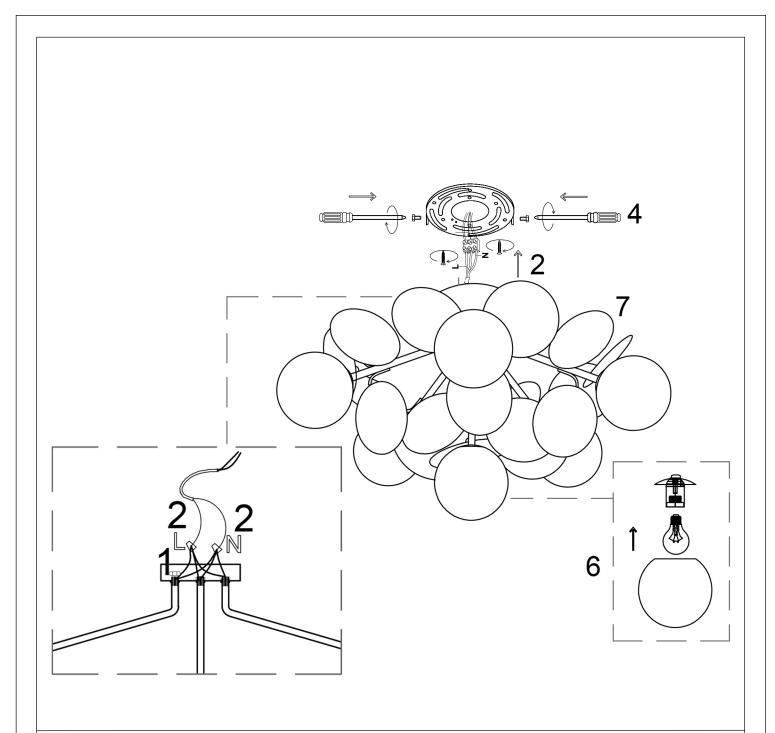

- 1. Drill the mounting bracket into the ceiling with screws and even anchor bolts (these come with the light).
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.
- 4. Attach the leaves to arms with screws.
- 5. Attach the arms to the holder with nuts.
- 6. Screw the included bulbs up into the arms.
- 7. Screw the lampshades up.

womolighting.com — contact@womolighting.com