
## **INSTALLATION GUIDE - WM2052**

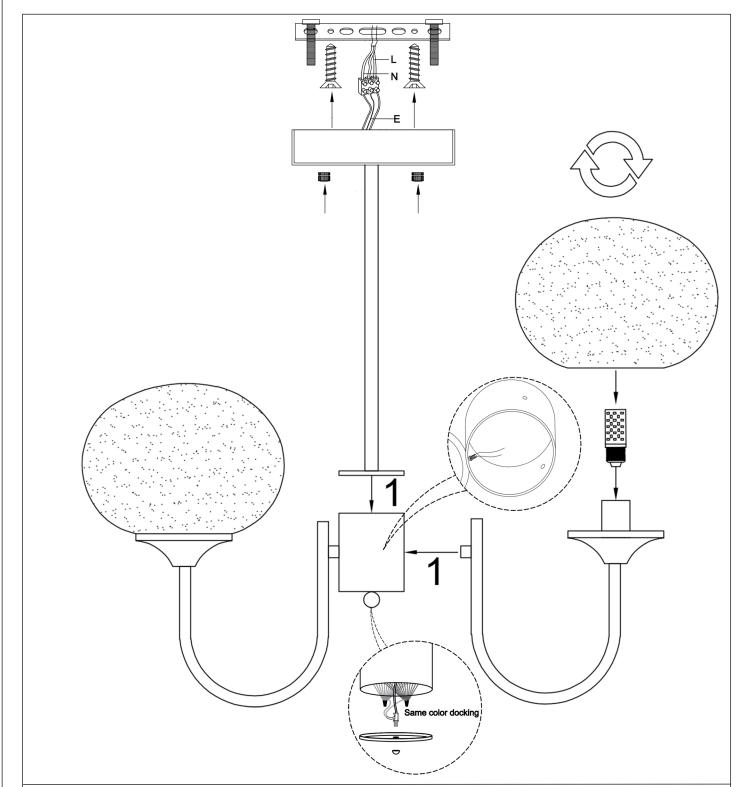

- 1. Attach the arms to the holder with nuts, and screw the bulbs and shades.
- 2. Use the wire cap nuts to connect those wires in same color and put the cover.
- 3. Drill the mounting bracket into the ceiling with screws and anchor bolts.
- 4. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 5. Align holes of the light with the mounting bracket and secure the light with screws.

womolighting.com — contact@womolighting.com