




# INSTALLATION GUIDE - WM2054

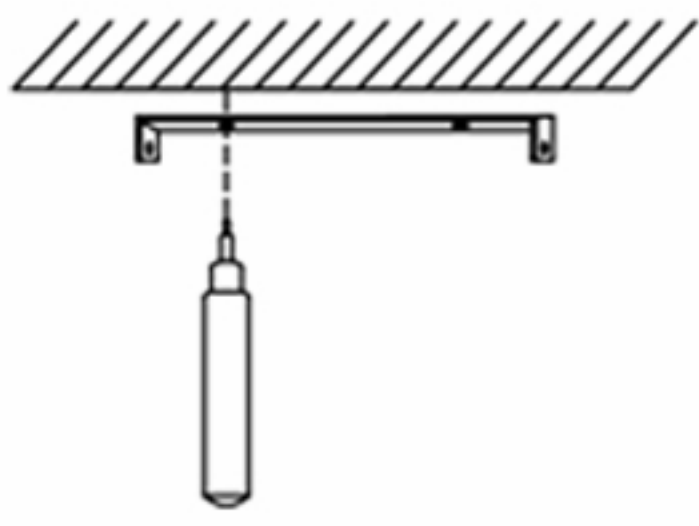


Step1: draw a mark on the ceiling with the hanging board as a reference.

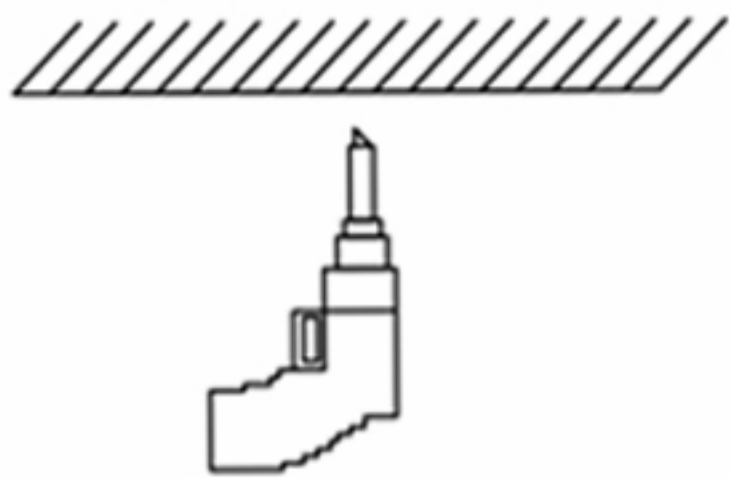


Step2: drill the hanging plate hole on the ceiling with an electric drill.

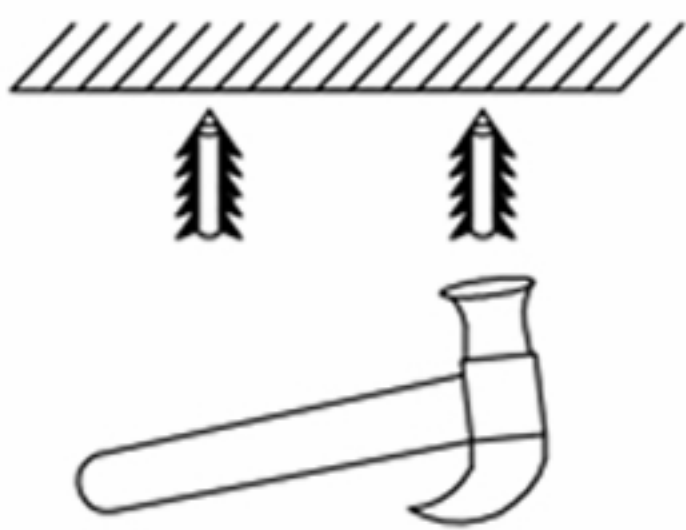

Step3: tap the expansion screw into the drilled hole

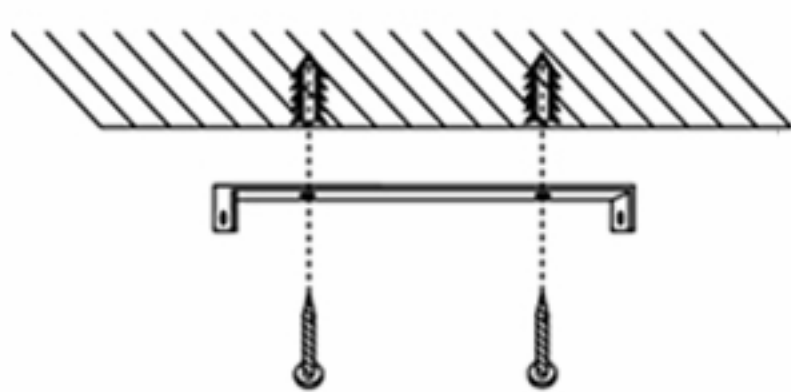

Step4: fix the hanging plate on the expansion screw and tighten it with nuts.

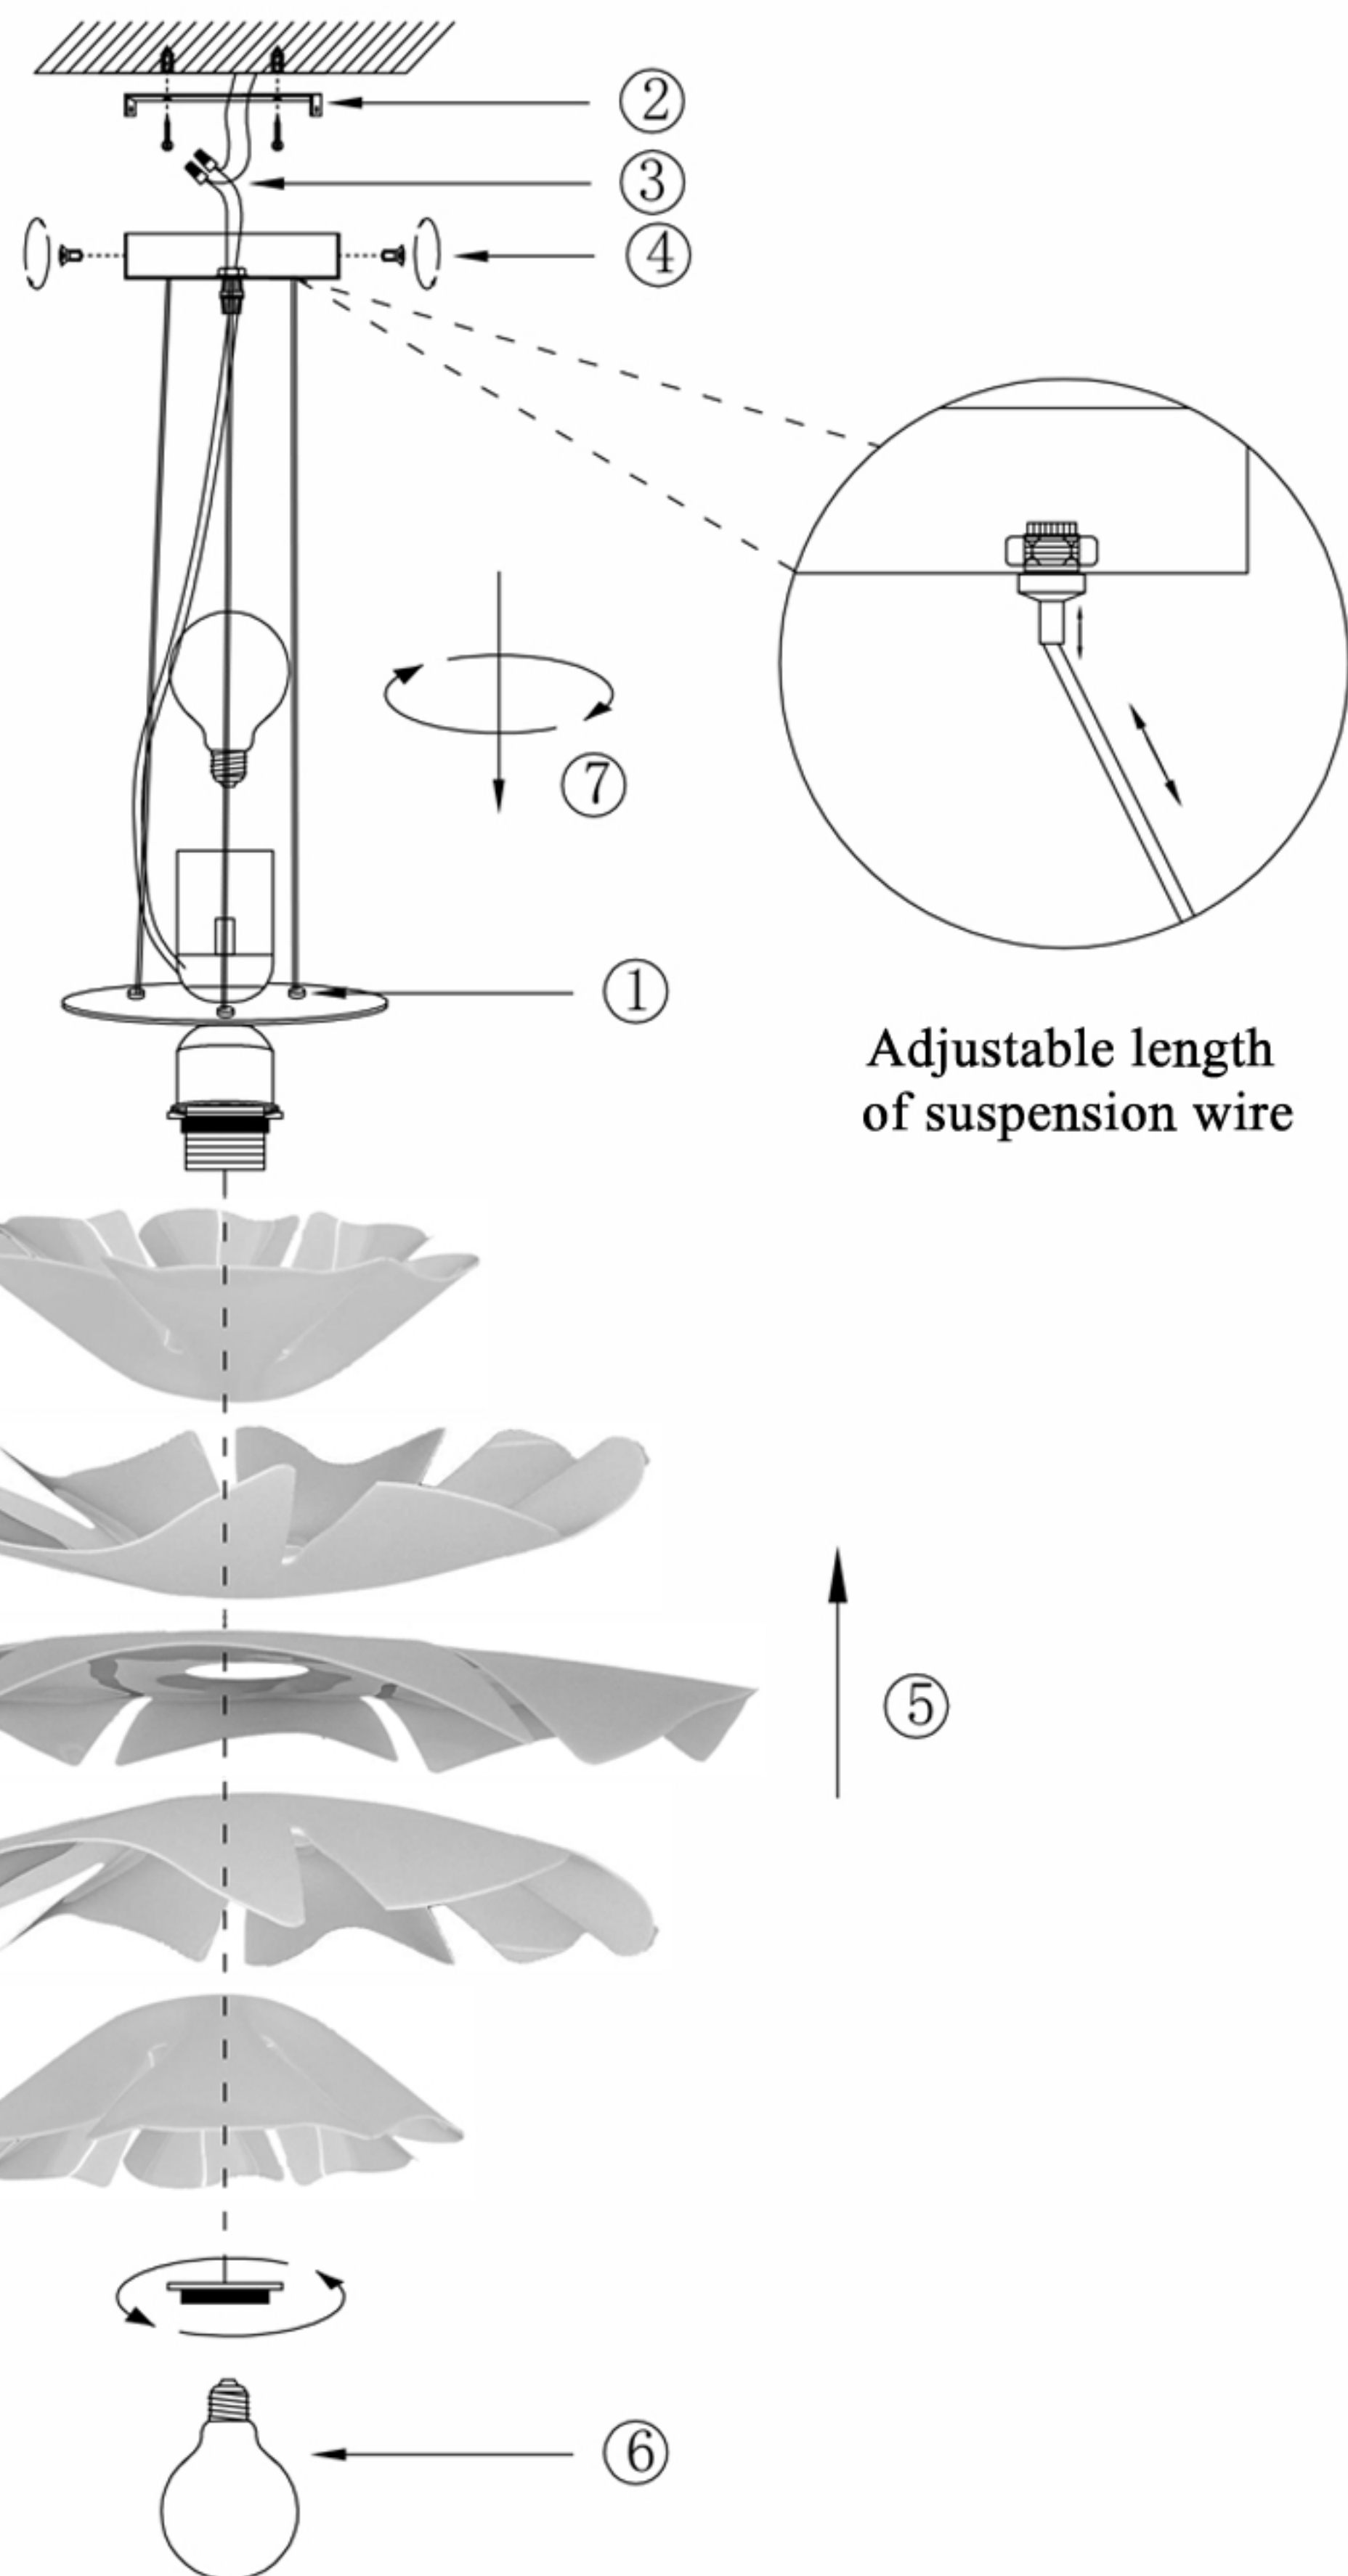

Adjustable length of suspension wire

1. Attach the mounting bracket to the ceiling with screws. If necessary, you can use screws and even wedge anchors (these come with the light) to drill the mounting bracket into the ceiling.
2. Attach the holder to canopy with cable grippers and nuts.
3. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
4. Align the canopy screw holes with the mounting bracket and secure the canopy with screws.
5. Arrange the lampshades as the picture shown and put them together with a nut.
6. Screw the included bulbs up, turn the power back on and flip on the light switch to test your light.