



INSTALLATION GUIDE - WM2058


1

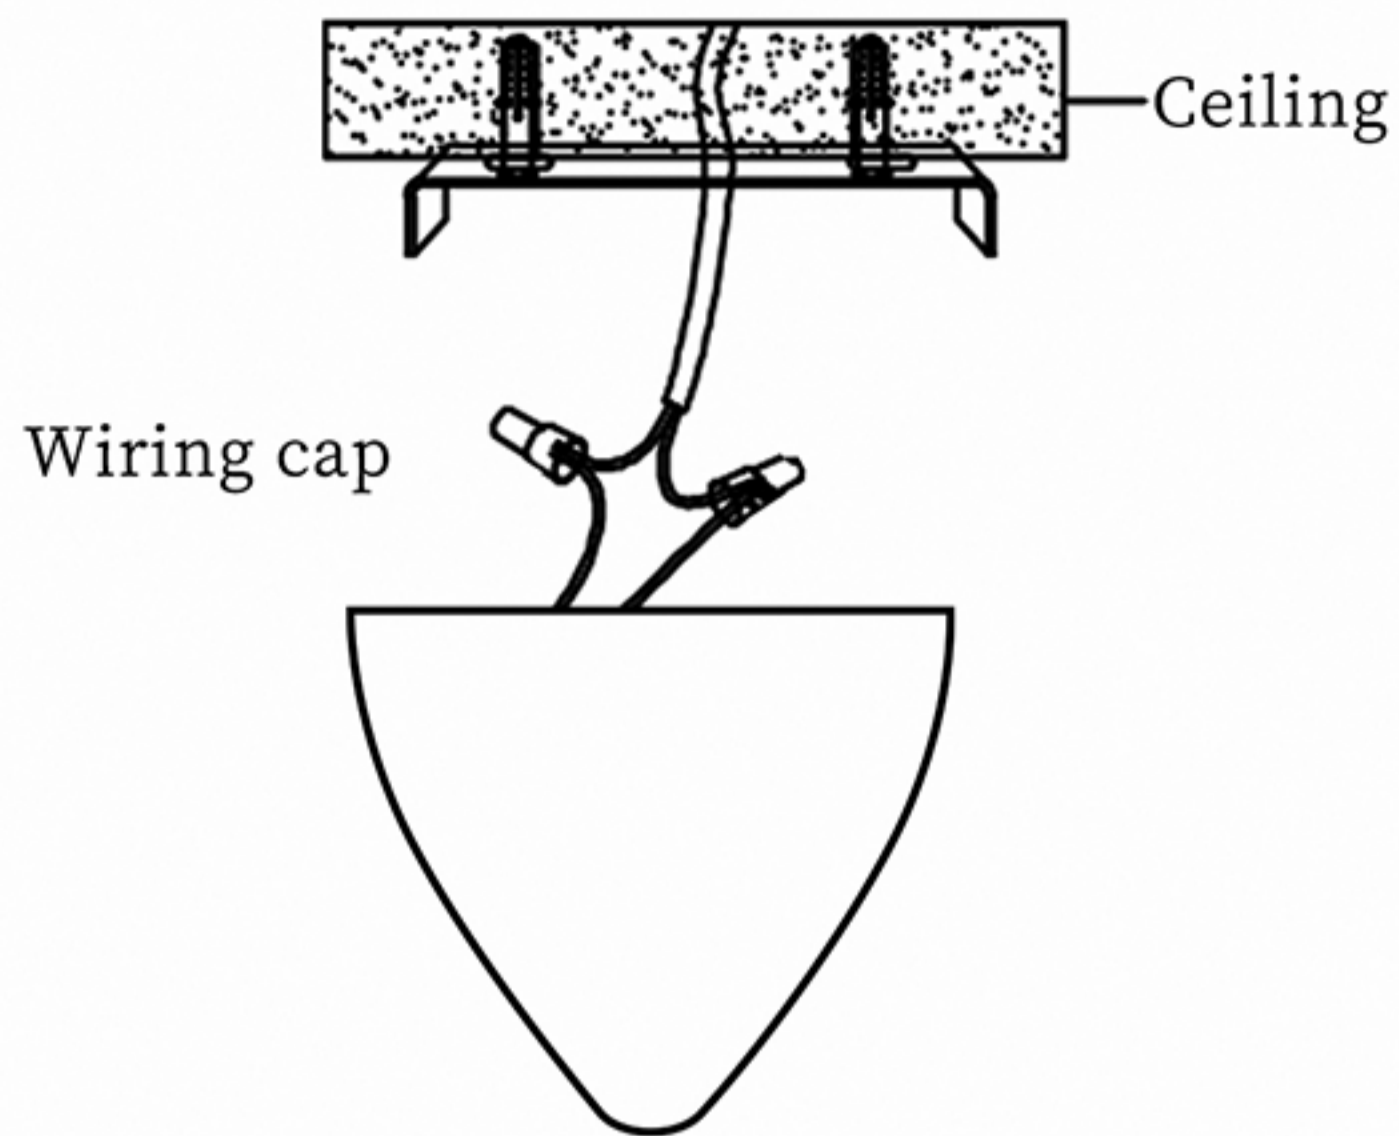


2

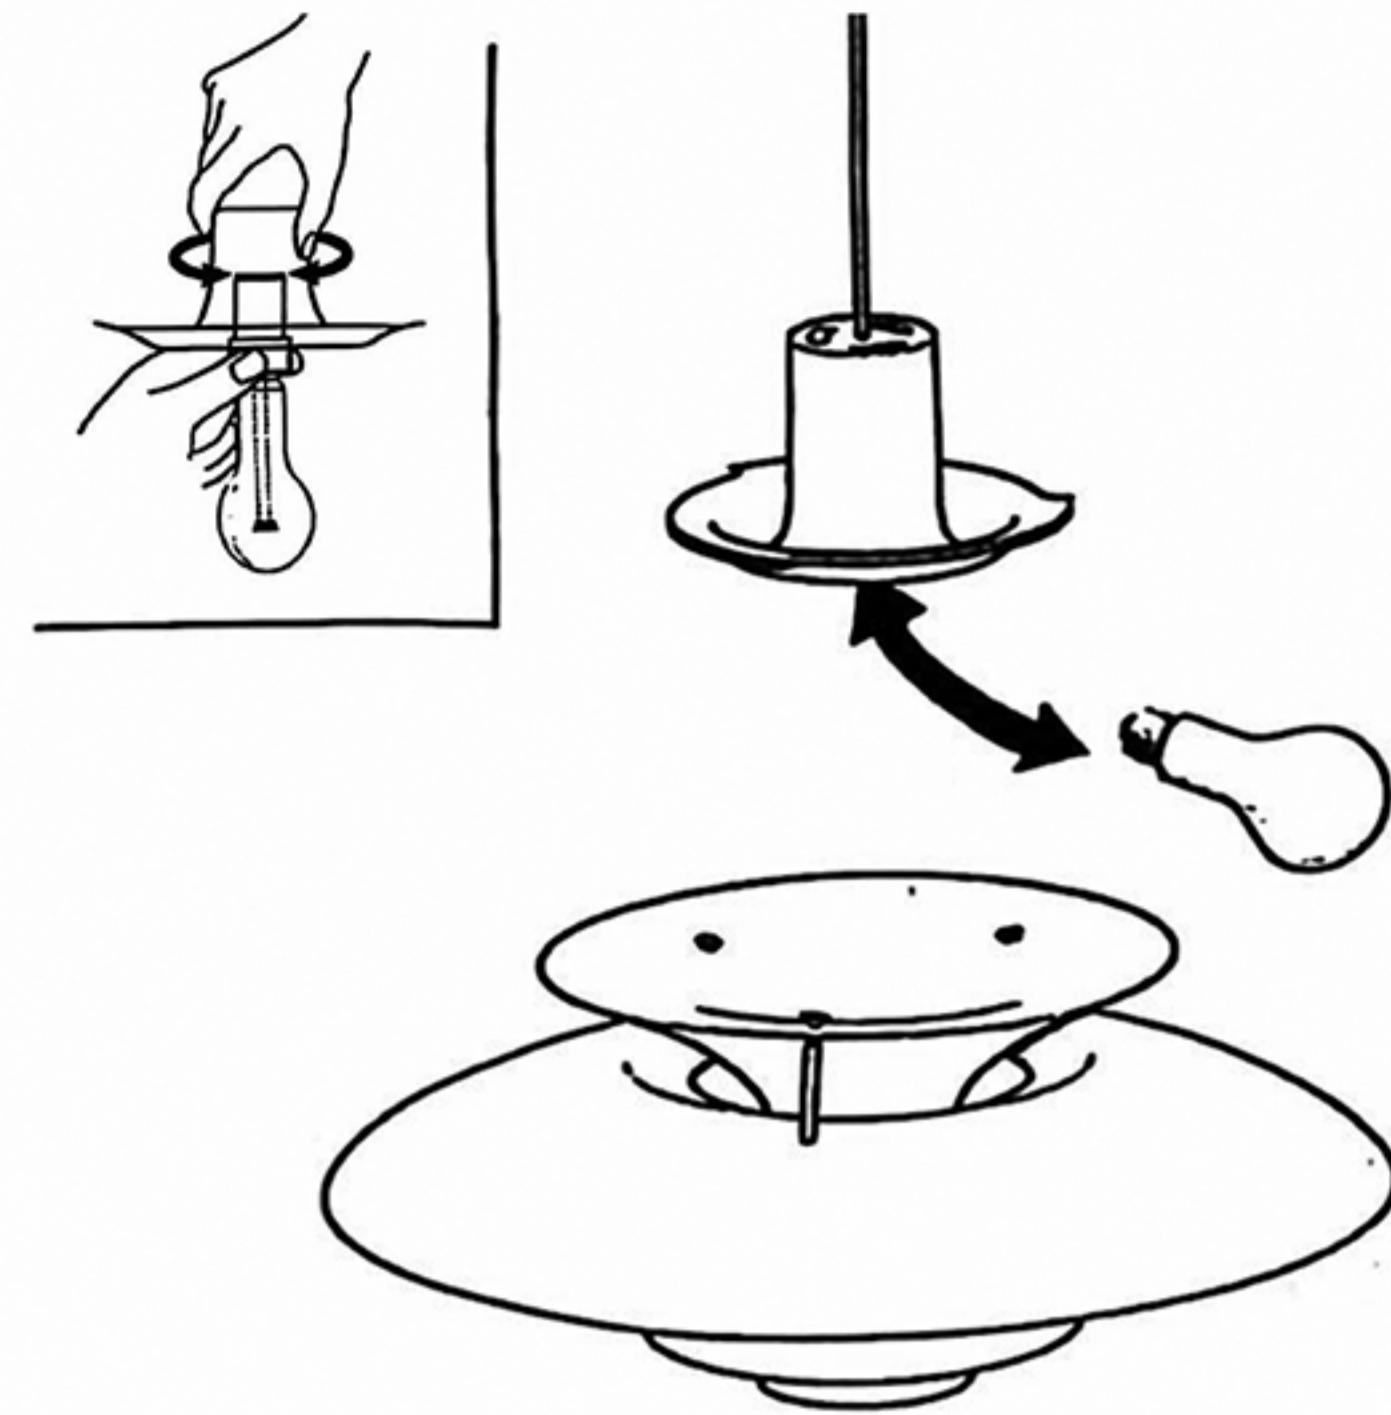

3

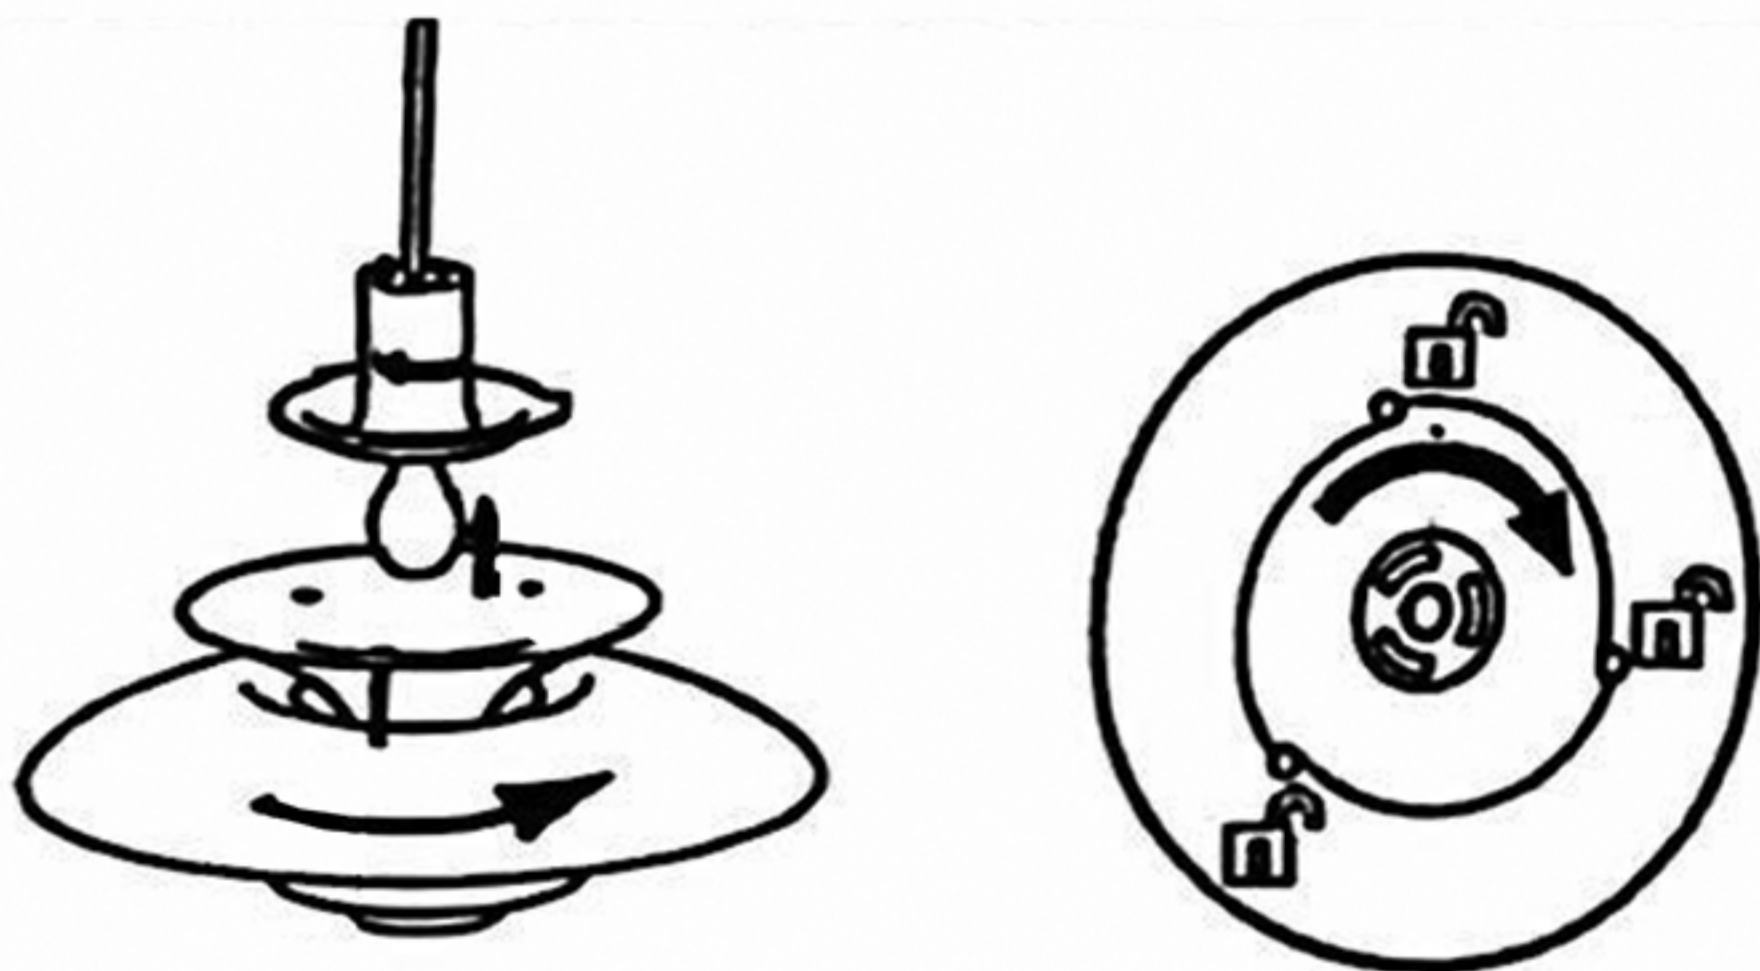

4

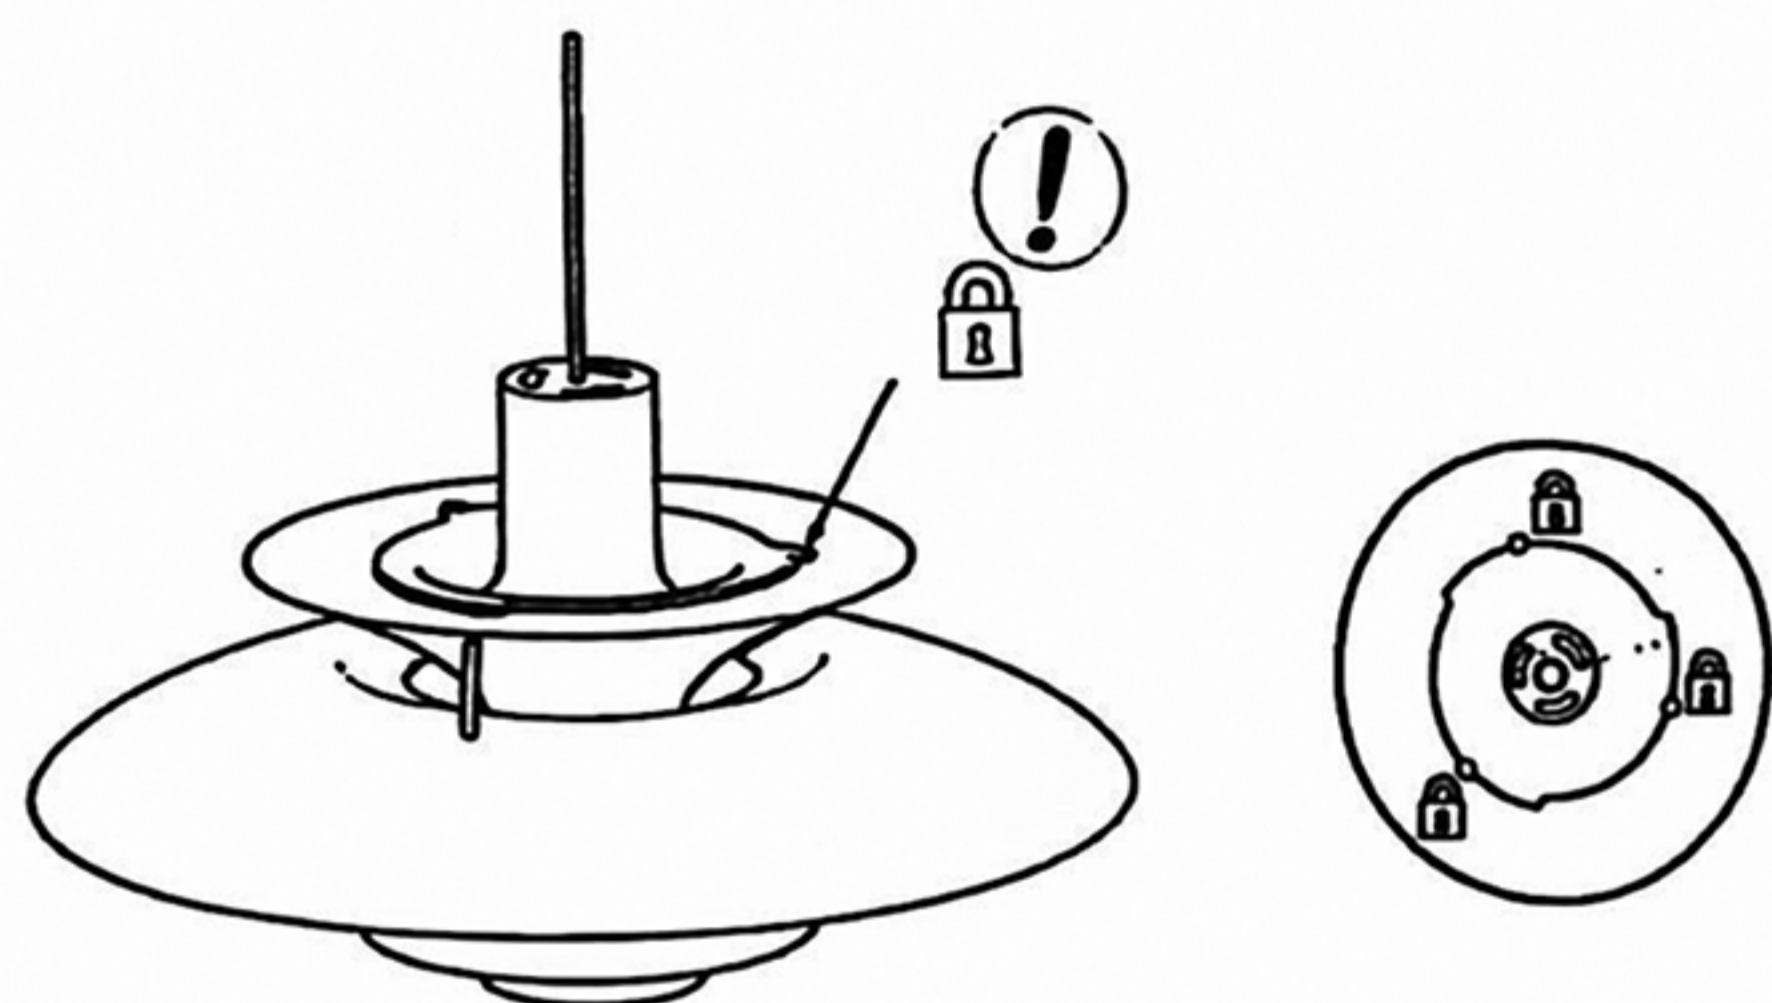

1. Attach the mounting bracket to the ceiling box with screws. Use the wire connectors to connect the wires of the light to the supply wires according to labels on the wires, and then attach the canopy to the mounting bracket.
2. Screw the provided bulb up into the socket.
3. Screw the socket down into the lampshade clockwise.
4. Turn the power back on and flip on the light switch to test your light.