
INSTALLATION GUIDE - WM2059

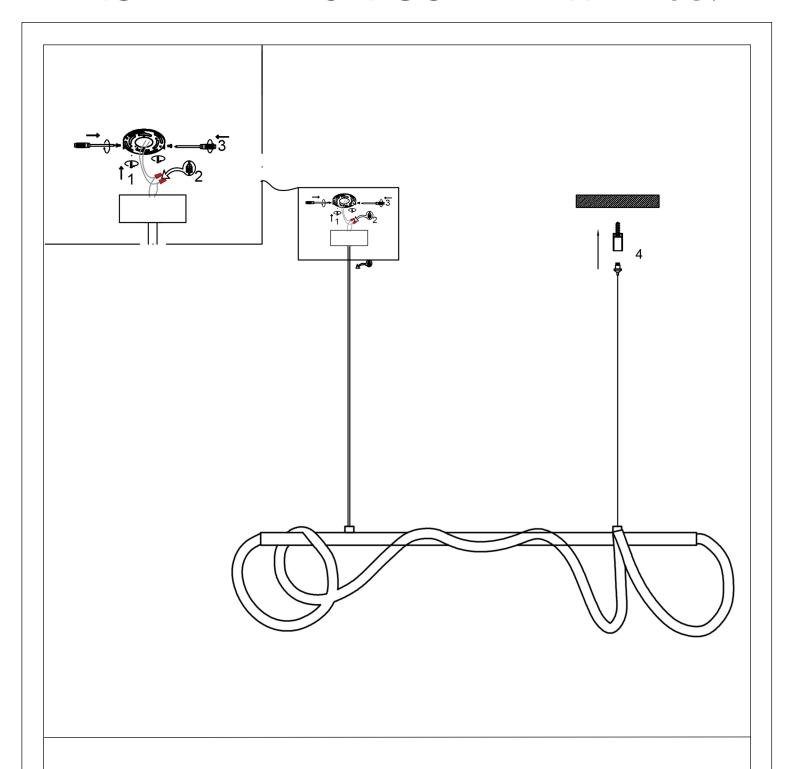

- 1. Attach the mounting bracket to the ceiling box with screws.
- 2. Use the wire connector to connect the wires of the light to the reserved wires according to labels on the wires.
- 3. Align the base screw holes with the mounting brackets and secure the base with screws.
- 4. Use screws and even wedge anchors (these come with the light) to fix the locking nuts on the ceiling, Screw cord grippers up and thread into these.
- 5. Turn the power back on and flip on the light switch to test your light.

womolighting.com _____ contact@womolighting.com