


Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

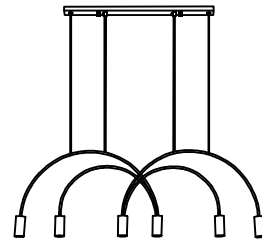

Product style diagram


Steps of installation

1

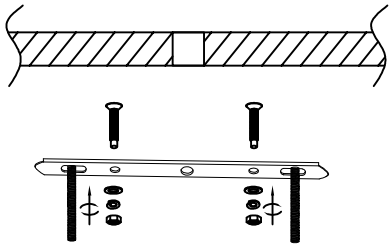


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

2

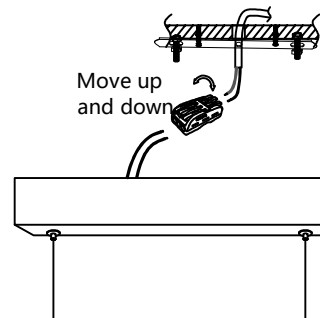


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)

3

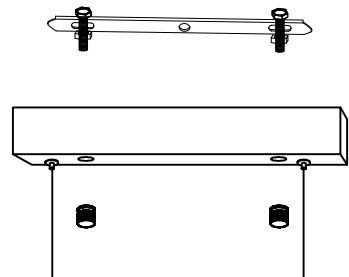

Align the bottom holes on the top cover with the screws on the mounting plate, and then tighten them with a wing nut.

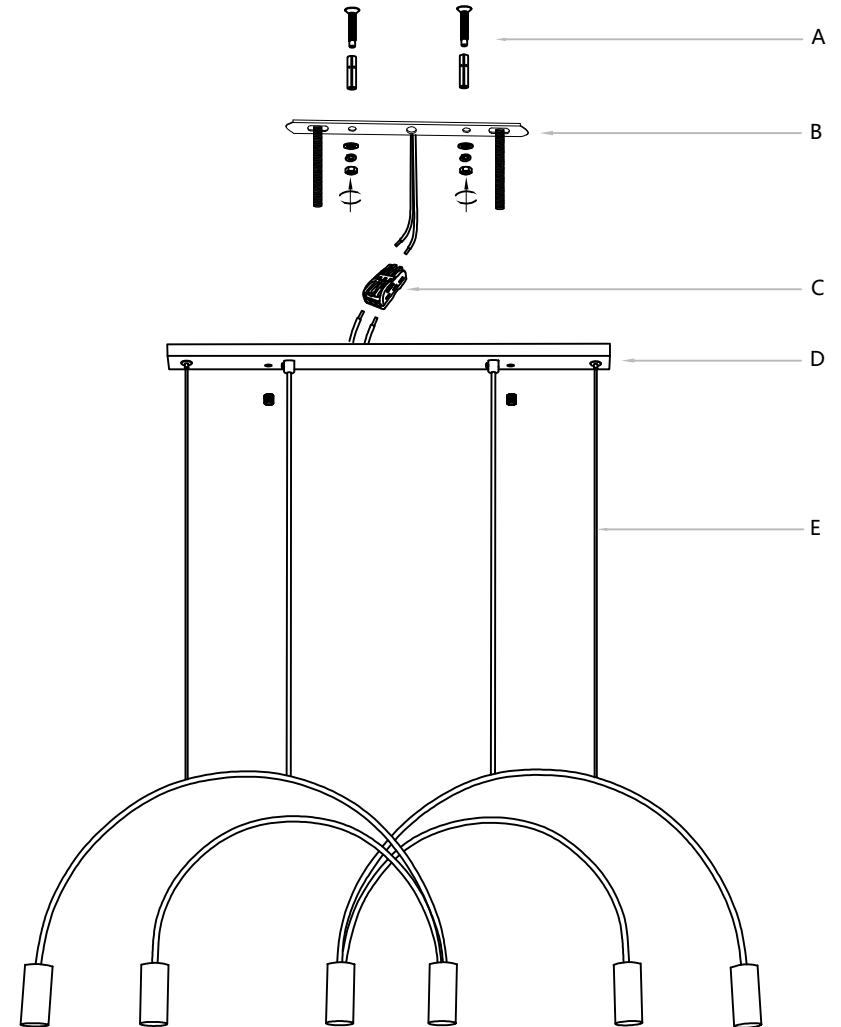

First, install the wires (E) on the lamp arm bracket onto the top cover (D), drive the expansion screws (A) into the ceiling. Then, fix the installation plate (B) onto the screws. Then, connect the top cover (D) and the reserved wires on the ceiling to the terminal block (C). Finally, install the holes on the top cover (D) onto the screws on the installation plate (B), and then lock them with nuts.


Installation Instructions

WOMO lighting

Model number: WM2063-8


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

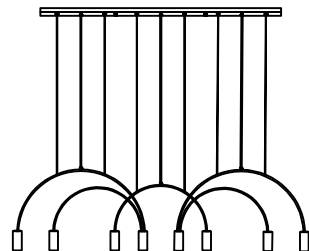


Product style diagram


Steps of installation

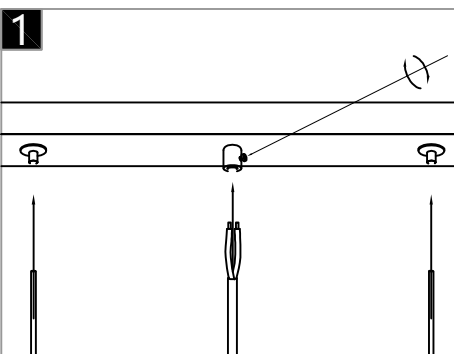


First, pass the wire through the locking piece , adjust the length and then tighten the screw.

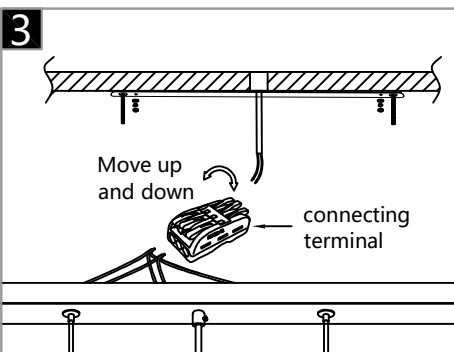


Afterwards, connect the wires of the chassis and the ceiling wires using the terminal block.

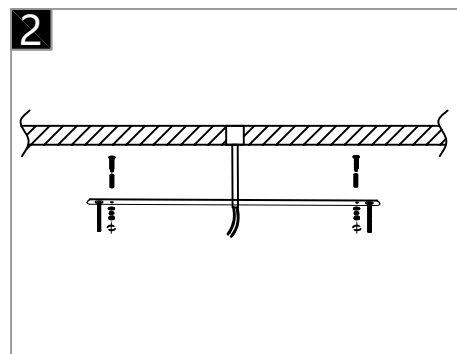

Then, fix the mounting plate to the ceiling.

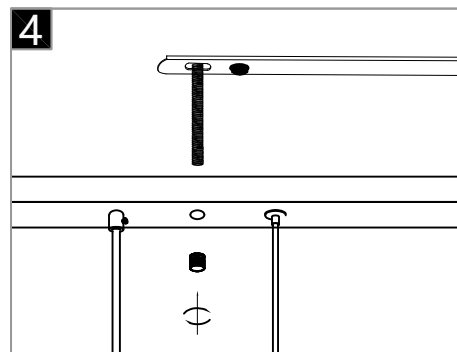

Finally, align the holes on the chassis with the threaded rod on the mounting plate , and tighten the nut .

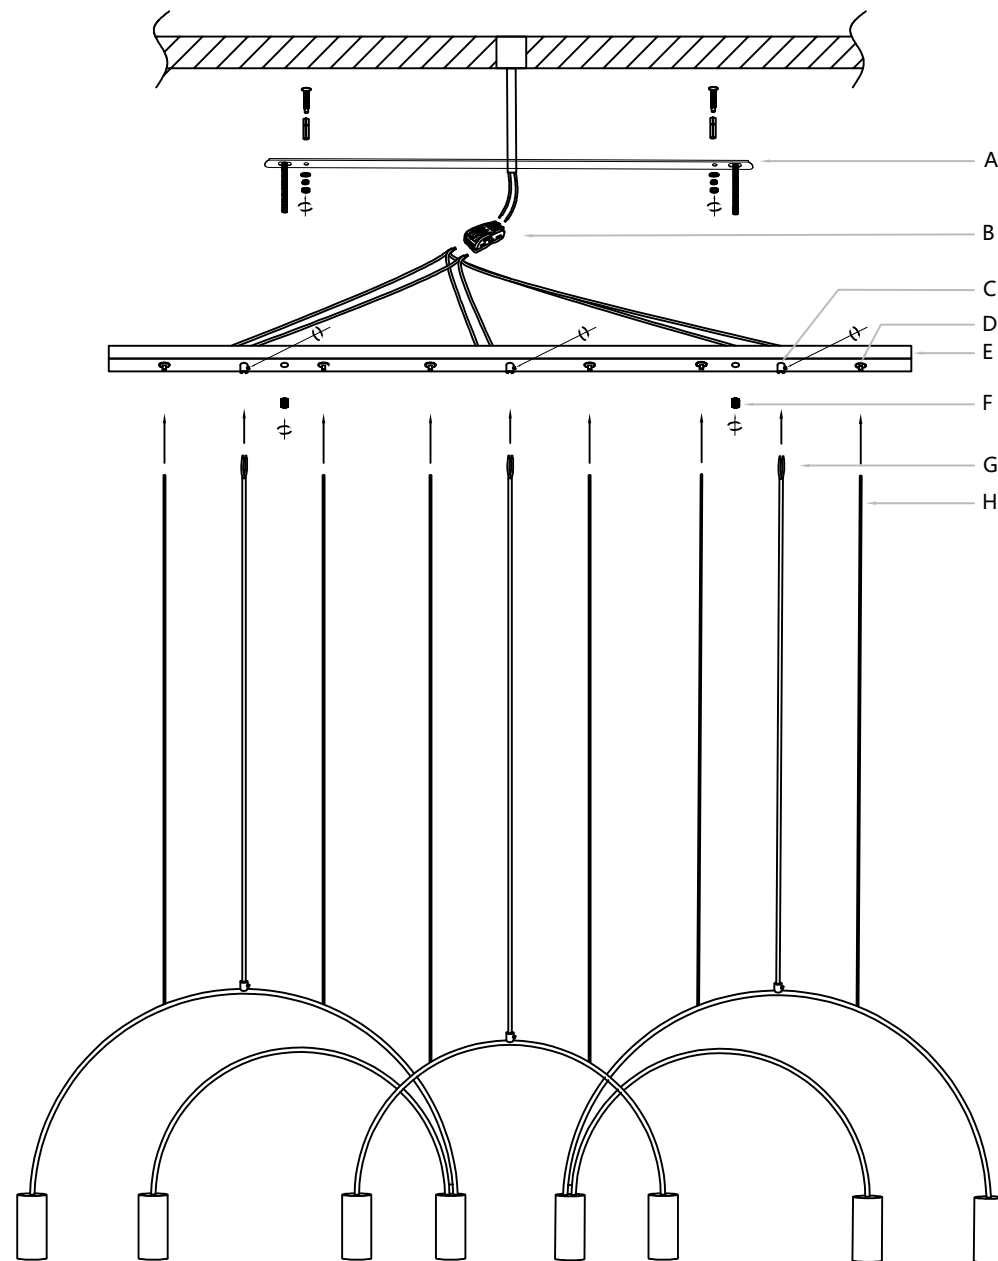

First, pass the wire (G) through the locking piece (C), adjust the length and then tighten the screw. Next, pass the steel wire rope (H) through the telescopic head (D) and adjust the length. Then, fix the mounting plate (A) to the ceiling, and connect the wires of the chassis (E) and the ceiling wires using the terminal block (B). Finally, align the holes on the chassis (C) with the threaded rod on the mounting plate (A), and tighten the nut (F).