


Installation Instructions

WOMO® Lighting

Model number: WM2081-4


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

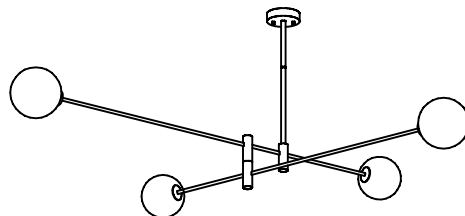


Product style diagram


Steps of installation

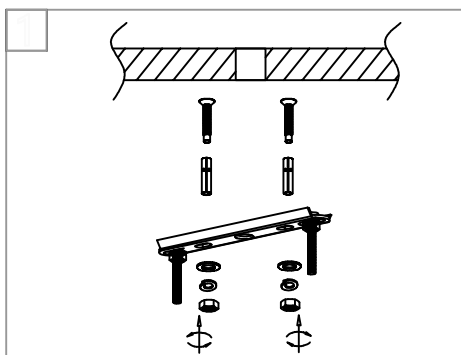


Install the mounting plate onto the ceiling.

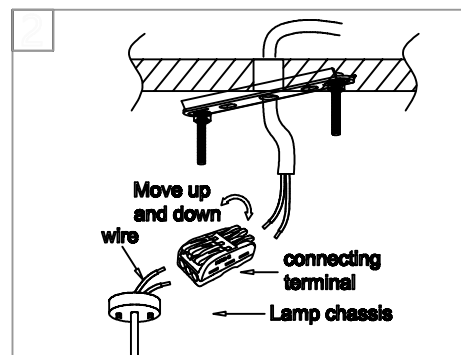


Use the quick connector to connect the wires of the top cover with those of the ceiling.

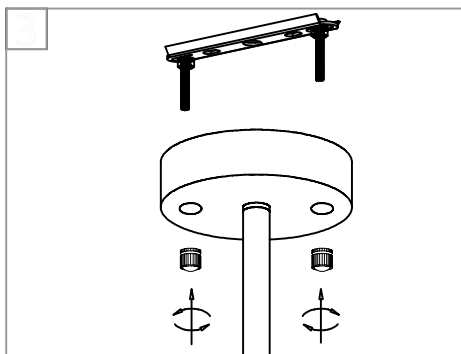

Align the holes of the top cover with the threaded rod of the mounting plate, and tighten the nut.

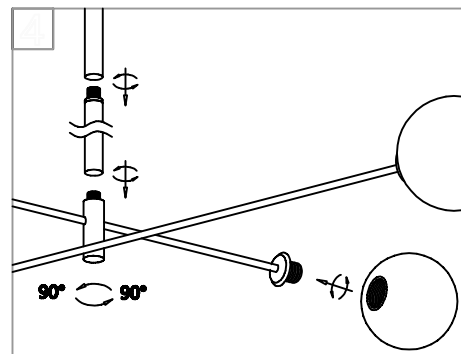


Assemble the lamp pole, then install the lamp pole in the middle of the lamp body and the top cover. Next, align the threads of the spherical lampshade with the threads of the lamp head and tighten them. (Some lamp bodies can rotate 90°)

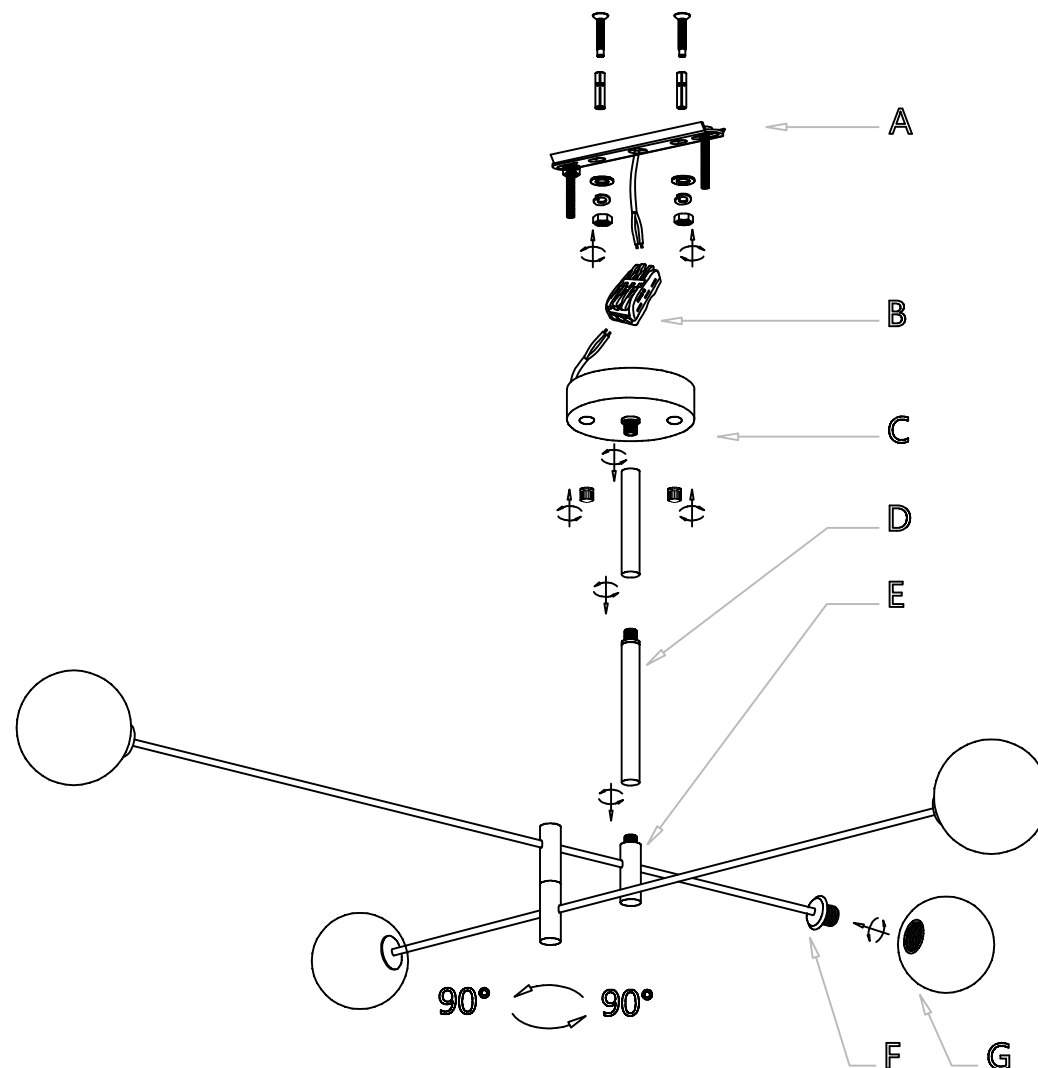


First, assemble the lamp pole (D), then install the lamp pole (D) in the middle of the lamp body (E) and the top cover (C). Next, install the mounting plate (A) on the ceiling. Then, use the quick connector (B) to connect the wires of the top cover (C) to the wires of the ceiling. Then, align the holes of the top cover (C) with the threaded rod of the mounting plate (A) and tighten the nut. Then, install the bulb onto the lamp head (F). Next, align the threads of the spherical lampshade (G) with the threads of the lamp head (F) and tighten. (Some lamp bodies can rotate 90°)

Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

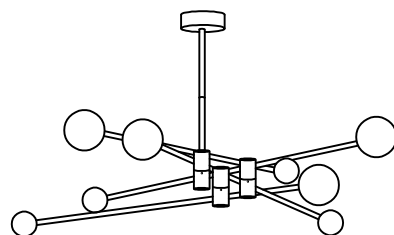


Product style diagram

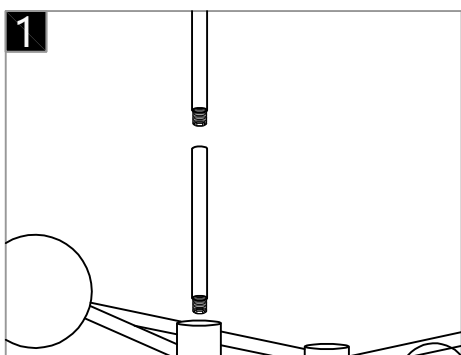


Pass the lamp body wires through the connecting rod, then join them together, and then lock the entire assembly onto the top cover.

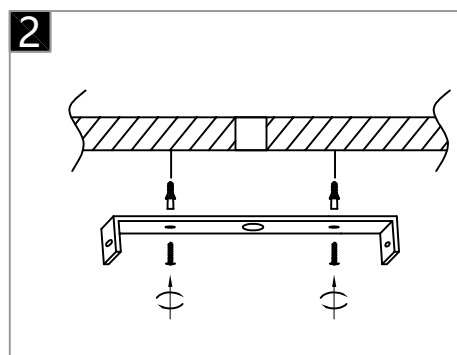


Fix the installation board to the ceiling using self-tapping screws.

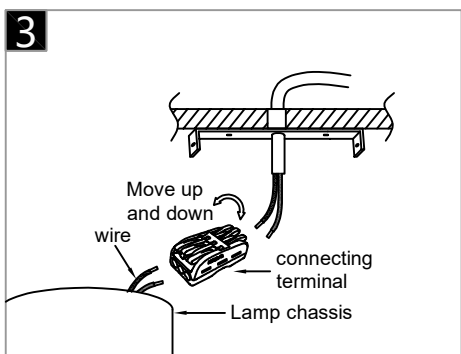

Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

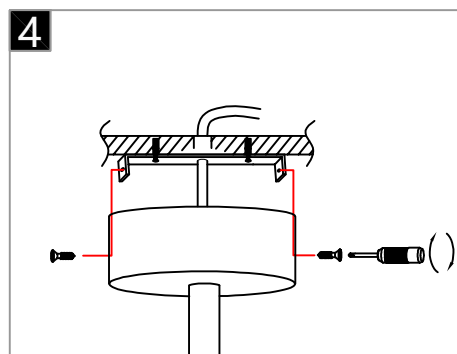

Align the holes on the top cover with the holes on the mounting plate, and then secure them with screws.

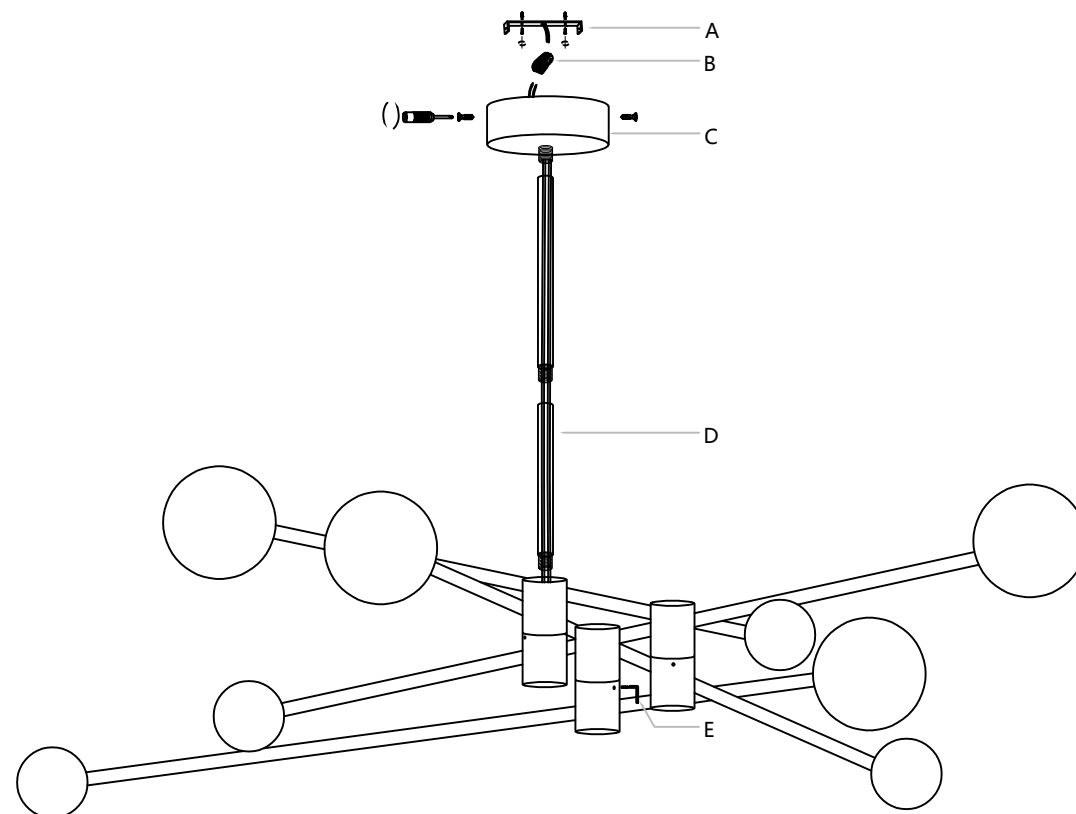

Pass the lamp body wires through the upper and lower connecting rods (D), then join them together, then lock the entire assembly onto the top cover, and then loosen the screws with a hexagonal wrench (E), rotate the lamp body bracket to achieve the desired shape. Fix the mounting plate (A) to the ceiling. Next, connect the wires reserved for the top cover (C) to the wires on the ceiling, and then connect them to the terminal block (B). Then, align the holes on the top cover (C) with the holes on the mounting plate (A), and tighten the screws.