


INSTALLATION GUIDE - WM2084

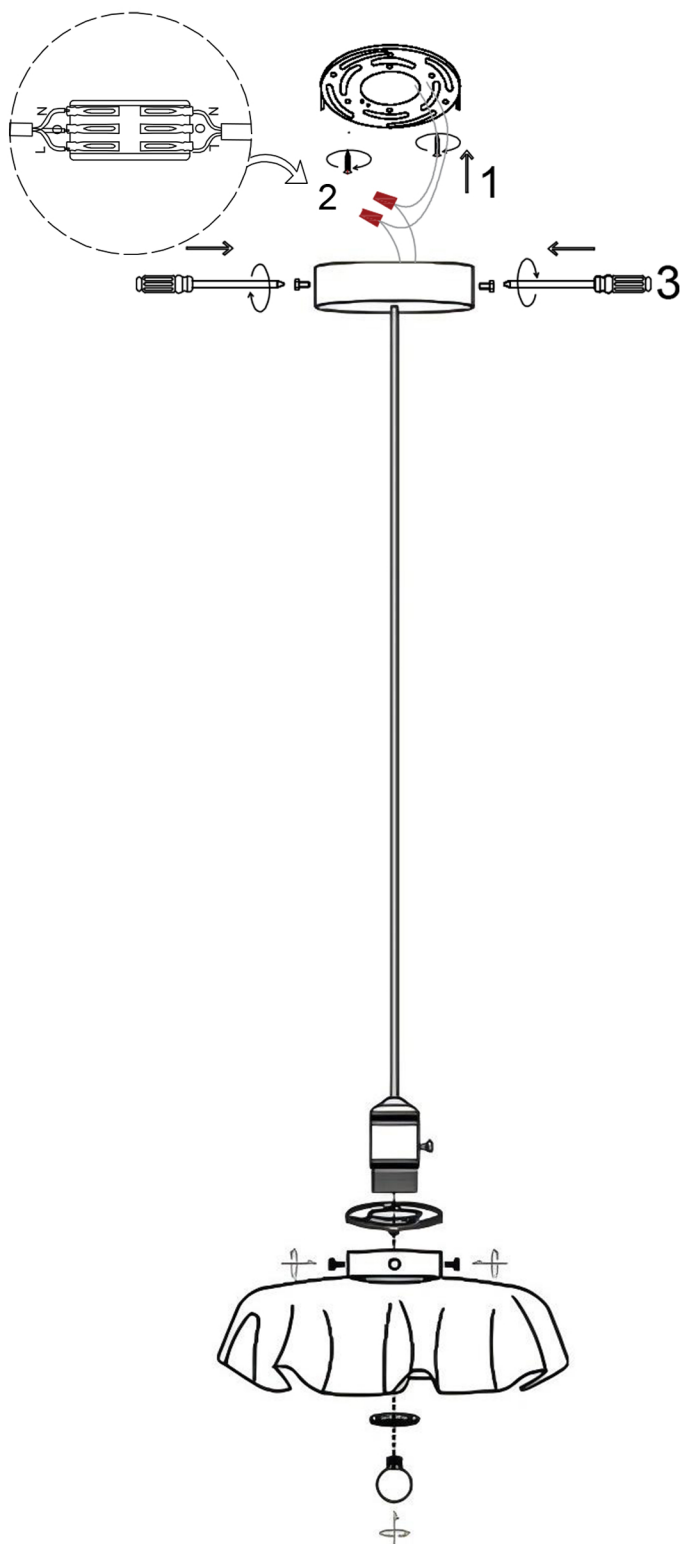

- 1. Drill the mounting bracket into the ceiling with screws.**
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.**
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.**
- 4. Drive the screws to clamp the lampshade and screw the bulb up.**