


INSTALLATION GUIDE - WM2102C

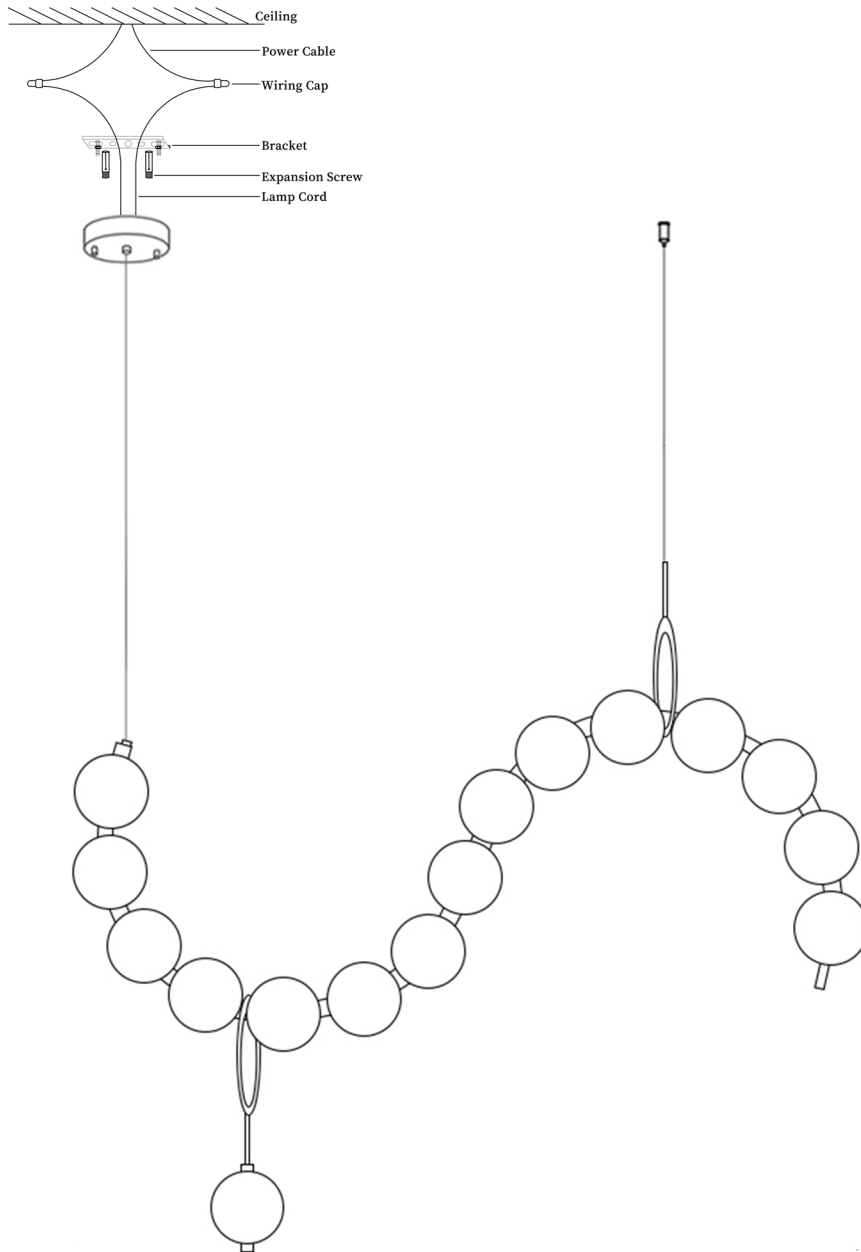

Installation steps

1. Attach the mounting bracket to the ceiling box with screws.
2. Use the wire connector to connect the wires of the light to the reserved wires according to labels on the wires.
3. Align the base screw holes with the mounting brackets and secure the base with screws.
4. Use screws and even wedge anchors (these come with the light) to fix the locking nuts on the ceiling, Screw cord grippers up and thread into these.
5. Turn the power back on and flip on the light switch to test your light.