


INSTALLATION GUIDE - WM2108

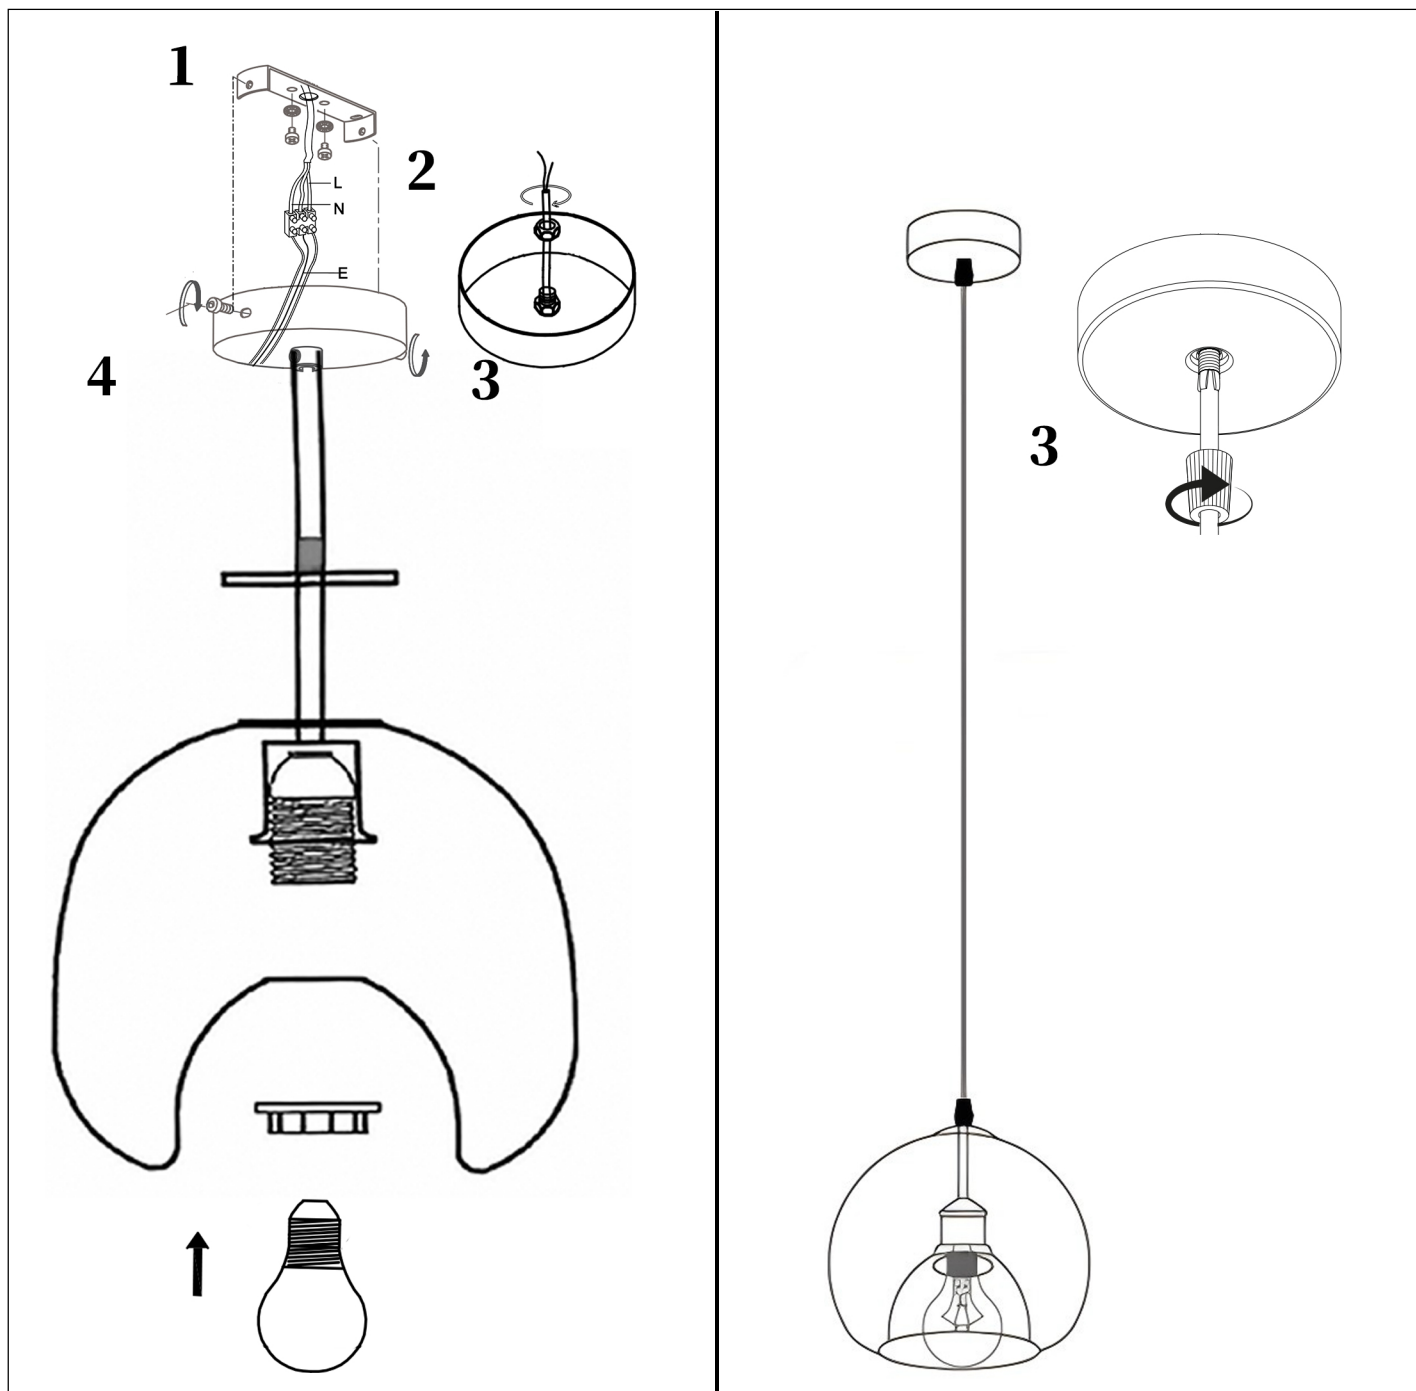

- 1. Drill the mounting bracket into the ceiling with screws and anchor bolts (these come with the light).**
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.**
- 3. Attach the down-rod to the canopy with nut or clamp the cord with a screw and nut.**
- 4. Align holes on the side of the canopy with the mounting bracket and secure the canopy with screws.**
- 5. Turn the power back on and flip on the light switch to test your light.**