


INSTALLATION GUIDE - WM2111

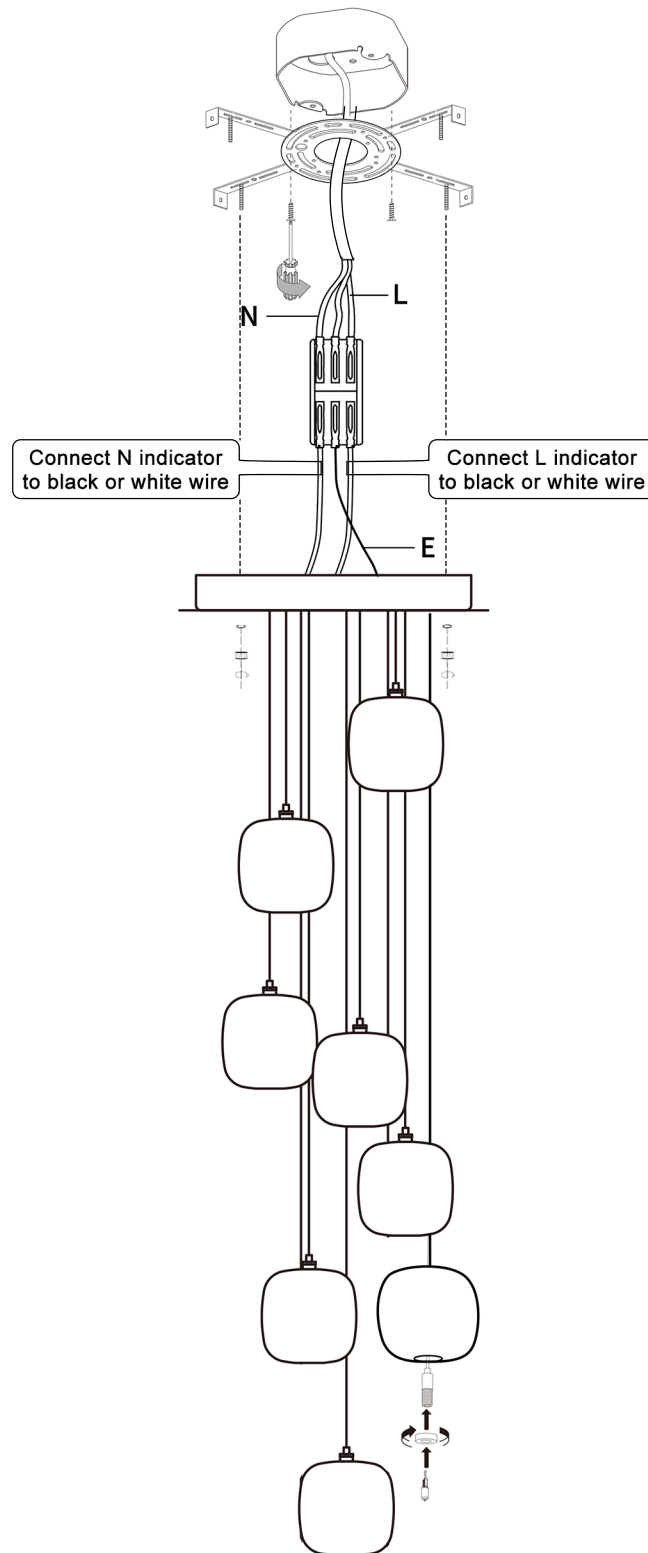

- 1. Attach the mounting bracket into the ceiling box with screws and even anchors.**
- 2. Attach the glass shades to the wires with nuts.**
- 3. Use the wire connector to connect wires of the light to the supply wires as indicated on the labels.**
- 4. Attach the canopy to the mounting bracket with cap nuts.**