


INSTALLATION GUIDE - WM2149

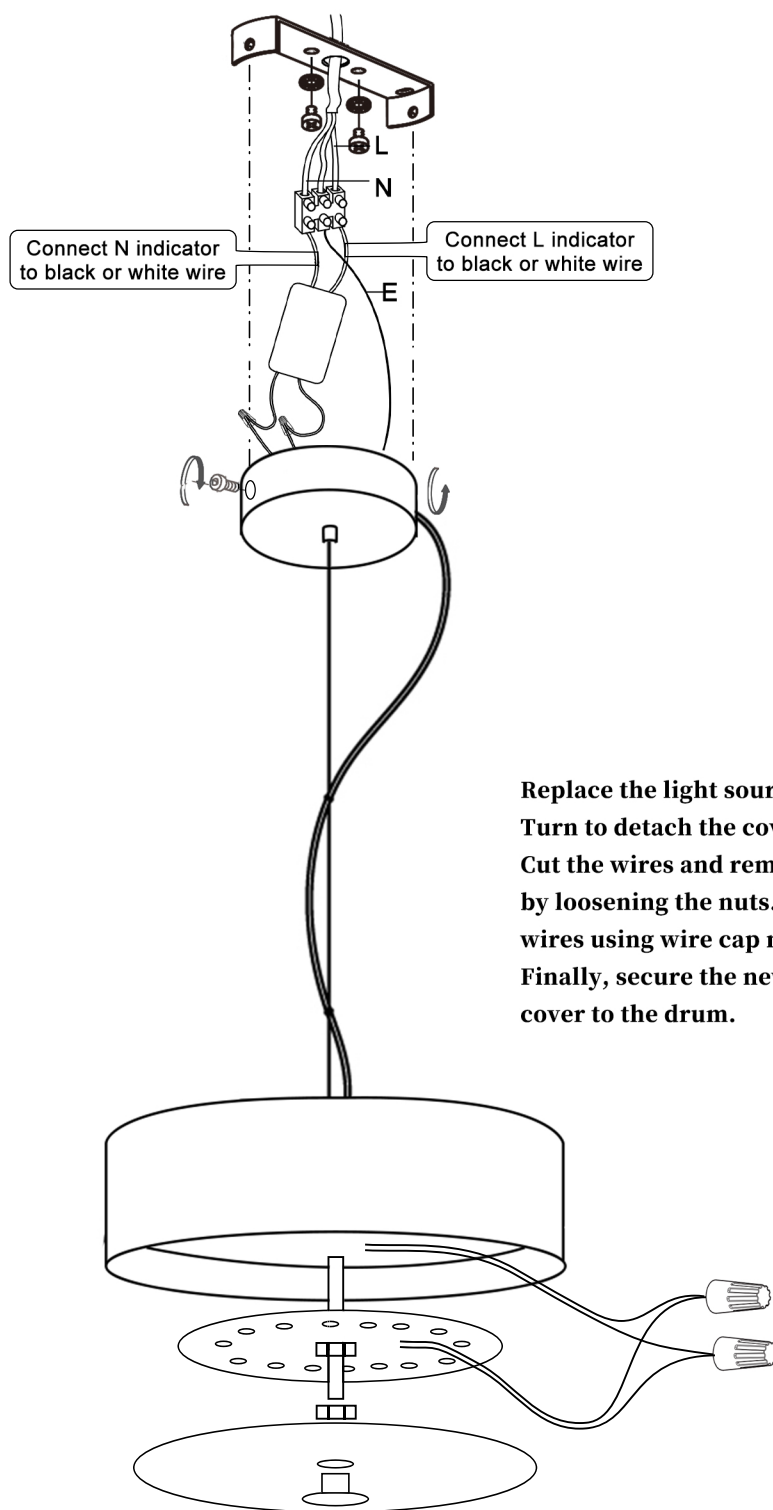

1. Drill the mounting brackets into the ceiling box with screws.
2. Use the wire connector to connect the driver to the supply wires as indicated on the labels.
3. Attach the canopy to mounting bracket with screws.
4. Turn the power back on and flip on the light switch to test your light.