


INSTALLATION GUIDE - WM2184

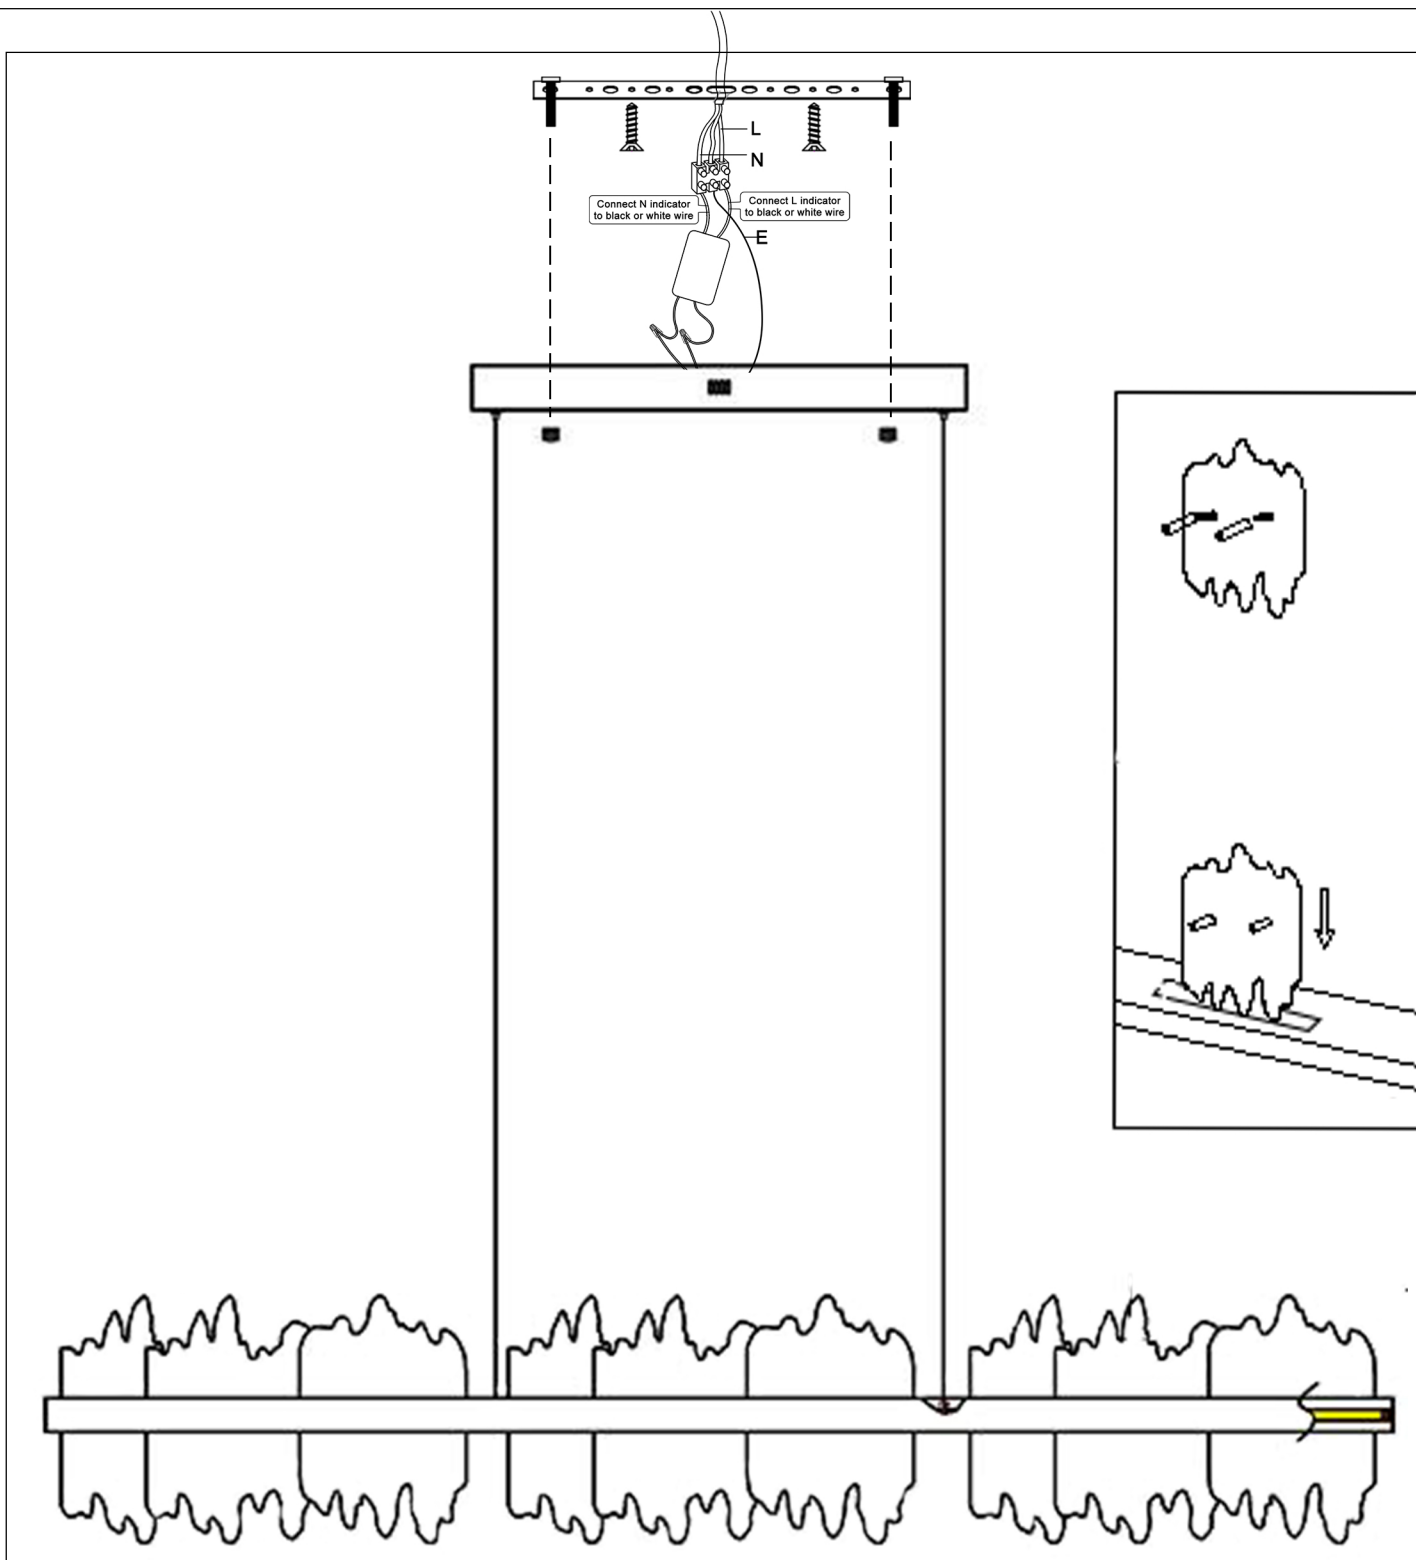

- 1. Drill the mounting bracket into the ceiling with screws and even anchors.**
- 2. Use the wire connector to connect the driver to the supply wires according to labels on the wires.**
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.**
- 4. Put each metal piece into fixture and fix them with pins.**
- 5. Turn the power back on and flip on the light switch to test your light.**