


INSTALLATION GUIDE - WM2255

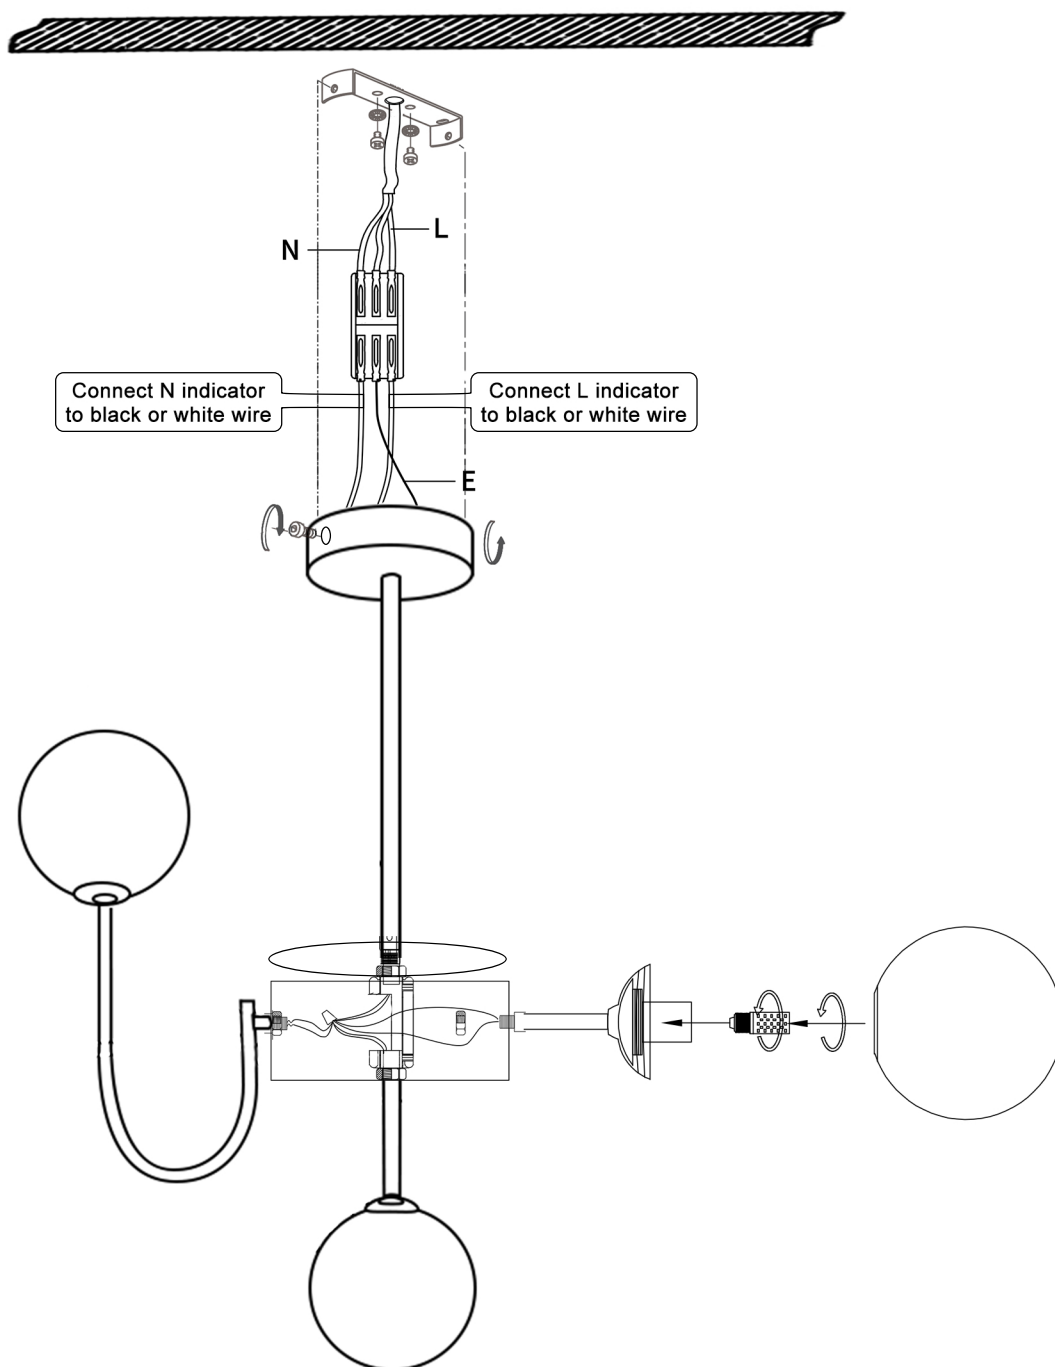

- 1. Drill the mounting bracket into the ceiling with screws and even anchor bolts (these come with the light).**
- 2. Attach the arms to the holder with finger nuts, and use the cap nuts to connect the wires out of arms to the main wire.**
- 3. Screw the metal connector onto the downward arm, and screw the shorter thread and a finger nut off the metal connector, fix the cover onto holder with finger nut and screw the shorter thread into the metal connector.**
- 4. Let the main wire going through the shorter thread, downrod and canopy, screw the downrod into the shorter thread and canopy.**
- 5. connect the wires of the arms to the supply wires according to labels, align holes of the canopy with the mounting bracket and secure the canopy with screws.**