
INSTALLATION GUIDE - WM2312

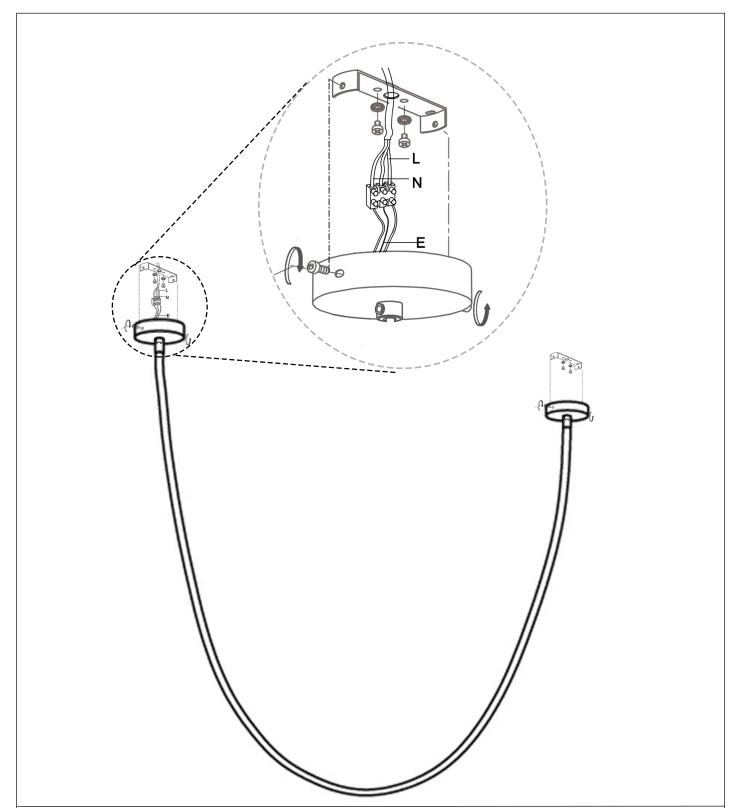

- 1. Drill the mounting brackets into the ceiling with screws and anchor bolts.
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the base with the mounting bracket and secure the base with screws.
- 4. Turn the power back on and flip on the light switch to test your light.

womolighting.com — contact@womolighting.com