


# INSTALLATION GUIDE - WM2508

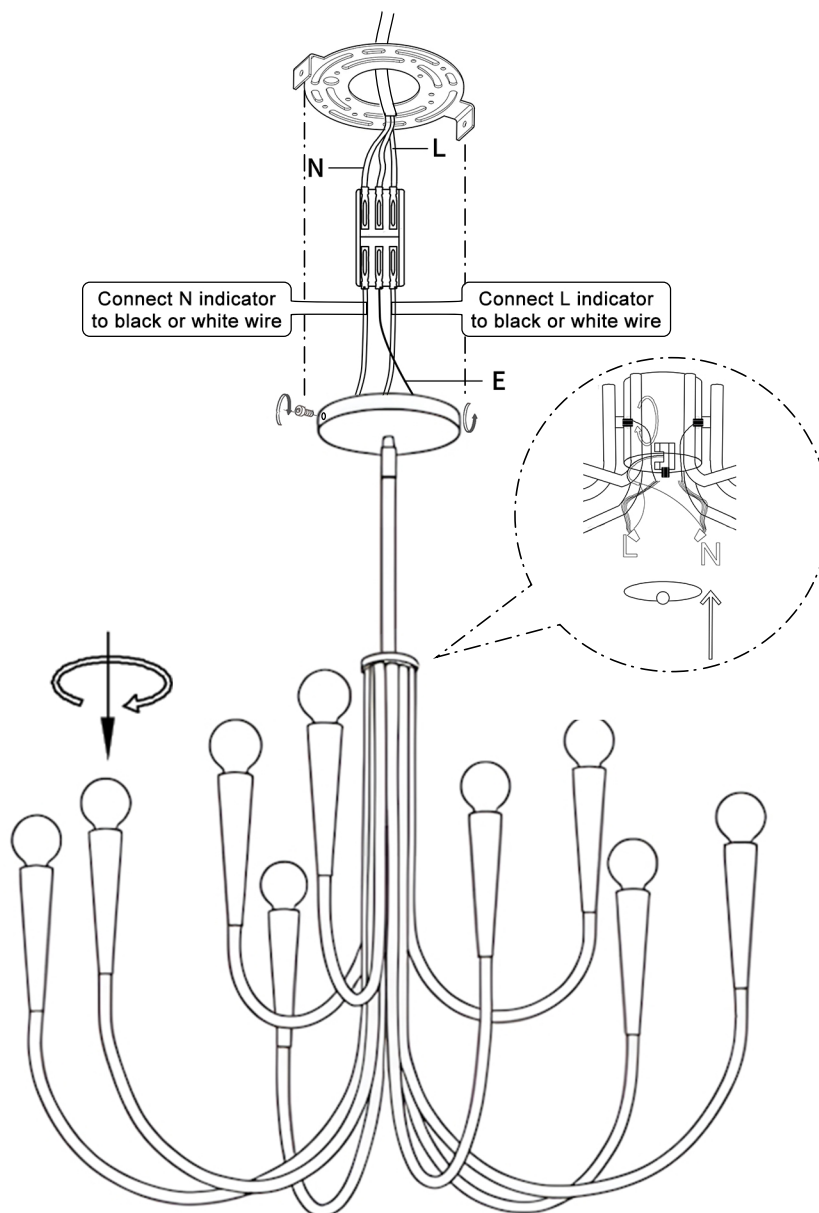

1. Pass the wires out of each arm through stem and attach arms to the distributor triangle plate with screws in the arms.
2. Screw the threaded tube into the stem and put a triangle cover on the distributor triangle plate and secure them with a threaded tube and finger nut.
3. Screw a down-rod into the outer thread tube and attach the canopy to the down-rod with another outer thread tube and nut.
4. Drill the mounting brackets into the ceiling box with screws.
5. Use the wire connector to connect wire of the light to the supply wires as indicated on the labels.
6. Attach the canopy to mounting bracket with screws.
7. Screw the bulbs into the socket of arms.