
## **INSTALLATION GUIDE - WM2563**

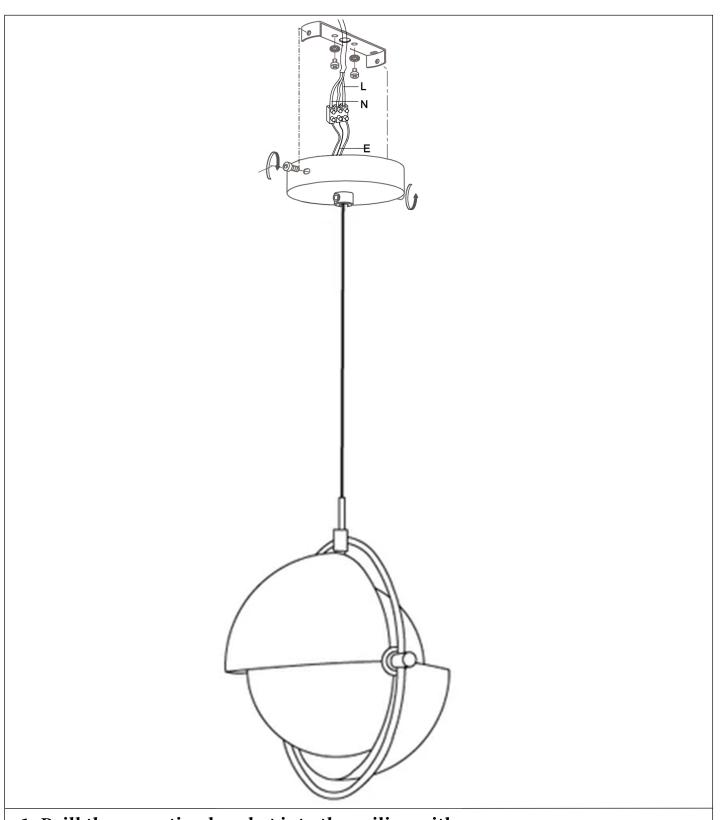

- 1. Drill the mounting bracket into the ceiling with screws.
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws.
- 4. Move the metal cover up, screw the provided bulb and the globe shade.

womolighting.com — contact@womolighting.com