


INSTALLATION GUIDE - WM2670

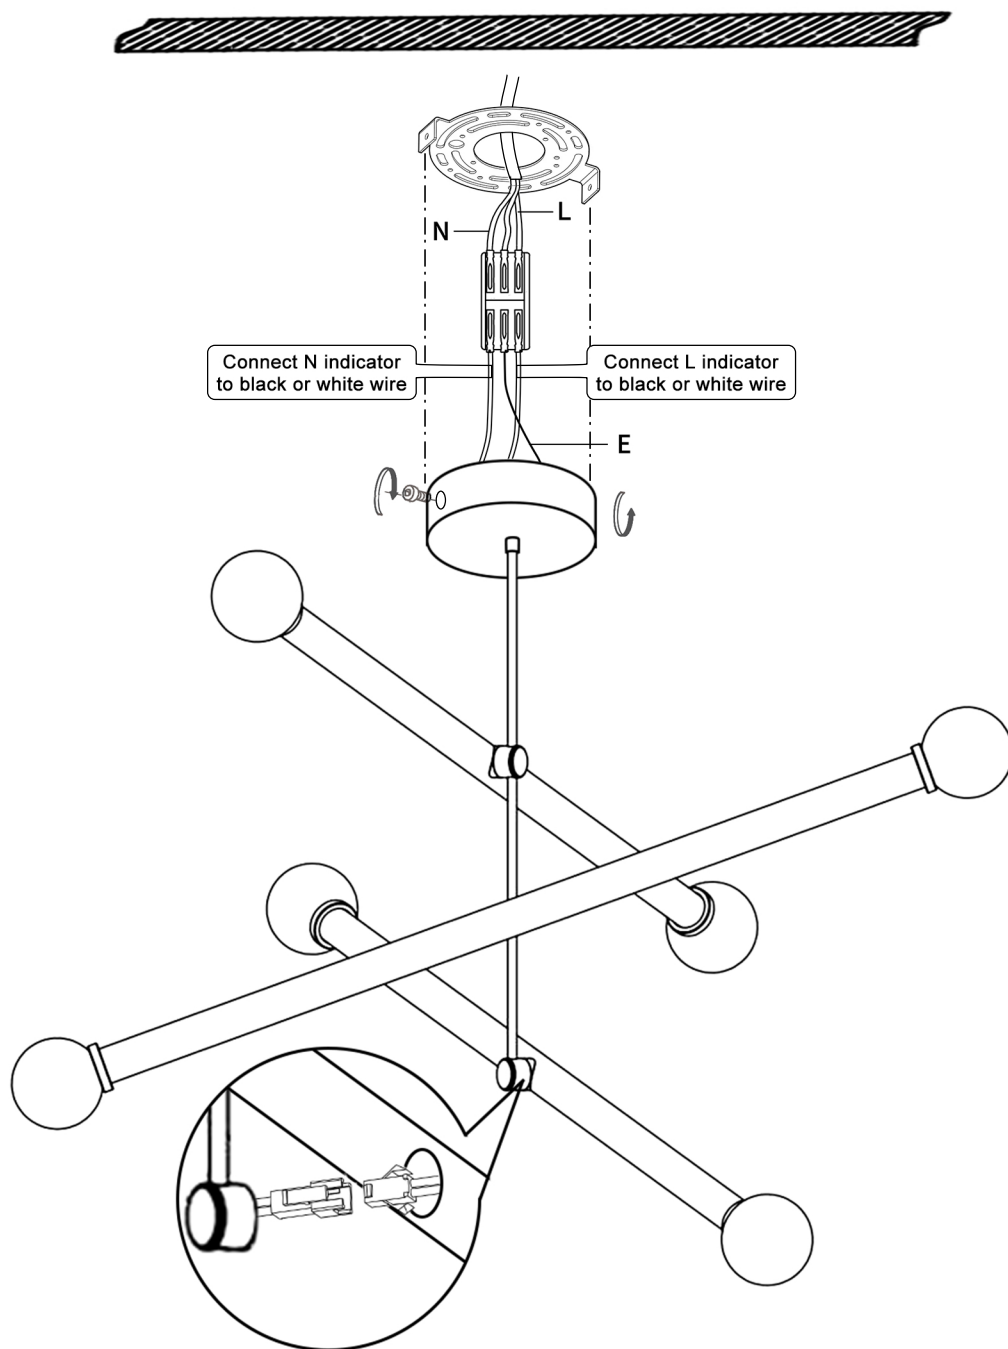

1. Put the booms together, connect the wire of each arm to ones of the boom and attach the arms to the boom with screws.
2. Drill the mounting brackets into the ceiling with screws and even anchors.
3. Use the wire connector to connect wires of the light to the supply wires as indicated on the labels.
4. Attach the canopy to mounting bracket with screws.
5. Screw the bulbs and globes into the arms.