
## **INSTALLATION GUIDE - WM2858**

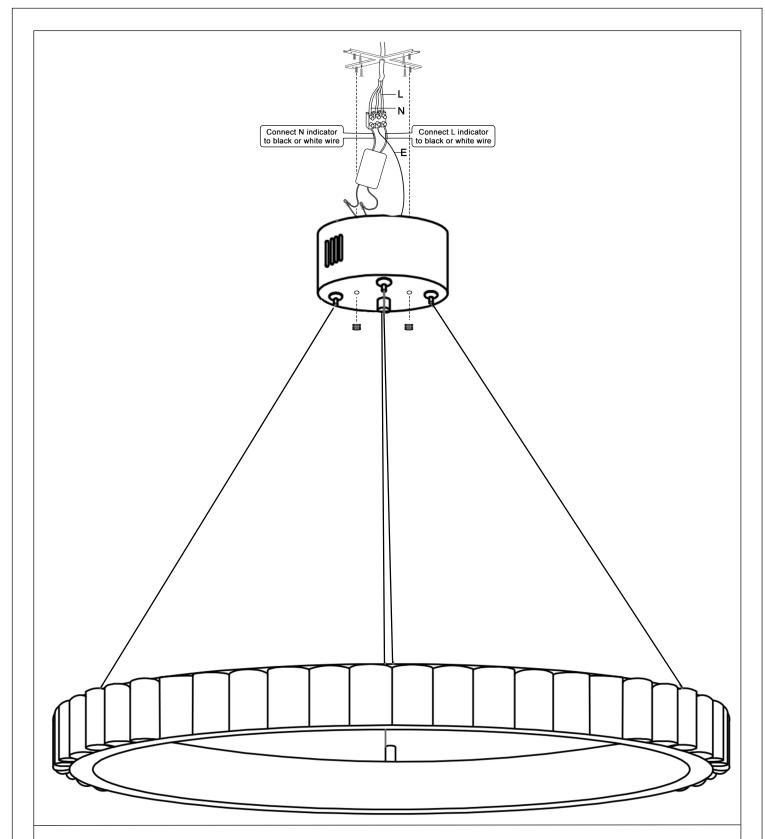

- 1. Drill the mounting brackets into the ceiling with screws and even anchors.
- 2. Use the wire connector to connect the drivers to the supply wires as indicated on the labels.
- 3. Attach the canopy to mounting bracket with screws.
- 4. Turn the power back on and flip on the light switch to test your light.

womolighting.com ——

contact@womolighting.com