



Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.




Product style diagram


Steps of installation

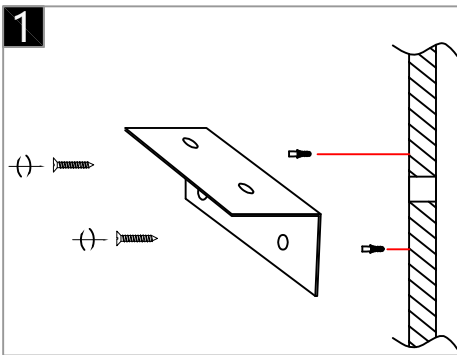


Attach the mounting plate to the wall with self-tapping screws

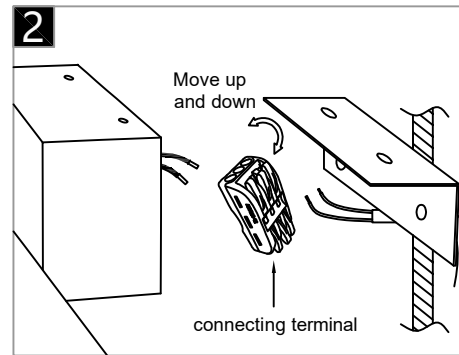

Connect the lamp and wall wire to the terminal, usually neutral wire (white), hair wire (black)

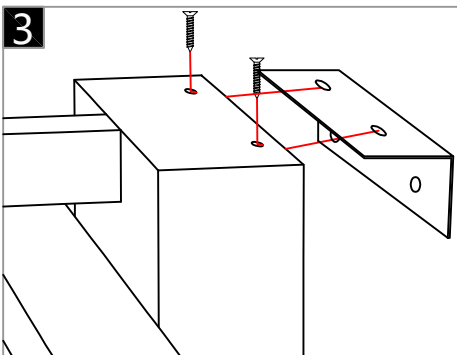

Align the holes on the top cover with the holes on the mounting plate, and then secure them with screws.

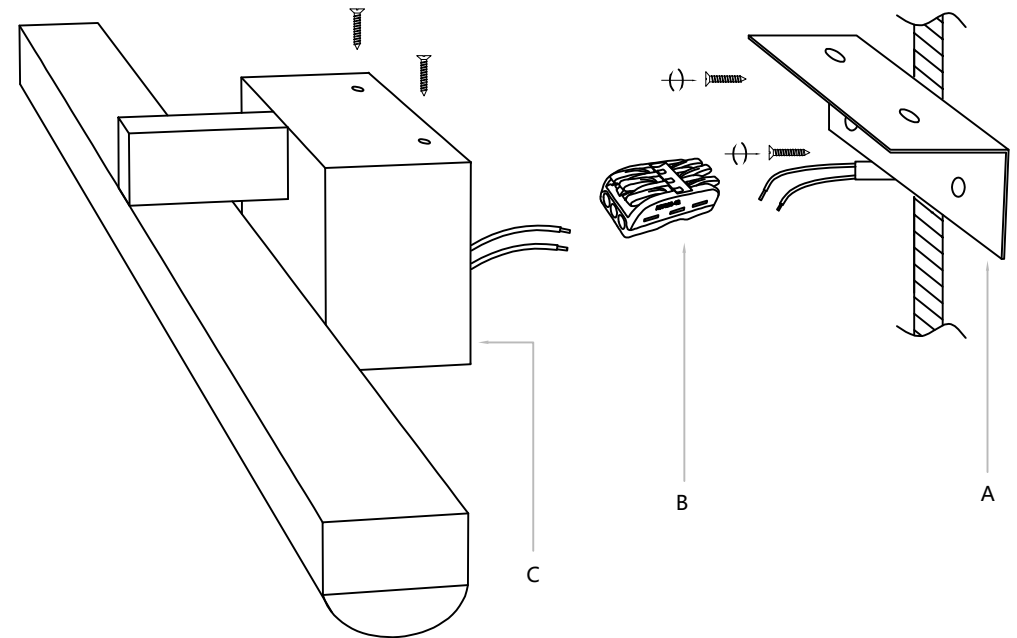

First, use self-tapping screws to fix the mounting plate (A) to the wall. Then, connect the reserved wires on the lamp body (C) with the reserved wires on the wall and the junction box (B). Finally, install the lamp body (C) onto the mounting plate (A).

Installation Instructions

WOMO Lighting

Model number: WM6016-B


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.




Product style diagram


Steps of installation

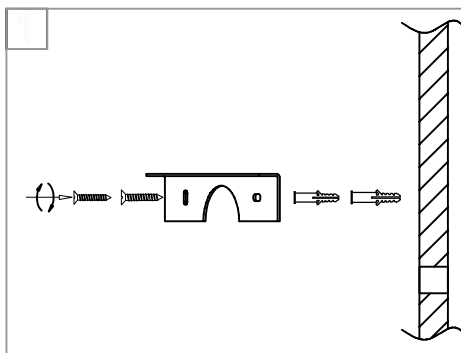


Remove the mounting plate and fix it to the wall.

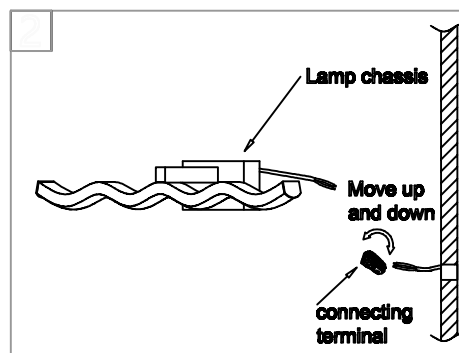

Use the terminal block to connect the wires of the lamp body to the wires on the wall.

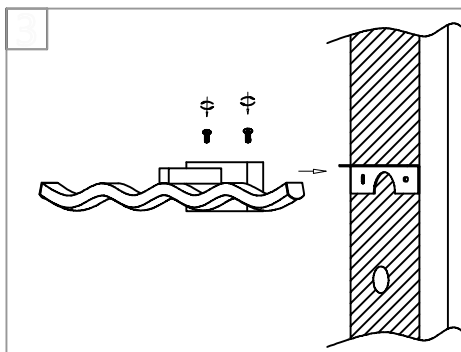

Align the holes of the lamp body with those of the mounting plate and tighten the screws.

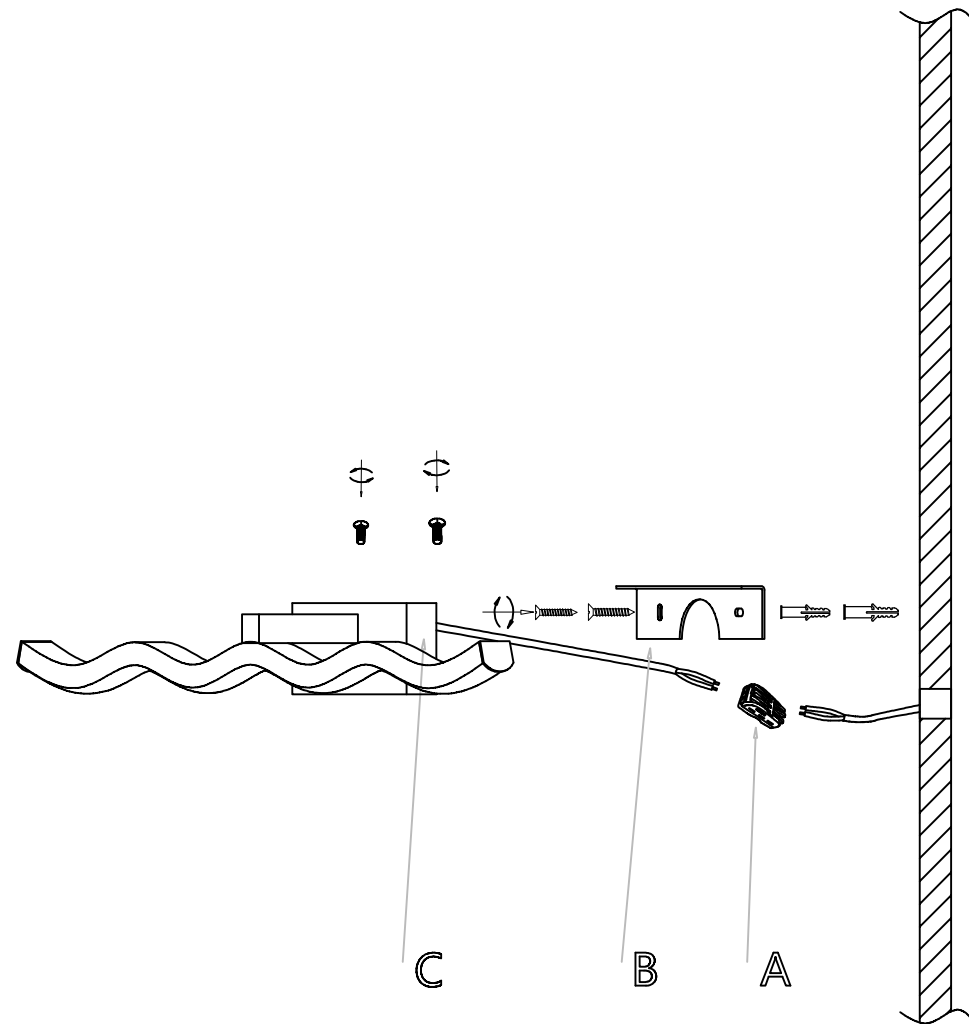

First, remove the mounting plate (B) and fix it to the wall. Next, use the terminal block (A) to connect the wires of the lamp body (C) to the wires on the wall. Then, align the holes of the lamp body (C) with those of the mounting plate (A) and tighten the screws.