


# INSTALLATION GUIDE - WM6031

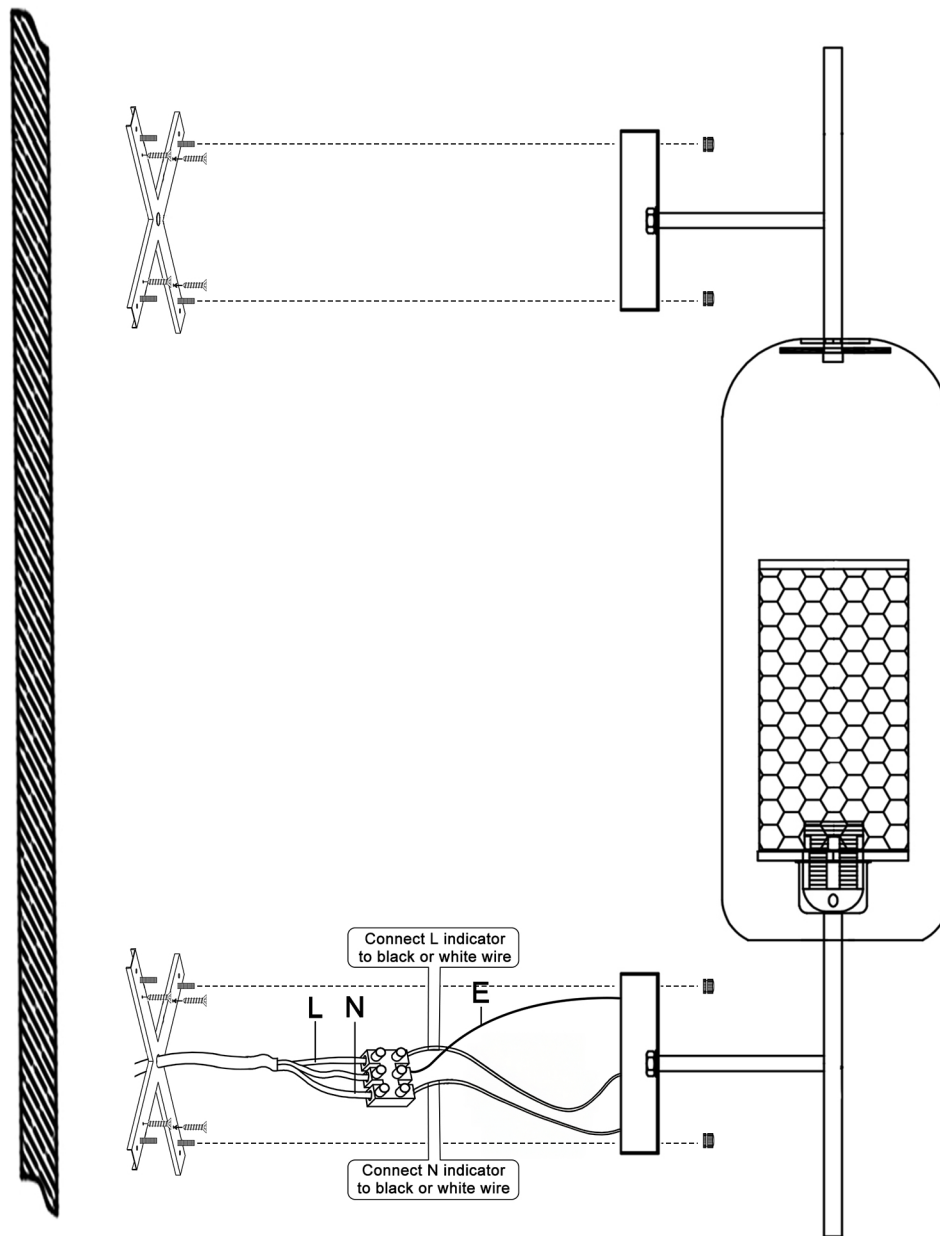

- 1. Drill the mounting brackets into the wall with screws and even anchors.**
- 2. Put the glass shade and metal support together with a triangle and nut.**
- 3. Attach the sconce and metal support to the bases with washers and finger nuts.**
- 4. Use the wire connector to connect wires of the light to the supply wires as indicated on the labels.**
- 5. Attach the base to mounting bracket with screws.**
- 6. Turn the power back on and flip on the light switch to test your light.**