


INSTALLATION GUIDE - WM6103

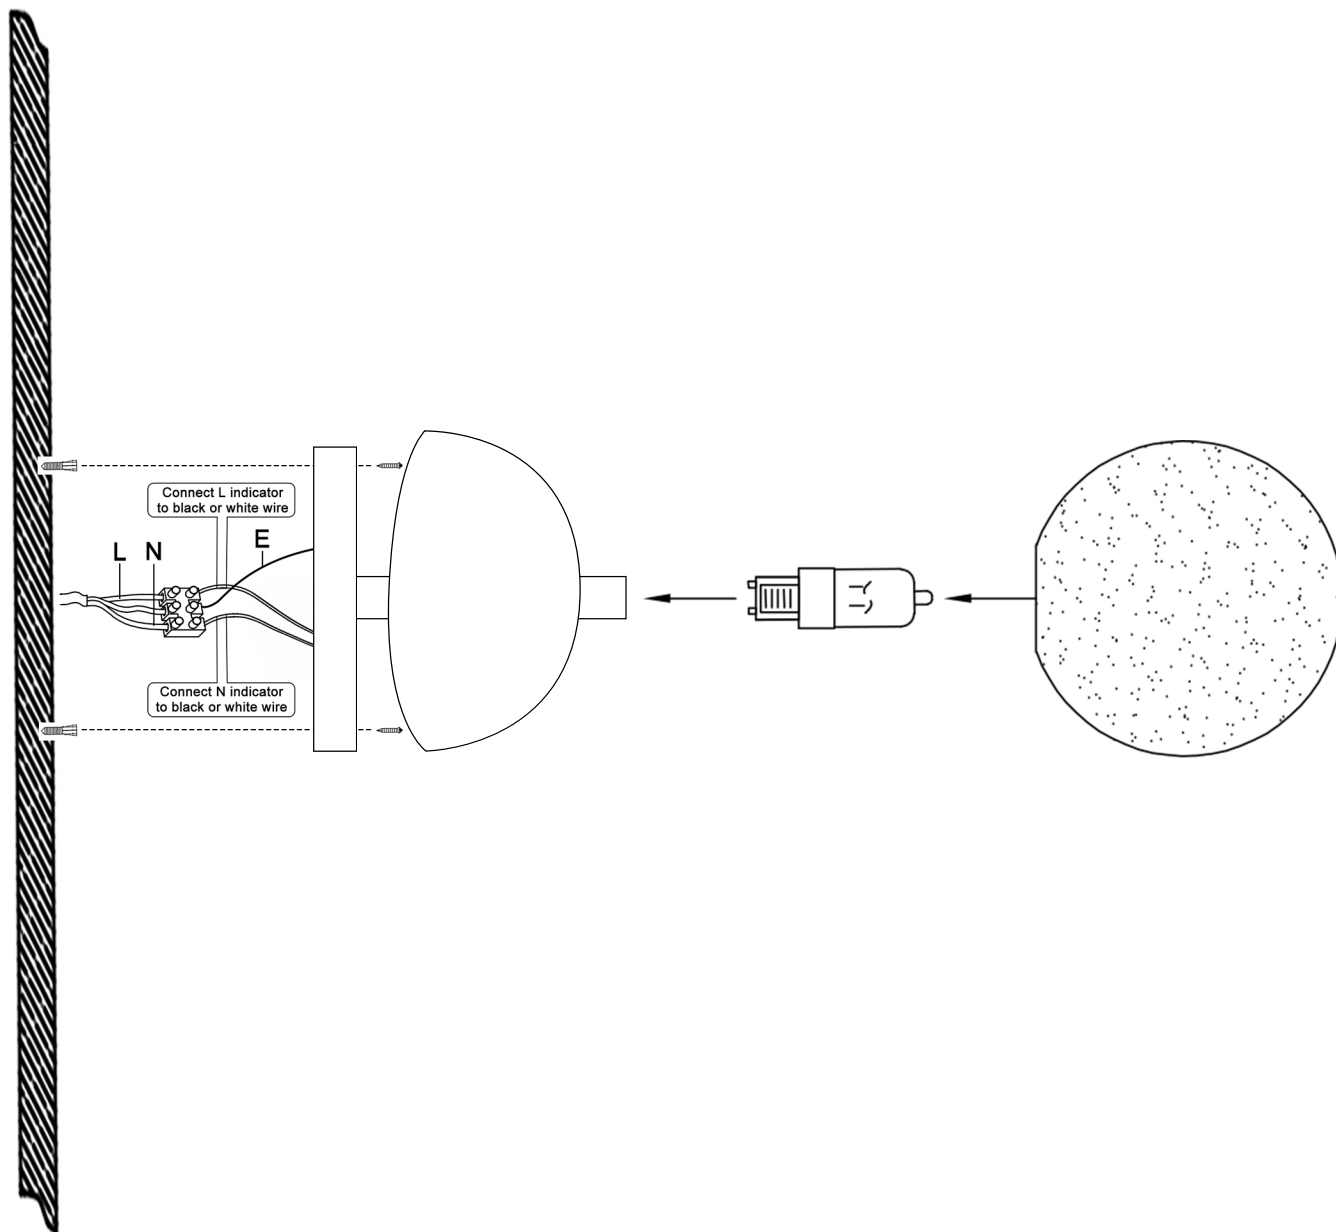

- 1. Drill the base into the wall with screws and even anchors.**
- 2. Use the wire connector to connect wires of the light to the supply wires as indicated on the labels.**
- 3. Attach the cover to the base with the nut removed from the base.**
- 4. Turn the glass globe down to the base and flip on the light switch to test your light.**