


# INSTALLATION GUIDE - WM7120

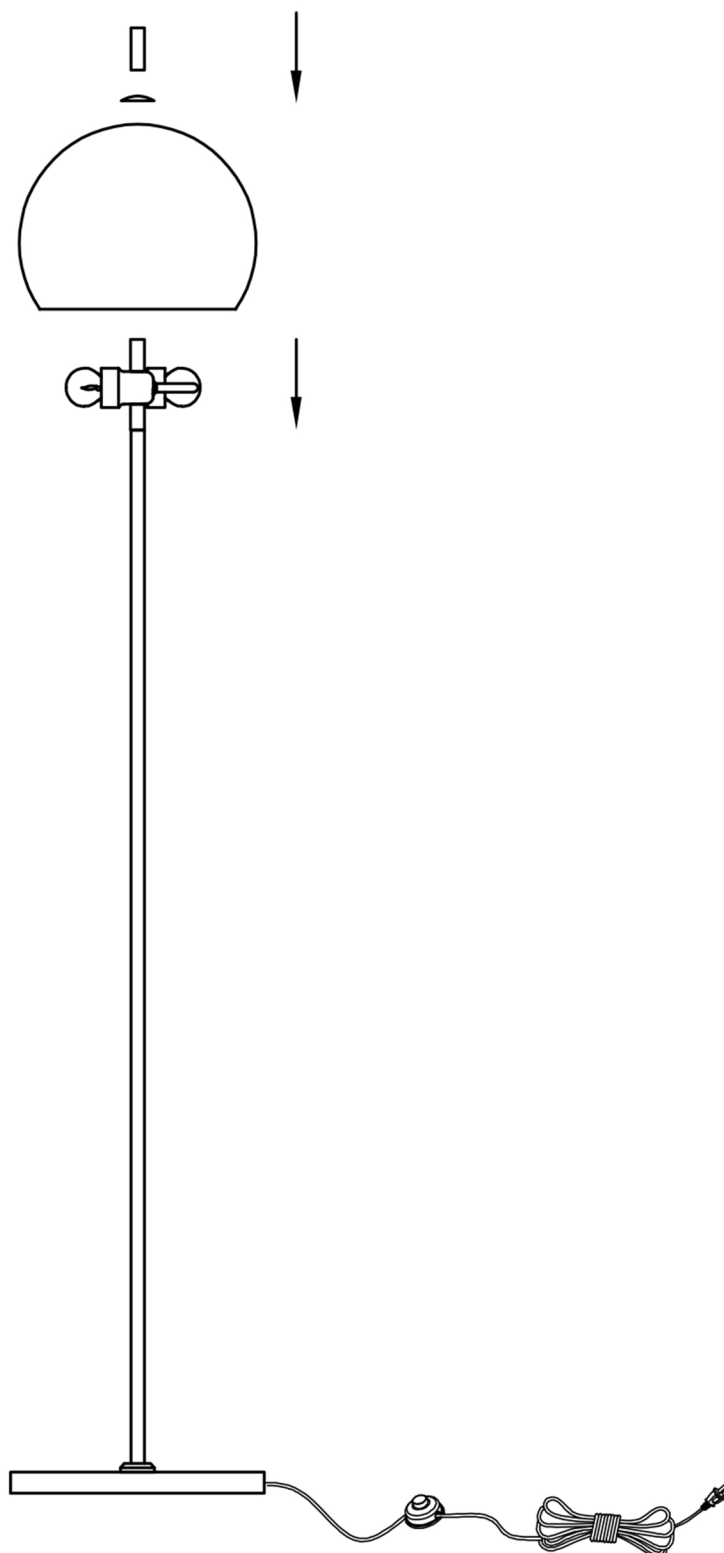

- 1. Pass the wire through the base and poles.**
- 2. Splice the poles and attach them to the base.**
- 3. Attach the glass shade to the bulb base with a dome washer, longer screw and nut.**
- 4. Screw the bulbs to the sockets.**