


INSTALLATION GUIDE - WM9181

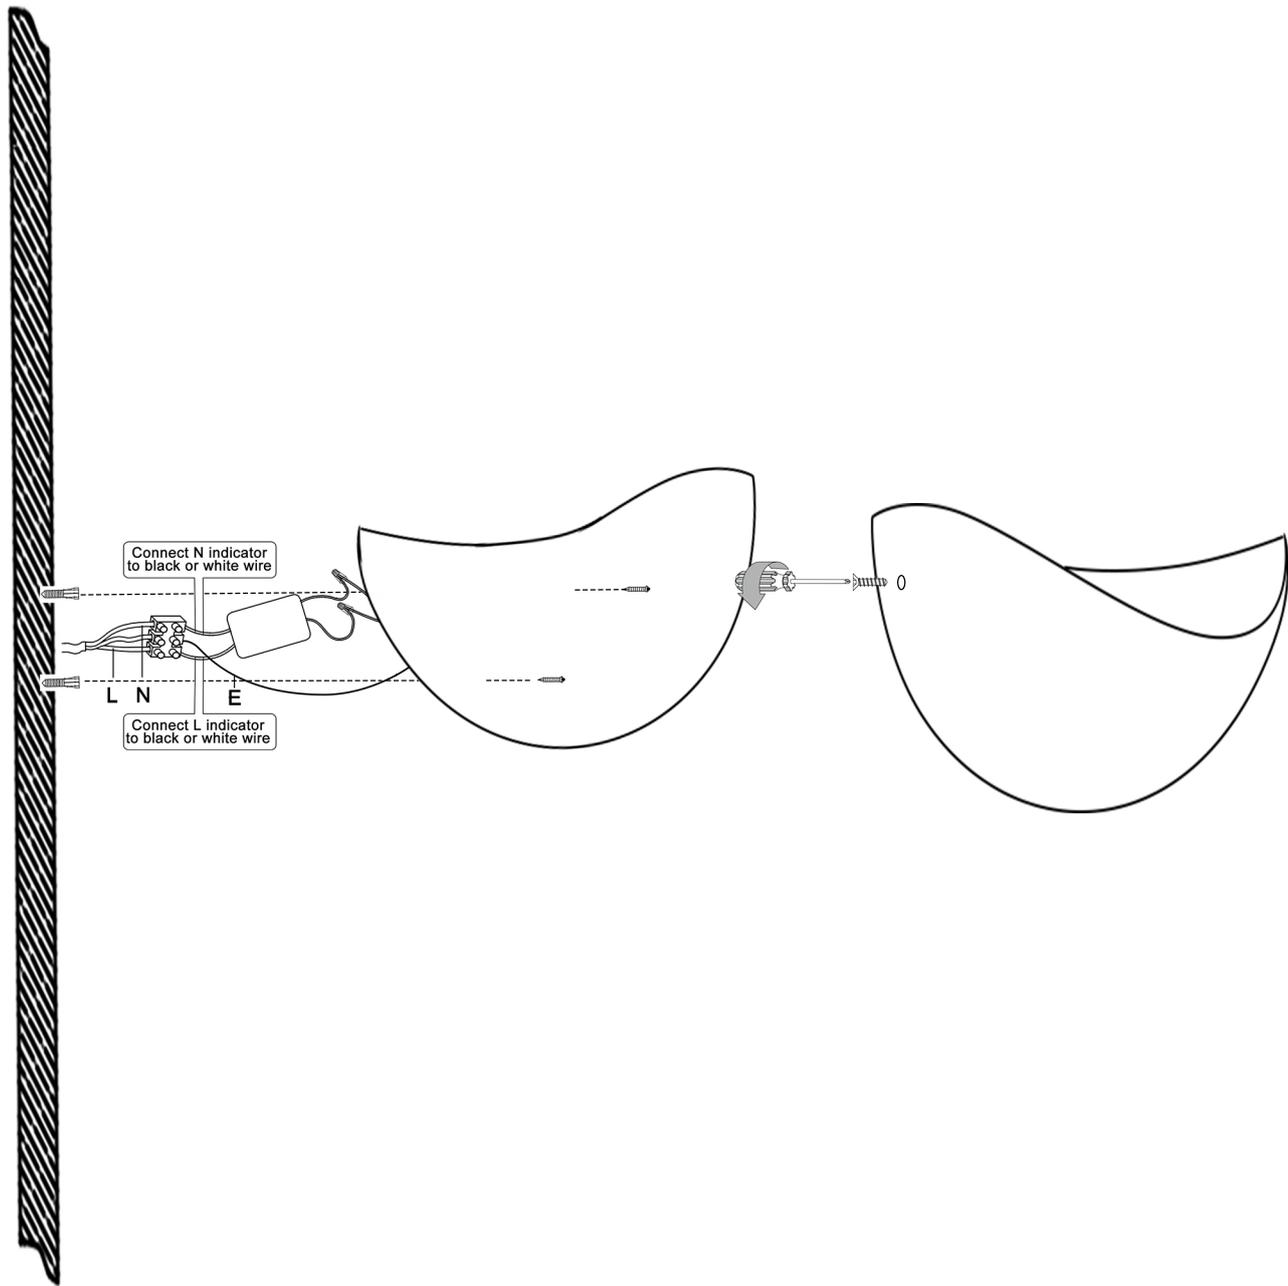

- 1. Take the base at bottom of the sconce down with provided allen wrench, and pass the wires through the base.**
- 2. Use the wire connector to connect the wires to the supply wires as indicated on the labels.**
- 3. Drill the base into the wall with screws and even anchors.**
- 4. Attach the sconce to the base.**